

Expert PDU Energy 8311 © 2021 GUDE Systems GmbH


2

Table of contents

1. De	vice Description	5
1.1	Security Advice	6
1.2	Content of Delivery	6
1.3	Description	6
1.4	Installation	7
1.5	Technical Specifications	8
1.5.1	Electrical Measurement	
1.6	Sensor	
2. Op	perating 1	2
2.1	Operating the device directly 1	
2.2	Control Panel	
2.3	Maintenance 1	
2.3.1	Maintenance Page	
2.3.2	Configuration Management	
2.3.3	Bootloader Activation 1	.9
3. Co	nfiguration 2	2
3.1	Ethernet	.3
3.1.1	IP Address2	.3
3.1.2	IP ACL	.5
3.1.3	HTTP 2	.6
3.2	Protocols2	.7
3.2.1	Console	.7
3.2.2	Syslog	8.
3.2.3	SNMP	8.
3.2.4	Radius 3	
3.2.5	Modbus TCP 3	
3.2.6	MQTT 3	
3.3	Clock 3	
3.3.1	NTP 3	
3.3.2	Timer 3	
3.3.3	Timer Configuration 3	
3.4	Sensors4	
3.5	E-Mail 4	2
3.6	Front Panel 4	3
4. Sp	ecifications 4	4
4.1	Automated Access4	5
4.2	Messages 4	5
4.3	IP ACL4	7

Table of contents

 4.4	IPv6	48
4.5	Radius	48
4.6	SNMP	49
4.6.1	Device MIB	51
4.7	SSL	53
4.8	Console	54
4.8.1	SSH	58
4.8.2	Cmd 8311	59
4.9	Modbus TCP	66
4.10	MQTT	71
4.10.1	Example HiveMQ	73
5. Sup	port	75
5.1	Data Security	76
5.2	Contact	76
5.3	Declaration of Conformity	77
5.4	FAQ	77
Index		79



1 Device Description

1.1 Security Advice

- The device must be installed only by qualified personnel according to the following installation and operating instructions.
- The manufacturer does not accept responsibility in case of improper use of the device and particularly any use of equipment that may cause personal injury or material damage.
- The device contains no user-maintenable parts. All maintenance has to be performed by factory trained service personnel.
- This device contains potentially hazardous voltages and should not be opened or disassembled.
- The device can be connected only to 230V AC (50 Hz or 60 Hz) power supply sockets.
- The power cords, plugs and sockets have to be in good condition. Always connect the device to properly grounded power sockets.
- The device is intended for indoor use only. Do NOT install them in an area where excessive moisture or heat is present.
- Because of safety and approval issues it is not allowed to modify the device without our permission.
- The device is NOT a toy. It has to be used or stored out of range of children.
- Care about packaging material. Plastics has to be stored out of range of children. Please recycle the packaging materials.
- In case of further questions, about installation, operation or usage of the device, which are not clear after reading the manual, please do not hesitate to ask our support team.
- Please, never leave connected equipment unattended, that can cause damage.
- Connect only electrical devices that do not have limited on-time. I.e. in case of failure, all connected appliances have to cope with a continuous on-time without causing damage.

1.2 Content of Delivery

The package includes:

- Expert PDU Energy 8311
- Quick Start Guide

1.3 Description


The **Expert PDU Energy 8311** multiple socket outlet with 7 load outputs. The device has the following features:

- Metering of energy, current, power factor, phase angle, frequency, voltage and active/apparent/reactive power
- Two energy meters, one meters continously, the other energy meter is resettable
- Measurement of residual current type A (model 8311-2).
- Illuminated two-line LCD display

Device Description

- Interface for optional sensors for environmental monitoring (temperature and humidity)
- Console commands via SSH and Telnet
- SSH support with public key and passwords
- Programmable timetables for console commands
- Dual TCP/IP stack with IPv4 and IPv6 support (IPv6-ready)
- Control and monitoring of the device via Ethernet with an integrated web server with SSL encryption (TLS 1.1, 1.2, 1.3)
- Configuration with CGI parameters and JSON messages via HTTP (REST API)
- SNMP (v1, v2c and v3, traps)
- MQTT 3.1.1 Support
- Modbus TCP support
- Radius support
- Generation of messages (e-mail, syslog and SNMP traps) depending on sensor measurement limits
- Firmware update during operation via Ethernet possible
- Encrypted e-mails (SSL, STARTTLS)
- · Access protection through IP access control
- Low own consumption
- · Developed and produced in Germany

1.4 Installation

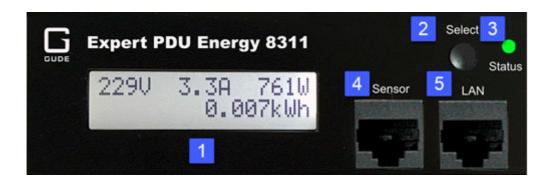

- 1. Illuminated two-line LCD display (16 x 2)
- 2. Button "Select"
- 3. Status LED
- 5. External sensor connector (RJ45)
- 6. Ethernet connector (RJ45)

Start-up the device

- Connect the power cord (CEE 7/4, max. 16 A) to the mains supply.
- Plug the network cable into the Ethernet connector (RJ45).
- Insert optional external sensor into the sensor connector.
- Connect the consumers to the protective sockets (CEE 7/3, max. 16 A).

1.5 Technical Specifications

Compostions	4 v Ethomat compaction (D 145)
Connections	1 x Ethernet connection (RJ45) 1 x RJ45 for external sensor1 x fixed Mains connection (CEE 7/7 protective contact type E+F, max. 16 A, 230V, cable length 2m)
Load outputs (PDU 8311-1 / 8311-2)	7 x load outputs (CEE 7/3 protective contact, max. 16 A)
Load outputs (PDU 8311-13 / 8311-14)	4 x load outputs (CEE 7/3 earthingcontact, max. 16 A) 16 x load outputs (IEC C13, max. 10 A)
Load outputs (PDU 8311-15 / 8311-16)	4 x load outputs (IEC C19, max. 10 A) 16 x load outputs (IEC C13, max. 10 A)
Network connection	10/100 MBit/s 10baseT Ethernet
Power supply	internal power supply (90-265V AC / -15% / +10%)
Environment Operating temperature Storage temperature Humidity	0 °C - 50 °C -20 °C - 70 °C 0% - 95% (non-condensing)
Housing	Aluminum / Plastic
Dimensions (PDU 8311-1 / 8311-2) (PDU8311-3 / 8311-4) (PDU8311-13 / 8311-14) (PDU8311-15 / 8311-16)	43.5 x 4.5 x 4.5 cm 43.5 x 4.5 x 4.5 cm 95 x 4.5 x 4.5 cm 95 x 4.5 x 4.5 cm
Weight (PDU 8311-1 / 8311-2) (PDU8311-3 / 8311-4) (PDU8311-13 / 8311-14) (PDU8311-15 / 8311-16)	approx. 1.1 kg approx. 1.1 kg approx. 1.7 kg approx. 1.7 kg

1.5.1 Electrical Measurement

typical fault tolerances for Ta=25°C, I=1Arms...16Arms, Un=90Vrms...265Vrms

Electrical Measurement Specification						
Category	Range	Unit	Resolu- tion	Inaccuracy (typical)		
Voltage	90-265	V	0.01	< 1%		
Current	0 - 16	Α	0.001	< 1.5%		
Frequency	45-65	Hz	0.01	< 0.03%		
Phase	-180 - +180	0	0.1	< 1%		
Active power	0 - 4000	W	1	< 1.5%		
Reactive power	0 - 4000	Var	1	< 1.5%		
Apparent power	0 - 4000	VA	1	< 1.5%		
Power factor	0 - 1	-	0.01	< 3%		
	Eı	nergy Co	unter			
Active Energy (total)	9.999.999,999	kWh	0.001	< 1.5%		
Active Energy (temporary)	9.999.999,999	kWh	0.001	< 1.5%		

1.6 Sensor

Two external sensors can be connected to the **Expert PDU Energy 8311**. The following sensors are currently available



Humidity/Temperature Sensor 7102 (End-of-Life)				
Cable length	≈ 2m			
Connector	RJ45			
temperature range	-20°C to +80°C, ±0,5°C (maximum) and ±0,3°C (typical)			
air humidity range (non-condensing))	0-100%, ±3% (maximum) and ±2% (typical)			

Device Description



7101 7104 - 7106

Product Name	7101	7104-1	7105-1	7106-1
Calibrated Sensor	-	7104-2	7105-2	7106-2
Cable length	≈ 2m	≈ 2m	≈ 2m	≈ 2m
Connector	RJ45	RJ45	RJ45	RJ45
temperature range	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)			
air humidity range (non-condensing)	-	-	0-100%, ±3% (maximum) and ±2% (typical)	0-100%, ±3% (maximum) and ±2% (typical)
air pressure range (full)	-	-	-	± 1 hPa (typical) at 300 1100 hPa, 0 +40 °C
air pressure range (ext)	-	-	-	± 1.7 hPa (typical) at 300 1100 hPa, -20 0 °C
Protection	IP68	-	-	-



7201, 7202

Product Name	7201	7202	
Cable length	-	-	
Connector	RJ45	RJ45	
temperature range	-20°C to +80°C at ±2°C (max- imum) and ±1°C (typical)	-20°C to +80°C at ±2°C (max- imum) and ±1°C (typical)	
air humidity range (non-condensing)	-	0-100%, ±3% (maximum) and ±2% (typical)	

Device Description


The sensors are automatically detected after connect. The sensor values are displayed at the Control Panel 9 web page:



A click on the link in the "Name" column opens the display of the Min and Max values. The values in a column can be reset using the "Reset" button. The "Reset" button in the name column deletes all stored Min and Max values.

ld	Name	Temperature °C	Humidity %	Dew Point °C	Dew Diff °C	Pressure hPa
1: 7106	7106 30m min 30m max	22.5 0.0 22.6	34.4 34.1 34.7	6.1 5.9 6.2	16.5 16.4 300.0	1013.8 125.0 1013.8
	Reset	Reset	Reset	Reset	Reset	Reset

 Expert PDU Energy 8311 © 2021 GUDE Systems GmbH



2.1 Operating the device directly



Status-LED

The Status LED shows the different states of the device:

- red: The device is not connected to the Ethernet.
- orange: The device is connected to the Ethernet and waits for data from the DHCP server.
- green: The device is connected to the Ethernet and the TCP/IP settings are allocated.
- periodic blinking: The device is in Bootloader mode.

Display indicators

By pressing the "select" button, various information and measured values can be displayed on the display. Each time you press the button, a new page appears on the LCD:

228V	0.0A	OW
	0.000	OkWh

The normal energy display. There, voltage, current and power are output in the upper line. The lower line shows the energy consumed. After 5 seconds of waiting time, all displays return to this view.

7:48:59	h:m:s
0.	000kWh

This shows the energy meter in the bottom line and the time interval in the upper line. The values are stored in the EEPROM every 5 minutes or every 0.1 kWh and are thus retained even during a power failure.

VRMS	225.3V
IRMS	0.000A

Voltage Current

Residual	AC	rms
	0.	0mA

Residual Current

Active	WO
Reactive	0VAR

Active Power Reactive Power

Apparent 0VA Phase -83.5deg Apparent Power Phase Angle

Freq 50.02Hz Powerfact -0.3

current Frequency Power Factor

PDU 8311 192.168.1.123

Product name IP address

PHY state 100mb fullduplex

PHY state

Firmware 1.0.0 MAC:001932003f09

Firmware version number MAC Ethernet address

2.2 Control Panel

Access the web interface: http://"IP-address" and log-in.



The web page provides an overview of the energy measurement values of all phases, as well as the external sensors, provided that they are connected.



The column "Residual Current" is only visible on models that support this feature.

2.3 Maintenance

The actual device generation with IPv6 and SSL allows all maintenance functions in the web interface to be carried out on the Maintenance Page 16.

Maintenance in the web interface

The following functions are available from the maintenance web page:

- Firmware Update
- Change the SSL certificate
- Load and save the configuration
- · Restart the device
- Factory Reset

14

- Jump into the Bootloader
- · Delete the DNS cache

Upload Firmware, Certificate or Configuration

On the Maintenance Page 16, select the required file with "Browse .." in the sections "Firmware Update", "SSL Certificate Upload" or "Config Import File Upload" and press "Upload". The file is now transferred to the update area of the device and the contents are checked. Only now, pressing the "Apply" button will permanently update the data, or abort with "Cancel".

Only one upload function can be initiated with a reboot, eg. you cannot transmit firmware and configuration at the same time.

If after a firmware update, the web page is not displayed correctly anymore, this may be related to the interaction of Javascript with an outdated browser cache. If a Ctrl-F5 does not help, it is recommended that you manually delete the cache in the browser options. Alternatively, you can test start the browser in "private mode".

During a firmware update, old data formats are sometimes converted to new structures. If an older firmware is newly installed, the configuration data and the energy meters may be lost! If the device then does not run correctly, please restore the factory settings (e.g. from the Maintenance Page 16).


Actions in Bootloader mode

If the web interface of the device is no longer accessible, the device can be put into Bootloader mode (see chapter Bootloader activation 19). The following functions can be executed using the GBL_Conf.exe application:

- Set IPv4 address, net-mask and gateway
- Turn HTTP password on and off
- Turn IP-ACL on and off
- Factory Reset
- Jump into the bootloader (can be switched on and off)
- · Restart the device

For devices with relays, entering or exiting the bootloader mode does not change the state of the relays as long as the operating voltage is maintained.

The GBL_Conf.exe program is available free of charge on our website www.gude.info and can also be found on the enclosed CD-ROM.

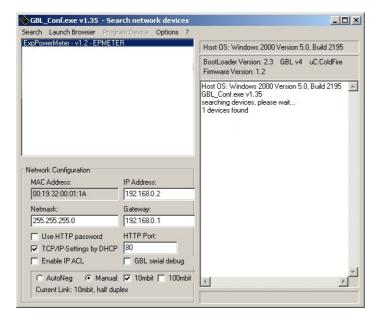

Interface GBL_Conf

To check the network settings with GBL_Conf.exe, start the program and choose "All Devices" in the "Search" menu. From the list select the appropriate device. The lower part of the left half of the window now shows the current network settings of the device. If the IP address is displayed with the default settings (192.168.0.2), either no DHCP server is present on the network, or there could be no free IP address assigned to it.

- Activate the Bootloader Mode (see Chapter Bootloader Mode) and choose in menu "Search" the item "Bootloader-Mode Devices only"
- Enter the desired settings in the edit window and save them with "Save Config".
- Deactivate the boot loader mode for the changes to take effect. Select again "All Devices" in the "Search" menu of GBL_Conf.exe.

The new network configuration is now displayed.


Factory Reset

The device can be reset to the factory default via the web interface from the Maintenance Page $\lceil 16 \rceil$ or from the Bootloader mode (see chapter Bootloader activation $\lceil 19 \rceil$). All TCP/IP settings are reset in this operation.

If a unit is set to factory defaults, an uploaded certificate or updated firmware will be preserved.

2.3.1 Maintenance Page

This section provides access to important functions such as Firmware Update or Restart Device. It is advisable to set an HTTP password for this reason.

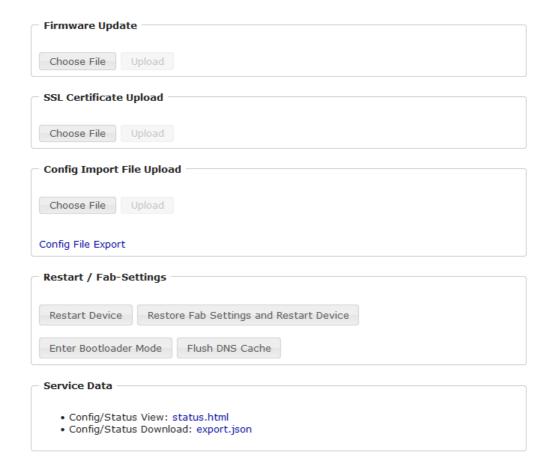

Firmware Update: Start a firmware update.

SSL Certificate Upload: Saves your own SSL certificate. See chapter "SSL 53" for the generation of a certificate in the right format.

<u>Config Import File Upload</u>: Loads a new configuration from a text file. To apply the new configuration, a "Restart Device" must be executed after the "Upload".

Config File Export: Saves the current configuration in a text file.

Saving the configuration should only be carried out in an SSL connection, since it contains sensitive password information (even if it is encrypted or hashed).

Restart Device: Restarts the device without changing the status of the relays.

Some functions such as a firmware update or changing of the IP-address and HTTP settings require a restart of the device. A jump to the boot loader or a restart of the device lead by no means to a change of the relay states.

Restore Fab Settings and Restart Device: Performs a restart and resets the device to factory default 20.

<u>Enter Bootloader Mode</u>: Jumps into bootloader mode, where additional settings can be made with GBL Conf.exe.


<u>Flush DNS Cache</u>: All entries in the DNS cache are discarded and address resolutions are requested again.

Config/Status View: status.html: Displays the status.html page with the JSON data.

Config/Status Download: <u>export.json</u>: Direct file download of JSON data from status.hml.

2.3.2 Configuration Management

The device configuration can be saved and restored in the maintenance area 16.

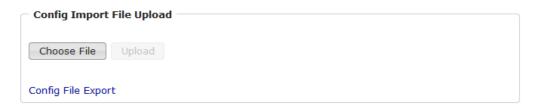

The "Config File Export" function can be used to save the current configuration as a text file. The syntax used in the configuration file corresponds to the commands of the Telnet console. If the configuration of a device is to be restored from a text file, load the file with "Upload" and restart the device with "Restart Device".

Saving the configuration should only be carried out in an SSL connection, since it contains sensitive password information (even if it is encrypted or hashed). For the same reasons, it is advisable to carefully handle the generated configuration files when archiving.

Editing the configuration file

It is possible to customize a saved configuration file with a text editor for your own needs. For example, one scenario would be to use a script language to automate the creation of many customized versions of a configuration, then equip a large number of devices with an individualized configuration. Also Upload and restart with CGI commands can be done in scripting languages. With use of the comment sign "#" you can quickly hide single commands or add personal notes.

If you modify a configuration file manually, it is not always clear which limits are allowed for parameters. After uploading and restarting, commands with invalid parameters are ignored. Therefore, the generated configuration includes comments describing the boundaries of the parameters. Where "range:" refers to a numeric value, and "len:" to a text parameter. E.g:

```
email auth set 0 #range: 0..2
email user set "" #len: 0..100
```

The command "system fabsettings" from the beginning of a generated configuration file brings the device into the factory state, and then executes the individual commands that modify the configuration state. It may be desirable to make the changes relative to the current configuration, and not out of the factory state. Then the "system fabsettings" should be removed.

No output of default values

The configuration file contains (with exceptions) only values which differ from the default. The command "system fabsettings" (go to the factory state) from the beginning of a generated configuration file should not be removed, otherwise the device can get incompletely configured.

Configuration via Telnet

The configuration files can in principle also be transferred in a Telnet session, but then the settings are changed during operation, and not completely when restarting, as it would have been the case with an upload. It can happen that events are triggered at the same time as the device is configured. One should therefore:

- a) disable the function
- b) completely parametrize
- c) reactivate the function

An example:

```
email enabled set 0
email sender set "" #len: 0..100
email recipient set "" #len: 0..100
email server set "" #len: 0..100
email port set 25
email security set 0 #range: 0..2
email auth set 0 #range: 0..2
email user set "" #len: 0..100
email passwd hash set "" #len: 0..100
email enabled set 1 #range: 0..1
```

2.3.3 Bootloader Activation

The configuration of the device from the application "GBL_Conf.exe" is only possible, if the device is in Bootloader Mode.

Activation of the Bootloader Mode (1-Button)

- 1) via push button:
- Press and hold the button for 3 seconds until the Status LED flashes slowly. If a display is available, "Press again to jump to BOOTLOADER" appears. Then briefly press the button again to activate the boot loader, or if you wait 3 seconds instead, the device returns to the initial state.
- 2) or
- · Remove the power supply
- Hold down the "Select" button. If the push button is recessed, use a pin or paper clip
- · Connect the operating voltage
- 3) by Software: (only if "Enable FW to BL" was previously activated in the "GBL_Conf.exe" application)
- Start the "GBL Conf.exe" program
- Do a network search with the "Search" menu action
- Activate in menu "Program Device" the item "Enter Bootloader"
- 4) via web interface:

Press "Enter Bootloader Mode" on the maintenance 16 web page.

Whether the device is in Bootloader mode, is indicated by the flashing of the status LED, or it is shown in "GBL_Conf.exe" application after a renewed device search (appendix "BOOT-LDR" after the device name). In Bootloader mode the program "GBL_Conf.exe" can disable the password and the IP ACL, perform a firmware update, and restore the factory settings.

For devices with relays, entering or exiting the bootloader mode does not change the state of the relays as long as the operating voltage is maintained.

Abandonment of the Bootloader Mode (1-Button)

- 1) via push button:
- Hold down the button for 3 seconds until the status LED flashes in a long-on, short-out rhythm. If a display is available, "Press again to jump to FIRMWARE" appears.
 Then briefly press the button again to activate the boot loader, or if you wait 6 seconds instead, the device returns to the initial state.

2) or

- Remove and connect the power supply without operating a button
- 3) by Software:
- Start the "GBL Conf.exe" application
- Do a network search with the "Search" menu action
- In menu "Program Device" activate the item "Enter Firmware"

For devices with relays, entering or exiting the bootloader mode does not change the state of the relays as long as the operating voltage is maintained.

Factory Reset (1-Button)

 
If the device is in bootloader mode, it can always be put back to its factory default. All TCP/IP settings are reset in this operation.

If a unit is set to factory defaults, an uploaded certificate or updated firmware will be preserved.

- 1) via push button:
- Activate the Bootloader Mode of the device
- Press and hold the button for 6 seconds. After the first 3 seconds, the status LED flashes in a long-on, short-out rhythm, and if a display is present, "Press again to jump to FIRMWARE" appears. Wait another 3 seconds, and the status LED flashes in a twice short, and once long rhythm. For devices with a display "Press again to FABSETTINGS" is shown. At this moment briefly press the button again to activate the factory reset, or if you wait 6 seconds instead, the device returns to the initial state.
- During reset to fabsetting, the status LED flashes rapidly, please wait until the LED flashes slowly (approx. 5 seconds).
- 2) by Software:
- Activate the Bootloader Mode of the device
- "Start the GBL_Conf.exe" program
- In menu "Program Device" activate the item "Reset to Fab Settings"

• The status LED will blink in a fast rhythm, please wait until the LED blinks slowly (about 5 seconds)

Expert PDU Energy 8311 © 2021 GUDE Systems GmbH



TCP/IP configuration by DHCP

After switching on the device is scanning on the Ethernet for a DHCP server and requests an unused IP address. Check the IP address that has been assigned and adjust if necessary, that the same IP address is used at each restart. To turn off DHCP use the software GBL Conf.exe or use the configuration via the web interface.

To check the network settings with GBL_Conf.exe, start the program and choose "All Devices" in the "Search" menu. From the list select the appropriate device. The lower part of the left half of the window now shows the current network settings of the device. If the IP address is displayed with the default settings (192.168.0.2), either no DHCP server is present on the network, or there could be no free IP address assigned to it.

3.1 Ethernet

3.1.1 IP Address

HTTP Server
10
131
5.0
1
1
1:1e:52
10
10
10

<u>Hostname</u>: Here you can enter a name with up to 63 characters. This name will be used for registration on the DHCP server.

Special characters and umlauts can cause problems in the network.

IPv4 Address: The IP address of the device.

IPv4 Netmask: The network mask used in the network.

IPv4 Gateway address: The IP address of the gateway.

IPv4 DNS address: The IP address of the DNS server.

<u>Use IPv4 DHCP</u>: Select "yes" if the TCP/IP settings should be obtained directly from the DHCP server: When the function is selected, each time the device powers up it is checked if a DHCP server is available on the network. If not, the last used TCP/IP setting will be used further.


Use IPv6 Protocol: Activates IPv6 usage.

<u>Use IPv6 Router Advertisement</u>: The Router Advertisement communicates with the router to make global IPv6 addresses available.

<u>Use DHCP v6</u>: Requests from an existing DHCPv6 server addresses of the configured DNS server.

Use manual IPv6 address settings: Activates the entry of manual IPv6 addresses.

<u>IPv6 status</u>: Displays the IPv6 addresses over which the device can be accessed, and additionally DNS and router addresses.

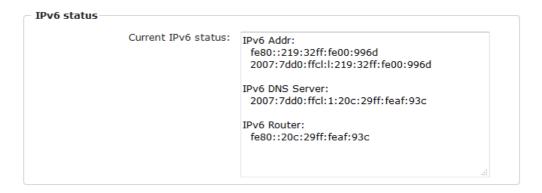


For IP changes a firmware reset is required. This can be done in the Maintenance web page. A restart of the device leads by no means to a change of the relay states.

Manual IPv6 Configuration

— IPv6 (manual) -			
	IPv6 Addresses:	2007:7dd0:ffc1:0:219:32ff:fe00:996d	/ 64
			/ 64
			/ 64
			/ 64
	IPv6 DNS addresses:	2007:7dd0:ffc1:0:20c:29fffeaf:93c	
IF	Pv6 Gateway address:	fe80::20c:29ff:feaf:93c	

The input fields for the manual setting of IPv6 addresses allow you to configure the prefix of four additional IPv6 device addresses, and to set two DNS addresses, and a gateway.

3.1.2 IP ACL

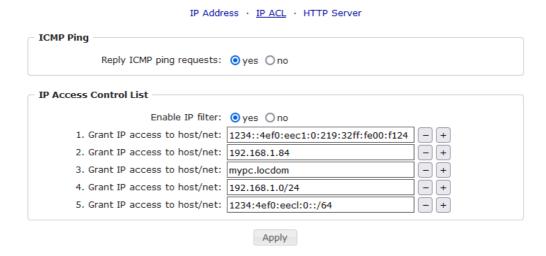

Reply ICMP ping requests: If you enable this feature, the device responds to ICMP pings from the network.

<u>Enable IP filter</u>: Enable or disable the IP filter here. The IP filter represents an access control for incoming IP packets.

Please note that when IP access control is enabled HTTP and SNMP only work if the appropriate servers and clients are registered in the IP access control list.

If you choose a wrong IP ACL setting and locked yourself out, please activate the Bootloader Mode and use GBL_Conf.exe to deactivate the IP ACL. Alternatively, you can reset the device to factory default.

Expert PDU Energy 8311 © 2021 GUDE Systems GmbH

- HTTP

3.1.3 HTTP

IP Address · IP ACL · HTTP Server

HTTP Server option:	HTTP + HTTPSHTTP redirects to HTTPSHTTPS onlyHTTP only
Server port HTTP: Server port HTTPS: Supported TLS versions: Enable Ajax autorefresh:	443 TLS v1.2 only
HTTP Password	
Enable password protection: Use radius server passwords: Use locally stored passwords:	O yes o no
Set new admin password: Repeat admin password:	` '
Set new <i>user</i> password: Repeat <i>user</i> password:	` '

HTTP Server option: Selects whether access is possible only with HTTP, HTTPS, or both

<u>Server port HTTP</u>: Here can be set the port number of the internal HTTP. Possible values are from 1 to 65534 (default: 80). If you do not use the default port, you must append the port number to the address with a colon to address the device from a web browser. Such as: "http://192.168.0.2:800"

<u>Server port HTTPS</u>; The port number to connect the web server via the SSL (TLS) protocol.

Supported TLS versions: Limits the supported TLS versions.

<u>Enable Ajax autorefresh</u>: If this is activated, the information of the status page is automatically updated via http request (AJAX).

For some HTTP configuration changes a firmware reset is required. This can be done in the Maintenance web page. A restart of the device leads by no means to a change of the relay states.

<u>Enable password protection</u>: Password access protection can be activated. If the admin password is assigned, you can only log in by entering this password to change settings. Users can log in by entering the user password in order to query the status information and initiate switching operations.

<u>Use radius server passwords</u>: Username and password are validated by a Radius Sever.

Use locally stored passwords: Username and password are stored locally. In this case, an admin password and a user password must be assigned. The password can have a maximum of 31 characters. The name "admin" and "user" are provided for the user name in the password entry mask of the browser. In factory settings, the password for the admin is set to "admin" or "user" for the user password.

🦊 If the password mask is redisplayed, only four "bullets" are shown as a symbolic placeholder, since for security reasons the device never stores the password itself, but only the SHA2-256 hash. If you want to change a password, the complete password must always be re-entered.

Console · Syslog · SNMP · Radius · Modbus · MQTT

🧚 If you have forgotten your password, please activate the bootloader mode and then turn off the password prompt in GBL Conf.exe.

3.2 **Protocols**

3.2.1 Console

TCP/IP Console Telnet TCP port: 23 Raw mode: Oyes ono Active negotiation: Oyes ono Activate echo: Oyes Ono Push messages: Oyes ono Delay after 3 failed logins: Oyes ono Enable SSH: yes no SSH TCP port: 22 Activate echo: oyes ono Push messages: Oyes ono Require user login (Telnet/SSH): Oyes Ono Use radius server passwords: Oyes ono Use locally stored passwords: Oyes Ono Username: telnet Set new password: | •••• (32 characters max) Repeat password: •••• Upload new SSH public key:

Enable Telnet: Enables Telnet console.

Telnet TCP port: Telnet sessions are accepted on this port.

Raw mode: The VT100 editing and the IAC protocol are disabled.

Activate echo: The echo setting if not changed by IAC.

Active negotiation: The IAC negotiation is initiated by the server.

Require user login: Username and password are required.

<u>Delay after 3 failed logins</u>: After 3 wrong entries of username or password, the next login attempt is delayed.

<u>Use radius server passwords</u>: Username and password are validated by a Radius Sever.

Use locally stored passwords: Username and password are stored locally

3.2.2 Syslog



Enable Syslog: Enables the usage of Syslog Messages.

<u>Syslog Server</u>: If you have enabled Syslog Messages, enter the IP address of the server to which the syslog information should be transmitted.

3.2.3 **SNMP**

Console · Syslog	· <u>SNMP</u> · Radius · Modb	us · MQTT
SNMP —		
Enable SNMP options:	✓ SNMP get ✓ SNMP set	
SNMP UDP port:	161	
sysContact:	sysContact	
sysName:	sysName	
sysLocation:	sysLocation	
SNMP v2		
Enable SNMP v2:	⊙ yes ○ no	
SNMP v2 public Community:		(16 char. max)
SNMP v2 private Community:	private	(16 char. max)
Enable SNMP v3:		¬
SNMP v3 Username:	standard	(32 char. max)
SNMP v3 Authorization Algorithm:	SHA2-256 V	
Set new Authorization password:	3)	3 char. min, 32 char. max)
Repeat <i>Authorization</i> password:		
SNMP v3 Privacy Algorithm:	AES-128 v	
Set new Privacy password:	(8)	3 char. min, 32 char. max)
Repeat Privacy password:		
SNMP Traps		
Send SNMP Traps:	SNMP v3 Traps v	
SNMP trap receiver 1 :		-+

<u>SNMP-get</u>: Enables the acceptance of SNMP-GET commands.

<u>SNMP-set</u>: Allows the reception of SNMP-SET commands.

SNMP UDP Port: Sets the UDP port where SNMP messages are received.

sysContact: Value of RFC 1213 sysContact.

sysName: Value of RFC 1213 sysName.

sysLocation: Value of RFC 1213 sysLocation.

Enable SNMP v2: Activates SNMP v2.

Because of security issues, it is advisable to use only SNMP v3, and to disable SNMP v2. Accesses to SNMP v2 are always insecure.

Community public: The community password for SNMP GET requests.

<u>Community private</u>: The community password for SNMP SET requests.

Enable SNMP v3: Activates SNMP v3.

SNMP v3 Username: The SNMP v3 User Name.

SNMP v3 Authorization Algorithm: The selected Authentication Algorithm.

SNMP v3 Privacy Algorithm: SNMP v3 Encryption Algorithm..

If the password mask is redisplayed, only four "bullets" are shown as a symbolic placeholder, since for security reasons the device never stores the password itself, but only the key formed using the Authorization Algorithm. If you want to change a password, the complete password must always be re-entered.

The calculation of the password hashes varies with the selected algorithms. If the Authentication or Privacy algorithms are changed, the passwords must be re-entered in the configuration dialog. "SHA-384" and "SHA512" are calculated purely in software. If "SHA-512" is set on the configuration page, the time for the key generation may take once up to approx. 45 seconds.

<u>Send SNMP traps</u>: Here you can specify whether, and in what format the device should send SNMP traps.

SNMP trap receiver: You can insert here up to eight SNMP trap receiver.

MIB table: The download link to the text file with the MIB table for the device.

More information about SNMP settings are available from our support or can be found on the Internet at www.gude.info/wiki.

3.2.4 Radius

Radius Enable Radius Client: yes no Authentication Protocol: OPAP OCHAP Use Message Authentication: ves O no Default Session Timeout: | 1800 Primary Server: Set new shared secret: | •••• Repeat new shared secret: | •••• Timeout: 5 Retries: 3 Use backup server: Oyes Ono Backup Server: Set new shared secret: Repeat new shared secret: | •••• Timeout: 5 Retries: 3

Console · Syslog · SNMP · <u>Radius</u> · Modbus · MQTT

Enable Radius Client: Enables validation over Radius.

Expert PDU Energy 8311 © 2021 GUDE Systems GmbH

Use CHAP: Use CHAP password encoding.

<u>Use Message Authentication</u>: Adds the "Message Authentication" attribute to the Authentication Request.

Primary Server: Name or IP address of the Primary Radius server.

<u>Shared secret</u>: Radius Shared Secret. For compatibility reasons, only use ASCII characters.

<u>Timeout</u>: How long (in seconds) will be waited for a response from an Authentication Request.

Retries: How often an authentication request is repeated after a timeout.

Use Backup Server: Activates a Radius Backup server.

Backup Server: Name or IP address of the Radius Backup server.

<u>Shared secret</u>: Radius Shared Secret. For compatibility reasons, only use ASCII characters.

<u>Timeout</u>: How long (in seconds) will be waited for a response from an Authentication Request.

Retries: How often an authentication request is repeated after a timeout.

Test Radius Server	
Test Username:	
Test Password:	
Test Radius Server	

Test Username: Username input field for Radius test.

<u>Test Password</u>: Password input field for Radius test.

The "Test Radius Server" function allows you to check whether a combination of Username and Password is accepted by the configured Radius Servers.

3.2.5 Modbus TCP

Enable Modbus TCP: Enables Modbus TCP support.

Modus TCP port: The TCP/IP port number for Modbus TCP.

3.2.6 MQTT



Enable MQTT: Enables MQTT support.

Broker: DNS or IP address of the MQTT broker.

TLS: Turns on TLS encryption.

Mode TCP port: The TCP/IP port number of the broker.

Username: The MQTT username.

password: The password for the username.

Client ID: The MQTT client ID.

The client IDs of a user must be different! If two clients of a user have the same name, the connection of one client is normally terminated.

Quality of Service (QoS): Sets the QoS value (0 or 1) of the MQTT publishes.

<u>Keep-alive ping interval</u>: This defines the time interval in which the client sends an MQTT ping.

<u>Topic prefix</u>: Defines the beginning of the topic with which all messages are sent. The strings **[mac]** and **[host]** symbolize the MAC address or the hostname of the device.

Permit CLI commands: Enables the execution of console commands.

<u>Publish device data summary</u> interval: Time interval in which messages with the global status of the device are sent.




MQTT Logs: Outputs individual log messages about the connection setup.

<u>MQTT Broker Status</u>: Time information about connection duration, the last publish and the last keep-alive.

3.3 Clock

3.3.1 NTP

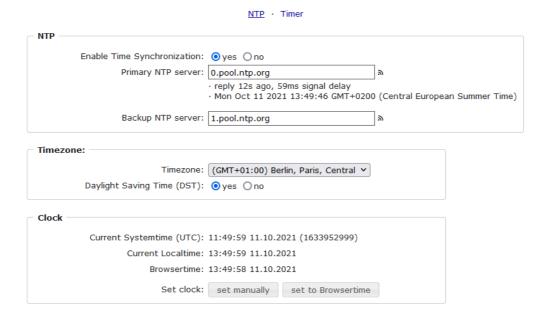

33

Enable Time Synchronization: Enables the NTP protocol.

Primary NTP server: IP address of the first NTP server.

<u>Backup NTP server</u>: IP address of the second NTP server. Used when the first NTP server does not respond.

Timezone: The set time zone for the local time.

<u>Daylight Saving Time</u>: If enabled, the local time is converted to Central European Summer Time.

set manually: The user can set a time manually.

set to Browsertime: Sets the time corresponding to web browser.

If Time synchronization is enabled, a manual time will be overwritten at the next NTP synchronization.

3.3.2 **Timer**

Timer - Basic Settings	
Enable Timer: • yes O no Syslog verbosity level: normal •	
_ Timer - Rules	
Tillel - Kules	
New Rule: simple Timer	

Enable Timer: nables or disables all timers globally.

Syslog verbosity level: Sets the verbosity level for timer syslog output.

New Rule simple Timer: Shows a dialog for a simple timer rule.

New Rule advanced Timer: Brings up the dialog for advanced timer settings.


3.3.3 Timer Configuration

In the timer configuration you have three options: Create a simple timer, add a complex timer, or change an existing configuration.

Timer rules are only executed if the device has a valid time. See configuration NTP 33.


This instruction chapter applies to all Gude devices. For devices without switchable ports you can only create a complex timer. For an action there is only the register "Ac-

tion CLI" available, and not the register "Action PortSwitch".

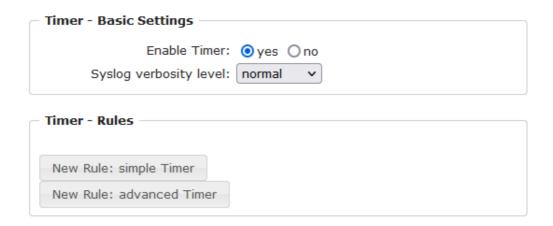


Creating a simple timer

If you activate "New Rule: simple Timer" the following dialog is displayed:

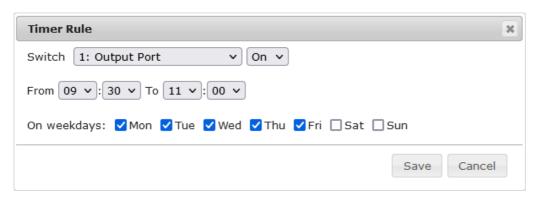


You set here which port should be switched for which time period, and on which days of the week the rule is active. In this example the period 9:00 to 17:00 is changed to 9:30 to 11:00 compared to the default input mask. Also, this rule should not be applied on Saturday and Sunday. The rule we have now says that every day, except Saturday and Sunday, port 1 will be switched on at 9:30 and switched off after 1.5 hours. Clicking on "Save" saves this rule.

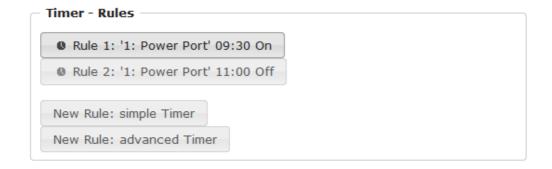

We have now created 2 rules, one for when the port is turned on and the second for when it is turned off.


Creating a complex timer

If you create a complex timer or change an existing timer, you will always see an extended dialog:

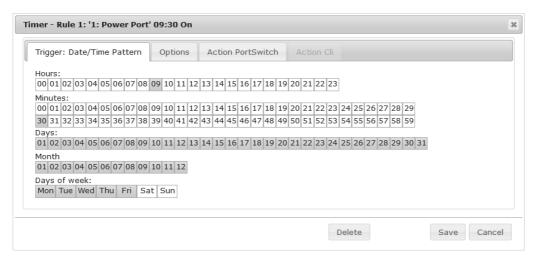


You can see here the extended representation of the first rule of the simple timer from the previous example. The action is started every day of every month at 9:30. The weekdays Saturday and Sunday are excluded. An existing rule can be removed with the "Delete" button.

If a rule is deleted, the following rules move up. The numbering of the following rules also changes by one. This also applies to the index in the console commands.

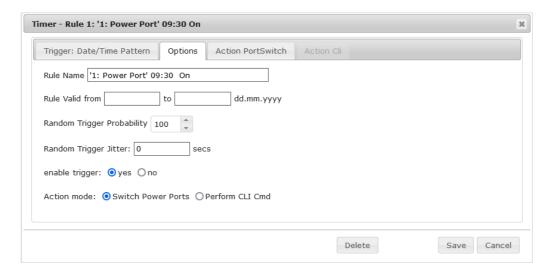

A simple timer is "enabled" directly, a new complex timer has to be "enabled trigger" manually. You can set a probability and a jitter for the timer rules. Here the rule is executed with 100% probability. A jitter of 0 means that the action takes place exactly at the programmed time. As normal action mode ports are switched, alternatively a console command (CLI Cmd) can be executed.

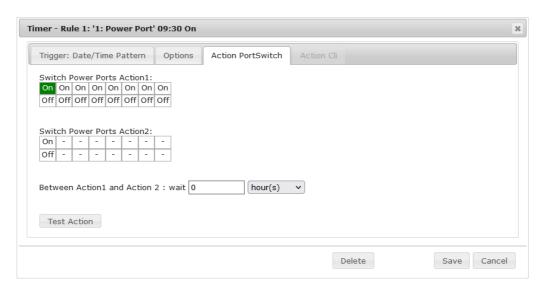


The switching function can be set in more detail on the "Action PortSwitch" register. Port 1 is switched on. You could extend the rule and switch more ports on or off. Additionally you can set a time for a batchmode in the field after "Between Action1 and Action 2: wait", which starts "Action 2" after expired time. However, the batch mode has the disadvantage that it is not automatically restarted when the device is rebooted. Also, the port is locked against manual operation on the web page as long as the batch mode is running.

🇱 The "Action PortSwitch" function is only available for devices with switchable ports.

Extending a rule

For demonstration purposes, here is an extension to the simple timer from the previous example:

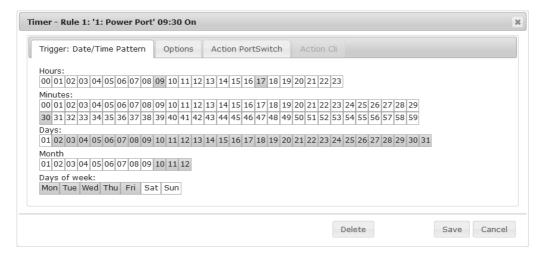


The action is now started not only at 9:30, but also at 17:30 There are other changes: The timer is only active between October and December, also the action does not take place on the first day of a month.


Since all fields in the mask are always considered, it is not possible to define the times 9:30 and 17:10 in a single timer rule. You need a second rule for this. If you set the hours 9 and 17, as well as the minutes 10 and 30, then the four times 9:10, 9:30, 17:10 and 17:30 would be programmed.

Configuration

🦊 To change a field in this input mask without changing the state of the other fields, the Ctrl key must be pressed during the mouse click.

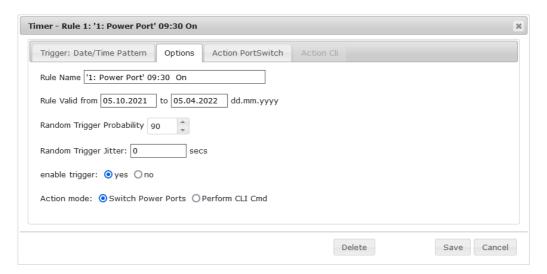


For this rule, on the "Options" tab, the time period is limited to the range between 5.10.2021 and 5.4.2022. In this example, the timer rule is only executed with a probability (Random Trigger Probability) of 90%.

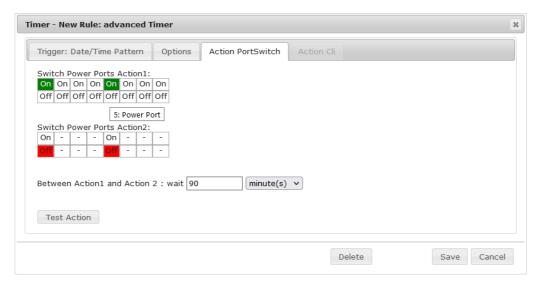

In this example, port 1 and port 5 are enabled and disabled after 90 minutes by batch mode.

🦊 A popup on the mouse pointer shows the port number of the field.


Console Commands

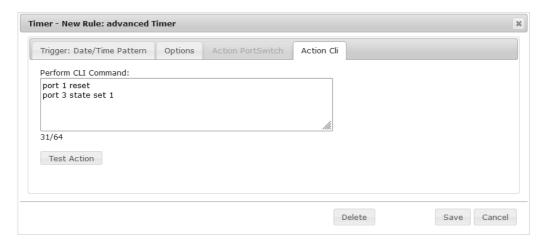


Instead of switching a port, one or more console commands can be executed. These commands are entered in the "Action CLI" register. The "Action Cli" tab can only be selected if the option "Perform CLI Cmd" is activated in "Options".

Example Switching a Port on a Date

If you want to switch on a timer on a certain date at a certain time and switch it off at a later time, you cannot do it directly with a simple timer. Therefore it can be useful to create the timer as a simple timer first, and then customize it in the advanced dialog.

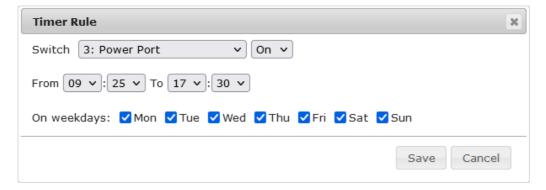


Switch port 3 on every day at 9:25, and off again at 17:30. You save.

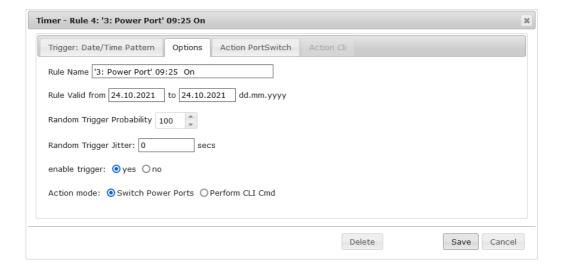

Configuration

Then call up the two timer rules you created ("On" and "Off") and enter the date on which the switching operation is to take place in the "Options" tab.

Example blind control

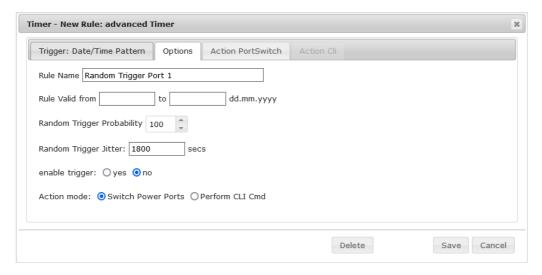

You can use the jitter e.g. for a shutter control. In the classic example of a shutter control, you do not always want to raise and lower the shutters at the same time in order to confuse potential burglars. The jitter of 1800 seconds means that the action is executed randomly in a period between 30 minutes before and 30 minutes after the programmed time. The probability (Random Trigger Probability) of execution here is 100%.

Further examples can be found at www.gude.info/wiki/timer

3.4 Sensors

Sensors Config	
Sensor:	1: 7106 - 7106 🔍
Sensor Name:	7106
Select Sensor Field:	Temperature (°C) ∨
Enable ' Temperature' Messages:	● yes ○ no
Maximum value:	30.0 °C
Minimum value:	10.0 °C
Hysteresis:	0.1 °C
Message channels:	Syslog SNMP Email Console
	☐ Beeper: Beeper mode : continous ∨
	☐ Flashing display
Console push-messages:	every time interval of \vee 10 seconds
Misc sensor options	
Min/Max measurement period:	24 Hours V
Enable beeper for AC alarms:	● yes ○ no
Enable beeper for sensor alarms:	● yes ○ no
	Apply

<u>Sensor</u>: Selects a type of sensor to configure it. The first digit "1" indicates the number of the sensor port (only important for devices with more than one sensor port). This is followed by the sensor name, and the changeable sensor name.

<u>Sensor Name</u>: Changeable name for this sensor. Temperature and humidity can have different names, even if they are from the same sensor.

Select Sensor Field: Selects a data channel from a sensor.

<u>Enable ... Messages</u>: Enables the generation of sensor messages. <u>Maximum/Minimum value</u>: Here you can choose whether, and at what Maximum/Minimum temperature or humidity measurements limits the alerts are send via SNMP traps, syslog or e-mail.

<u>Hysteresis</u>: This describes the margin of when an event is generated after the measured value has crossed the chosen limit.

Message channels: Enables the generation of messages on different channels.

With the beeper you can choose between a continuous or an intermittent tone. Flashing display changes the brightness of the LCD backlight in cylcles. By pressing a front panel button the beeper and the flashing display will be reset.

<u>Console push-messages</u>: This option allows the output of sensor values on the console at a configured time interval, or when a certain threshold has been reached.

Min/Max measurement period: Selects the time range for the sensor min/max values on the overview web page.

Hysteresis Example:

A Hysteresis value prevents that too much messages are generated, when a sensor value is jittering around a sensor limit. The following example shows the behavior for a temperature sensor and a hysteresis value of "1". An upper limit of "50 °C" is set.

Example:

```
49.9 °C - is below the upper limit 50.0 °C - a message is generated for reaching the upper limit 50.1 °C - is above the upper limit ...

49.1 °C - is below the upper limit, but in the hysteresis range 49.0 °C - is below the upper limit, but in the hysteresis range 48.9 °C - a message is generated for underrunning the upper limit inclusive hysteresis range
```

3.5 E-Mail

E-Mail	
Enable E-Mail:	⊙ yes ○no
Sender address:	sender@provider.net
Recipient address:	info@gude.info
SMTP server:	smtp.provider.de
SMTP server port:	587 (Default: 587)
SMTP Connection Security:	STARTTLS V
Authentication	
SMTP Authentication (password):	PLAIN V
Username:	
Set new password:	••••
Repeat password:	••••

Enable E-Mail: Activates the E-Mail dispatch of messages.

Sender address: The E-Mail address of the sender.

<u>Recipient address</u>: The E-Mail address of the recipient. Additional E-Mail addresses, separated by comma, can be specified. The input limit is 100 characters.

<u>SMTP Server</u>: The SMTP IP-address of the E-Mail server. Either as FQDN, e.g: "mail.gmx.net", or as IP-address, e.g: "213.165.64.20". If required, attach a designated port, e.g: "mail.gmx.net:25".

<u>SMTP server port</u>: The port address of the E-Mail server. In the normal case this should be the same as the default, that is determined by the setting <u>SMTP Connection</u> Security.

Configuration

SMTP Connection Security: Transmission via SSL or no encryption.

SMTP Authentification (password): Authentication method of the E-Mail Server.

<u>Username</u>: User name that is registered with the SMTP E-Mail server.


Set new password: Enter the password for the login to the E-Mail server.

Repeat password: Enter the password again to confirm it.

If the password mask is redisplayed, only four "bullets" are shown as a symbolic placeholder, since for security reasons the password is never shown itself. If you want to change a password, the complete password must always be re-entered.


E-Mail Logs: Logging of E-Mail system messages.

3.6 Front Panel

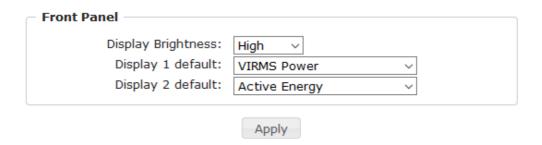

<u>Display Brightness</u>: The brightness of the LCD backlight can be set here.
 
<u>Display X default</u>: Selects the display of sensor values for both displays lines.



4.1 Automated Access

The device can be accessed automatically via four different interfaces, which offer different possibilities to access the configuration data and status information. Only http and the console (telnet and serial) provide full access to the device.

This chapter is general for all Gude devices. Depending on the device model are ports, certain sensors or other features not available.

List of different access options:

Interface	Scope of Access
HTTP	read / write status of Power Ports (relays or eFuses)
	read / write all configuration data
	read / write all status information
	(full access to the device)
Console 54	read / write status of Power Ports (relays or eFuses)
	read / write all configuration data
	read / write all status information
	(full access to the device)
SNMP 49	read / write status of Power Ports (relays or eFuses)
	read / write names of Power Ports (relays or eFuses)
	read / write status of Port start configuration
	read / write status Buzzer
	read / write configuration of power sources (EPC 8291)
	read / write fan configuration (EPC 8291)
	read measurement values of external sensors
	read measurement values of all energy sensors
	read NTP time and status
	resetting the energy meters
	read the status of Overvoltage Protection
Modbus TCP 66	read / write status of Power Ports (relays or eFuses)
	read status of Inputs
	read / write configuration of power sources (EPC 8291)
	read / write fan configuration (EPC 8291)
	read measurement values of external sensors
	read measurement values of all energy sensors
	read the status of Overvoltage Protection
MQTT	Execute console commands

The device can be controlled via HTTP interface with CGI commands and returns the internal configuration and status in JSON format. The structure of the CGI commands and the JSON data is explained in more detail in our Wiki article: http://wiki.gude.info/EPC_HTTP_Interface

4.2 Messages

Depending on adjustable events, various messages can be sent from the device. The following message types are supported:

- · Sending of e-mails
- SNMP Traps

· Syslog messages

E-Mail messages

Email messages are triggered by the following events:

- · Switching of the Ports
- Exceeding of the max / min values of attached sensors
- State change of digital sensor input ports

SNMP Traps

SNMP Traps are system messages that are sent via the SNMP protocol to different recipients. SNMP traps are triggered by the following events:

- Switching of the Ports
- Exceeding of the max / min values of attached sensors
- State change of digital sensor input ports

Syslog messages

Syslog messages are simple text messages that are sent via UDP to a syslog server. Under Linux, normally a syslog daemon is already running (eg. syslog-ng), for Microsoft Windows systems some freeware programs are available on the market. The syslog messages are sent for the following events:

- Turning on the device
- Enable/disable of syslog in the configuration
- Switching of the Ports
- Exceeding of the max / min values of attached sensors
- State change of digital sensor input ports

	SNMP Trap	Console	MQTT	Syslog	Email
Global					
Device started	Х	Х	Х	Х	Х
Syslog switched on/off				Х	
MQTT connection established			Х	Х	
MQTT connection lost				Х	
Value-Threshold					
external sensors Current, differential current Type A	х	х	х	х	х
Time-Interval			•		
external sensors Current, differential current type A		х	х		
Value-Delta					
external sensors Current, differential current type A		Х	х		

SNMP traps

There are common traps for state changes of the same device resource. For example, a SwitchEvtPort trap is sent when a port is turned on or off. The state change itself is

conveyed by the supplied data within the trap.

MQTT published data

Messages on the MQTT channel are sent in JSON format.

Example switch a port: "{"type": "portswitch", "idx": 2, "port": "2", "state": 1, "cause": {"id": 2, "txt": "http"}, "ts": 1632}"

Console Push Messages

Push messages can be activated on the console channels (Telnet, SSH or serial console), which output sensor values at timed intervals (every n seconds) or as of a configurable change in the magnitude of the sensor value on that channel. The generated message always starts with a "#" and ends with a CR/LF.

Example: Switch a port: "#port 2 ON"

If you open a telnet or SSH connection, the push messages are either preconfigured, or you switch on the push messages temporarily with "console telnet pushmsgs set 1" (or "console ssh pushmsgs set 1"). From now on, push messages will be sent asynchronously on this channel. The asynchronous nature of the messages can cause problems on a connection if you send commands yourself at the same time. There are then the possibilities:

- Filter all incoming characters between "#" and CR/LF
- or open a second channel (Telnet, SSH, serial) and switch on the push messages there.

4.3 IP ACL

IP Access Control List

The IP Access Control List (ACL IP) is a filter for incoming IP packets. If the filter is active, only the hosts and subnets whose IP addresses are registered in the list, can contact via HTTP or SNMP, and make changes. For incoming connections from unauthorized PCs, the device is not completely transparent. Due to technical restraints, a TCP/IP connection will be accepted at first, but then rejected directly.

Examples:

Entry in the IP ACL	Meaning
192.168.0.123	the PC with IP Address "192.168.0.123" can access the device
192.168.0.1/24	all devices of subnet "192.168.0.1/24" can access the device
1234:4ef0:eec1:0::/64	all devices of subnet "1234:4ef0:eec1:0::/64" can access the device

If you choose a wrong IP ACL setting and locked yourself out, please activate the Bootloader Mode and use GBL_Conf.exe to deactivate the IP ACL. Alternatively, you can reset the device to factory default.

4.4 IPv6

IPv6 Addresses

IPv6 addresses are 128 bit long and thus four times as long as IPv4 addresses. The first 64 bit form a so-called prefix, the last 64 bit designate a unique interface identifier. The prefix is composed of a routing prefix and a subnet ID. An IPv6 network interface can be reached under several IP addresses. Usually this is the case under a global address and the link local address.

Address Notation

IPv6 addresses are noted in 8 hexadecimal blocks at 16 bit, while IPv4 normally is noted in decimal. The seperator is a colon, not a period.

E.g.: 1234:4ef0:0:0:0019:32ff:fe00:0124

Leading zeros may be omitted within a block. The previous example can be rewritten as:

1234:4ef0:0:0:19:32ff:fe00:124

One may omit one or more successive blocks, if they consist of zeros. This may be done only once within an IPv6 address!

1234:4ef0::19:32ff:fe00:124

One may use the usual decimal notation of IPv4 for the last 4 bytes:

1234:4ef0::19:32ff:254.0.1.36

4.5 Radius

The passwords for HTTP, telnet, and serial console (depending on the model) can be stored locally and / or authenticated via RADIUS. The RADIUS configuration supports a primary server and a backup server. If the primary server does respond, the RADIUS request is sent to the backup server. If the local password and RADIUS are enabled at the same time, the system is first checking locally, and then in the event of a failure the RADIUS servers are contacted.

RADIUS attributes

The following RADIUS attributes are evaluated by the client:

Session-Timeout: This attribute specifies (in seconds) how long an accepted RADIUS request is valid. After this time has elapsed, the RADIUS server must be prompted again. If this attribute is not returned, the default timeout entry from the configuration is used instead.

Filter-Id: If the value "admin" is set for this attribute, then an admin rights are assigned for the login, otherwise only user access.

Service-Type: This is an alternative to Filter-Id. A service type of "6" or "7" means admin rights for the HTTP login, otherwise only limited user access.

HTTP Login

The HTTP login takes place via Basic Authentication. This means that it is the responsibility of the web server, how long the login credentials are temporarily stored there. The RADIUS parameter "Session-Timeout" therefore does not determine when the user has to login again, but at what intervals the RADIUS servers are asked again.

4.6 SNMP

SNMP can be used for status information via UDP (port 161). Supported SNMP commands are:

- GET
- GETNEXT
- GETBULK
- SET

To query via SNMP you need a Network Management System, such as HP OpenView, OpenNMS, Nagios etc., or the simple command line tools of NET-SNMP software. The device supports SNMP protocols v1, v2c and v3. If traps are enabled in the configuration, the device messages are sent as notifications (traps). SNMP Informs are not supported. SNMP Requests are answered with the same version with which they were sent. The version of the sent traps can be set in the configuration.

MIB Tables

The values that can be requested or changed by the device, the so-called "Managed Objects", are described in Management Information Bases (MIBs). These substructures are subordinate to so-called "OID" (Object Identifiers). An OID digit signifies the location of a value inside a MIB structure. Alternatively, each OID can be referred to with its symbol name (subtree name). The device's MIB table can be displayed as a text file by clicking on the link "MIB table" on the SNMP configuration page in the browser.

SNMP v1 and v2c

SNMP v1 and v2c authenticates the network requests by so-called communities. The SNMP request has to send along the so-called community public for queries (read access) and the community private for status changes (write access) . The SNMP communities are read and write passwords. In SNMP v1 and v2 the communities are transmitted unencrypted on the network and can be easily intercepted with IP sniffers within this collision domain. To enforce limited access we recommend the use of DMZ or IP-ACL.

SNMP v3

Because the device has no multiuser management, only one user (default name "standard") is detected in SNMP v3. From the User-based Security Model (USM) MIB variables, there is a support of "usmStats ..." counter. The "usmUser ..." variables will be added with the enhancement of additional users in later firmware versions. The system has only one context. The system accepts the context "normal" or an empty context.

Authentication

The algorithms "HMAC-MD5-96" and "HMAC-SHA-96" are available for authentication. In addition, the "HMAC-SHA-2" variants (RFC7630) "SHA-256", "SHA-384" and "SHA-512" are implemented.

"SHA-384" and "SHA512" are calculated purely in software. If "SHA-384" or "SHA-512" is set on the configuration page, the time for the key generation may take once up to approx. 45 seconds.

Encryption

The methods "DES", "3DES", "AES-128", "AES-192" and "AES-256" are supported in combination with "HMAC-MD5-96" and "HMAC-SHA-96." For the "HMAC-SHA-2" protocols, there is currently neither RFC nor draft that will allow for cooperation with an encryption.

While in the settings "AES-192" and "AES256" the key calculation is based on "draft-blumenthalphoto-aes-usm-04", the methods "AES 192-3DESKey" and "AES 256-3DESKey" utilize a key generation, which is also used in the "3DES" configuration ("draft-reeder-snmpv3-usm-3desede-00"). If one is not an SNMP expert, it is recommended to try in each case the settings with and without "...- 3DESKey".

Passwords

The passwords for authentication and encryption are stored only as computed hashes for security reasons. Thus it is, if at all, very difficult to infer the initial password. However, the hash calculation changes with the set algorithms. If the authentication or privacy algorithms are changed, the passwords must be re-entered in the configuration dialog.

Security

The following aspects should be considered:

- If encryption or authentication is used, then SNMP v1 and v2c should be turned off.
 Otherwise the device could be accessed with it.
- If only authentication is used, then the new "HMAC-SHA-2" methods are superior to the MD5 or SHA-1 hashing algorithms. Since only SHA-256 is accelerated in hardware, and SHA-384 and SHA-512 are calculated purely in software, one should normally select SHA-256. From a cryptographic point of view, the security of SHA-256 is sufficient for today's usage.
- For SHA-1, there are a little less attack scenarios than MD5. If in doubt, SHA-1 is preferable.
- Encryption "DES" is considered very unsafe, use only in an emergency for reasons of compatibility!
- For cryptologists it's a debatable point whether "HMAC-MD5-96" and "HMAC-SHA-96" can muster enough entropy for key lengths of "AES-192" or "AES-256".
- From the foregoing considerations, we would recommended at present "HMAC-SHA-96" with "AES-128" as authentication and encryption method.

Change in Trap Design

In older MIB tables, a separate trap was defined for each combination of an event and a port number. This results in longer lists of trap definitions for the devices. For example, from **epc8221SwitchEvtPort1** to **epc8221SwitchEvtPort12**. Since new firmware versions can generate many more different events, this behavior quickly produces several hundred trap definitions. To limit this overabundance of trap definitions, the trap design has been changed to create only one specific trap for each event type. The port or sensor number is now available in the trap as an index OID within the vari-

able bindings.

In order to recognize this change directly, the "Notification" area in the MIB table has been moved from sysObjectID.0 to sysObjectID.3. This way, unidentified events are generated until the new MIB table is imported. For compatibility reasons, SNMP v1 traps are created in the same way as before.

NET-SNMP

NET-SNMP provides a very widespread collection of SNMP command-line tools (snmpget, snmpset, snmpwalk etc.) NET-SNMP is among others available for Linux and Windows. After installing NET-SNMP you should create the device-specific MIB of the device in NET-SMP share directory, e.g. after

c:\usr\share\snmp\mibs

or

/usr/share/snmp/mibs

So later you can use the 'subtree names' instead of OIDs:

```
Name: snmpwalk -v2c -mALL -c public 192.168.1.232 gudeads
OID: snmpwalk -v2c -mALL -c public 192.168.1.232 1.3.6.1.4.1.28507
```

NET-SNMP Examples

Query Power Port 1 switching state:

snmpget -v2c -mALL -c public 192.168.1.232 epc822XPortState.1

Switch on Power Port 1:

snmpset -v2c -mALL -c private 192.168.1.232 epc822XPortState.1 integer 1

4.6.1 Device MIB

Below is a table of all device-specific OID 's which can be accessed via SNMP. In the numerical representation of the OID the prefix " 1.3.6.1.4.1.28507 " (Gude Enterprise OID) was omitted at each entry in the table to preserve space. The example for a complete OID would be "1.3.6.1.4.1.28507.62.1.1.1.1". A distinction is made in SNMP OID 's in between tables and scalars. OID scalar have the extension ".0" and only specify a value. In SNMP tables the "x" is replaced by an index (1 or greater) to address a value from the table.

Name	OID	Type	Acc.
	Description		
pdu8311TrapCtrl	.62.1.1.1.0	Integer32	RW
	0 = off 1 = Ver. 1 2 = Ver. 2c 3 = Ver. 3		
pdu8311TraplPIndex	.62.1.1.1.2.1.1.x	Integer32	RO
	A unique value, greater than zero, for each rece	eiver slot.	
pdu8311TrapAddr	.62.1.1.1.2.1.2.x	OCTETS	RW
	DNS name or IP address specifying one Trap re		
	optionally be specified: 'name:port' An empty st	ring disables thi	is slot.
pdu8311Buzzer	.62.1.3.10.0	Integer32	RW
	turn Buzzer on and off		
pdu8311ActivePowerChan	.62.1.5.1.1.0	Unsigned32	RO
•	Number of suppported Power Channels.	-	
pdu8311PowerIndex	.62.1.5.1.2.1.1.x	Integer32	RO
•	·		

pdu8311ChanStatus	Index of Power Channel enti	.62.1.5.1.2.1.2.x	Integer32	RO
pdu8311AbsEnergyActive	0 = data not active, 1 = data	.62.1.5.1.2.1.3.x	Unsigned32	RO
pdu8311PowerActive	Absolute Active Energy cour Active Power	.62.1.5.1.2.1.4.x	Integer32	RO
pdu8311Current	Active Power Actual Current on Power Ch	.62.1.5.1.2.1.5.x	Unsigned32	RO
pdu8311Voltage	Actual Voltage on Power Ch	.62.1.5.1.2.1.6.x	Unsigned32	RO
pdu8311Frequency	Frequency of Power Channe	.62.1.5.1.2.1.7.x	Unsigned32	RO
pdu8311PowerFactor	Power Factor of Channel be	.62.1.5.1.2.1.8.x	Integer32	RO
pdu8311Pangle	Phase Angle between Voltage	.62.1.5.1.2.1.9.x	Integer32 t between -180.0	RO and
pdu8311PowerApparent	180.0	.62.1.5.1.2.1.10.x	Integer32	RO
pdu8311PowerReactive	L Line Mean Apparent Powe	er .62.1.5.1.2.1.11.x	Integer32	RO
pdu8311AbsEnergyReactive	L Line Mean Reactive Powe	r .62.1.5.1.2.1.12.x	Unsigned32	RO
pdu8311AbsEnergyActiveResettal	Absolute Reactive Energy co	ounter. .62.1.5.1.2.1.13.x	Unsigned32	RW
le	Resettable Absolute Active I		ŭ	IXVV
pdu8311AbsEnergyReactiveReset	resettable counter. t	.62.1.5.1.2.1.14.x	Unsigned32	RO
able	Resettable Absolute Reactiv	e Energy counter.		
pdu8311ResetTime	Time in seconds since last E			RO
pdu8311ForwEnergyActive	Forward Active Energy coun		Unsigned32	RO
pdu8311ForwEnergyReactive	Forward Reactive Energy co	.62.1.5.1.2.1.17.x ounter.	Unsigned32	RO
pdu8311ForwEnergyActiveResettable		.62.1.5.1.2.1.18.x	Unsigned32	RO
pdu8311ForwEnergyReactiveResettable	Resettable Forward Active E	.62.1.5.1.2.1.19.x	Unsigned32	RO
pdu8311RevEnergyActive	Resettable Forward Reactive	e Energy counter. .62.1.5.1.2.1.20.x	Unsigned32	RO
pdu8311RevEnergyReactive	Reverse Active Energy coun	nter. .62.1.5.1.2.1.21.x	Unsigned32	RO
pdu8311RevEnergyActiveResettal	Reverse Reactive Energy co	ounter. .62.1.5.1.2.1.22.x	Unsigned32	RO
le	Resettable Reverse Active E		Orisigned32	NO
pdu8311RevEnergyReactiveReset able	t	.62.1.5.1.2.1.23.x	Unsigned32	RO
pdu8311ResidualCurrent	Resettable Reverse Reactive	.62.1.5.1.2.1.24.x	Unsigned32	RO
	Actual Residual Current on I 60755. Only visible on mode	els that support this fe	eature.	
pdu8311LineSensorName	A textual string containing na			RW
epc8311NTPTimeValid	Show if valid Time is received		INTEGER	RO
epc8311NTPUnixTime	show received NTP time as	,	•	,
epc8311NTPLastValidTimestamp	show seconds since last val			RO
pdu8311SensorIndex	None	.62.1.6.1.1.1.x	Integer32	RO
pdu8311TempSensor	actual temperature	.62.1.6.1.1.2.x	Integer32	RO
pdu8311HygroSensor	actual humidity	.62.1.6.1.1.3.x	Integer32	RO
pdu8311InputSensor	logical state of input sensor	.62.1.6.1.1.4.x	INTEGER	RO
pdu8311AirPressure	actual air pressure	.62.1.6.1.1.5.x	Integer32	RO
pdu8311DewPoint	dew point for actual tempera		Integer32	RO
pdu8311DewPointDiff		.62.1.6.1.1.7.x	Integer32	RO

	difference between dew point and actual temper DewPoint)	rature (Temp -	
pdu8311ExtSensorName	.62.1.6.1.1.32.x	OCTETS	RW
	A textual string containing name of a external Sensor		

4.7 SSL

TLS Standard

The device is compatible with TLS v1.1 to TLS v1.3 standards, but due to lack of security, SSL v3.0, TLS 1.0, and RC4, MD5, SHA1, and DES encryption are disabled. All ciphers use Diffie-Hellman key exchange (Perfect Forward Secrecy).

TLS 1.3 performance

The interaction of TLS 1.3 and unsecure certificates and a web browser with Chromium Engine (Google Chrome or MS Edge) can lead to performance losses, and thus longer loading times. In this constellation, the Chromium Engine does not correctly support the SSL Session Cache (Session Tickets) and the math unit of the embedded CPU may be overwhelmed with continuous RSA operations. There are some possible workarounds:

- Use secure certificates (official certificate authority or marked as secure in the OS)
- · or use of the Firefox browser
- or use of ECC 256 (no RSA) certificates
- or configure to "TLS v1.2 only

Creating your own Certificates

The SSL stack is supplied with a specially newly generated self-signed certificate. There is no function to generate the local certificate anew at the touch of a button, since the required random numbers in an embedded device are usually not independent enough. However, you can create new certificates and import them to the device. The server accepts RSA (2048/4096) and ECC (Elliptic Curve Cryptography) certificates.

Usually OpenSSL is used to create an SSL certificate. For Windows for example, there is the light version of Shining Light Productions. There you open a command prompt, change to the directory "C:\OpenSSL-Win32\bin" and set these environment variables:

```
set openssl conf=C:\OpenSSL-Win32\bin\openssl.cfg
set RANDFILE=C:\OpenSSL-Win32\bin\.rnd
```

Here are some examples for the generation with OpenSSL:

Creation of a self-signed RSA 2048-bit certificate

```
openssl genrsa -out server.key 2048
openssl reg -new -x509 -days 365 -key server.key -out server.crt
```

RSA 2048-bit certificate with Sign Request:

```
openssl genrsa -out server.key 2048
openssl req -new -key server.key -out server.csr
openssl req -x509 -days 365 -key server.key -in server.csr -out server.crt
```



🦊 The server keys should be created with "openssl genrsa". The Gude device pro-

cesses keys in the traditional PKCS#1 format. This can be recognized by the fact that the generated key file starts with "----BEGIN RSA PRIVATE KEY-----". If the file starts with "-----BEGIN PRIVATE KEY-----", the file is in PKCS#8 format and the key is not recognized. If you have only a key in PKCS#8 format, you can convert it to PKCS#1 with openssl: "openssl rsa -in pkcs8.key -out pkcs1.key".

ECC Certificate with Sign Request:

```
openssl ecparam -genkey -name prime256v1 -out server.key openssl req -new -key server.key -out server.csr openssl req -x509 -days 365 -key server.key -in server.csr -out server.crt
```

If you have created your key and certificate, both files are concatenated to one file:

Linux:

```
cat server.crt server.key > server.pem
```

Windows:

```
copy server.crt + server.key server.pem
```

The created server.pem can only be uploaded in the maintenance section of the device.

If several certificates (Intermediate CRT's) should also be uploaded to the device, one should make sure, that firstly the server certificate and secondly the Intermediates are assembled, e.g.

```
cat server.crt IM1.crt IM2.crt server.key > server.pem
```

An uploaded certificate will be preserved, when a device is put back to factory defaults 20.

Performance Considerations

If RSA 4096 certificates are used, the first access to the web server can take 8-10 seconds, because the math unit of the embedded CPU is highly demanded. After that, the parameters are in the SSL session cache, so all other requests are just as fast as with other certificate lengths. For a quick response even on the first access, we recommend RSA 2048-bit certificates that offer adequate security, too.

4.8 Console

For the configuration and control of the device, there is a set of commands with parameters that can be entered through a console. The console is available via Telnet, or for devices with RS232 port through using a serial terminal. It is not necessary to use Telnet, in **Raw Mode** a simple TCP/IP connection is sufficient to send commands. The communication can also be performed automated (e.g. via scripting languages). The console features are configured through the web interface 27.

Command Set

There are several command levels. The following commands are usable from each level:

back	go back one level
help	all commands of the actual level
help all	show all commands
logout	logout (only when login required)
quit	quit console

The "help" command returns all the commands of the current level. If "help" is called from the top level, e.g. the line "http [subtopics]" appears. This means that there is another level for "http". With the command "http help" all commands below "http" are shown. Alternatively, with entering "http" you can select the http level, and "help" shows all the commands on the selected level. The command "back" again selects the top level. It is possible to use "help" at any position: "http passwd help" provides all commands that have the prefix "http passwd".

You will find a complete list of all possible device commands in the chapter "Cmd Overview".

Parameter

If parameters are expected for the command, the parameter may be passed as numeric or constant. If e.g. you get the following line as help:

```
http server set {http_both=0|https_only=1|http_only=2}
```

the following instruction pairs are equivalent:

```
http server set https_only
http server set 1

or

http server set https_both
http server set 0
```

Numerical parameters can be entered with different bases. Here is an example of the decimal value 11:

Base	Input
decimal (10)	11
hexadecimal (16)	0xb
octal (8)	013
binary (2)	0b1011

Bit Field Parameter

Some parameters can take several values at the same time. In the following example, all values between 0 and 5 can be set. In the help, this can be recognized by the fact that the values are not separated by the "|" character, but by commas.

```
"{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER=5}"
```

To set EVT_SYSLOG and EVT_EMAIL in a command, you can use the following syntax:

```
>extsensor 1 2 0 events type set "EVT_SYSLOG, EVT_EMAIL"
```

OK.

or numeric

```
>extsensor 1 2 0 events type set "0,2" OK.
```

Additionally you can set all values with "ALLSET" or encode any bit pattern as hexadecimal with a syntax like "#7f1a".

Return Values

If a command is unknown or a parameter is incorrect, the output "ERR." is given at the beginning of the line, followed by a description of the fault. Successful instructions without special return value will be acknowledged by "OK.". All other return values are output within a single line. There are of two exceptions:

- Some configuration changes, that affect TCP / IP and UDP, need a restart to be applied. These parameters are output on two lines. In the first line the current value is shown, on the second row the value after a restart. In the "Cmd Overview" table this is marked with "Note 2".
- Other configurations (such as the assigned IPv6 addresses) have several values that can change dynamically. This is marked with "Note 3" in the "Cmd Overview" table.

Numerical Returns

For parameters that support constants, these constants are output as return values. To better deal with scripting languages, it may be easier to work only with numerical returns. The command "vt100 numeric set ON" enables that only numerical values appear.

Comments

If you use a tool to send an entire file of commands via Telnet, it is helpful, if you can place comments in there. Beginning with the comment character "#", the remaining contents of a line is ignored.

Telnet

If the configuration "Raw Mode" is turned off, it is tried to negotiate the Telnet configuration between client and server using IAC commands. If this fails, the editing functions are not active, and the "Activate echo" option determines whether the characters sent to the Telnet server will be returned. Normally the client begins with the IAC negotiation. If this is not the case with the client, the device configuration "Active negotiation" should be turned on.

Raw Mode

If you want to use the console only automated, it may be advantageous to set the configuration "Raw mode" to "yes" and "Activate echo" to "no" to. Then there is no interfering interaction with the editor functions and the is no need to filter the sent characters to process the return values.

#

If in the console "Raw mode" is activated but not in the used Telnet client, the IAC

commands sent at the beginning can appear as interfering characters in the command line (partially invisible).

Editing

The following edit functions are available when the terminal supports VT100, and Raw Mode is deactivated. Entered characters are inserted at the cursor position.

Keys	Function
Left, Right	moves cursor left or right
Pos1, End	moves cursor to the beginning or end of line
Del	deletes character under the cursor
Backspace	deletes character left of cursor
Up, Down	shows input lines history
Tab, Ctrl-Tab	completes the word at cursor
Ctrl-C	clears the line

Sensor Examples

a) External Sensors

```
>extsensor all show E=1,L="7106",0="21.3°C",1="35.1%",3="1013hPa",4="5.2°C",5="16.0°C"" E=2,L="7102",0="21.2°C",1="35.4%",4="5.3°C",5="15.9°C""
```

The command lists one connected external sensor per line, and the individual measured values are separated by commas after the label name. The digit before the equal sign corresponds to the Index field in the External Sensor Table.

>extsensor 1 0 value show

Displays temperature of the sensor at Port 1

b) Line Sensors

```
>linesensor all "0,1,2,3,12" show L=1,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="998218s" L=2,L="Power Port",0="13000Wh",1="0W",2="223V",3="0A",12="996199s"
```

This command outputs all line sensor values in one line. A list of all fields (according to the energy sensor table) is transferred as parameter. In this example these are the fields Absolute Active Energy (0), Power Active (1), Voltage (2), Current (3) and Reset Time (12).

```
>linesensor 1 "0,1,2,3,12" show
>linesensor 1 1 show
```

These variants give the sensor values of the field list or of a sensor at Line-In 1.

For devices with Overvoltage Protection, the "linesensor all" command also outputs the state of the protection ("OVP=x"). A "1" means ok, a "0" a failure of the protection.

c) Port Sensors

```
>portsensor all "0,1,2,3,12" show P=1,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="998218s"
```

```
P=2,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="996199s"
...
P=12,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="998218s"
```

This command outputs all port sensor values in one line. A list of all fields (according to the energy sensor table) is passed as parameter. In this example these are the fields Absolute Active Energy (0), Power Active (1), Voltage (2), Current (3) and Reset Time (12).

```
>portsensor 2 "0,1,2,3,12" show
>portsensor 2 1 show
```

These variants give the sensor values of the field list or a sensor to at Outlet Port 2.

d) Displaying Port Relays

```
>port all state 1 show P1=ON, P2=OFF, P3=ON, P4=OFF, P5=OFF, P6=OFF, P7=OFF, P8=ON
```

The command "port all state {MODE0=0|MODE1=1|MODE2=2} show" returns the switching state of all relays in 3 possible formats.

e) Switching Port Relays

```
#port all state set "1,2,12" 1
ok
```


The command syntax "port all state set "{port_list}" {OFF=0|ON=1}" sets a list of ports to ON=1 or OFF=0.

4.8.1 SSH


The device supports SSH-2 connections with either public key authentication or user name and password. The "login" must be enabled for SSH. Users and passwords can be stored locally or retrieved via a radius server. If you want to use SSH in a terminal, Activate echo should be enabled.

Public Keys

RSA and ECDSA public keys are accepted.

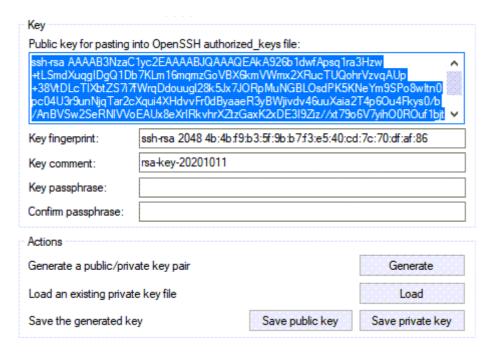

Generated keys can be copied directly from e.g. putty gen,

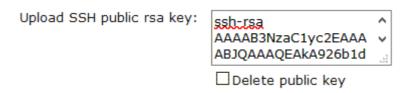

and inserted into the Configuation - Console input field. Public keys are accepted in SSH2 or OpenSSH format.

4.8.2 Cmd 8311

Command	Description	Note
logout	go to login prompt when enabled	2
quit	quits telnet session - nothing in serial console	2
back	back one cmd level	2
help	show all cmds from this level	2
help all	show all cmds	2
clock	enters cmd group "clock"	
clock ntp enabled set {OFF=0 ON=1}	enables ntp	
clock ntp enabled show	shows if ntp enabled	
clock timezone set {minutes}	sets timezone	
clock timezone show	shows timezone	
clock dst enabled set {OFF=0 ON=1}	enables dst	
clock dst enabled show	shows if dst is enabled	
clock manual set "{hh:mm:ss yyyy-mm-dd}"	sets time and date manually	
clock show	shows actual time and date	
clock ntp server {PRIMARY=0 BACKUP=1} set "{dns_name}"	sets ntp server name	
clock ntp server {PRIMARY=0 BACKUP=1} show	shows ntp server name	
console	enters cmd group "console"	
console version	shows unique console version number	
console telnet enabled set {OFF=0 ON=1}	enables telnet on/off	
console telnet enabled show	shows if telnet enabled	
console telnet port set {ip_port}	sets telnet port	
console telnet port show	shows telnet port	
console telnet raw set {OFF=0 ON=1}	sets raw mode (disables editing) on/off	

console telnet raw show	shows if raw mode enabled	
console telnet echo set {OFF=0 ON=1}	enables echo on/off	
console telnet echo show console telnet activeneg set {OFF=0 ON=1}	shows if echo enabled enables telnet active negotiation (IAC) on/off	
console telnet activened set (OTT = 0 OTT = 1)	shows if active negotiation enabled	
console telnet login set {OFF=0 ON=1}	enables login on/off	
console telnet login show	shows if login enabled	
console telnet login local set {OFF=0 ON=1}	enables local login on/off	
console telnet login local show	shows if local login enabled	
console telnet login radius set {OFF=0 ON=1} console telnet login radius show	enables login for RADIUS on/off shows if RADIUS login enabled	
console telnet login delay set {OFF=0 ON=1}	enables delay (after 3 login fails) on/off	
console telnet login delay show	shows if login delay enabled	
console telnet pushmsgs config set {OFF=0 ON=1}	enables persistent push msgs	
console telnet pushmsgs config show	shows if persistent push msgs are enabled	
console telnet pushmsgs set {OFF=0 ON=1}	enables temporary push msgs	
console telnet pushmsgs show	shows if temporary push msgs are enabled	
console telnet user set "{username}" console telnet user show	sets login user name shows login user name	
console telnet passwd set "{passwd}"	sets login password	
console telnet passwd hash set "{passwd}"	sets login hashed password	
console ssh enabled set {OFF=0 ON=1}	enables SSH	
console ssh enabled show	shows if SSH enabled	
console ssh port set {ip_port}	sets SSH port	
console ssh port show console ssh echo set {OFF=0 ON=1}	shows SSH port enables echo on/off	
console ssh echo show	shows if echo enabled	
console ssh pushmsgs config set {OFF=0 ON=1}		
console ssh pushmsgs config show	shows if persistent push msgs are enabled	
console ssh pushmsgs set {OFF=0 ON=1}	enables temporary push msgs	
console ssh pushmsgs show console ssh public hash set "{passwd}"	shows if temporary push msgs are enabled sets hash of SSH public key	
console ssh public hash show	shows hash of SSH public key	
email	enters cmd group "email"	
email enabled set {OFF=0 ON=1}	enables email on/off	
email enabled show	shows if email is enabled	
email sender set "{email_addr}"	sets email sender address	
email sender show email recipient set "{email_addr}"	shows email sender address sets email recipient address	
email recipient set {email_addi}	shows email recipient address	
email server set "{dns_name}"	sets email SMTP server address	
email server show	shows email SMTP server address	
email port set {ip_port}	sets email SMTP port	
email port show email security set {NONE=0 STARTTLS=1	shows email SMTP port	
SSL=2}	sets SMTP connection security	
email security show	shows SMTP connection security	
email auth set {NONE=0 PLAIN=1 LOGIN=2}	sets email authentication	
email auth show email user set "{username}"	show email authentication sets SMTP username	
email user show	shows SMTP username	
email passwd set "{passwd}"	sets SMTP password	
email passwd hash set "{passwd}"	sets crypted SMTP password	
email testmail	send test email	
ethernet	enters cmd group "ethernet"	
ethernet mac show	shows MAC address	
ethernet link show	shows ethernet link state	
ethernet phyprefer set {10MBIT_HD=0	sets preferred speed for PHY Auto Negotiation	
10MBIT_FD=1 100MBIT_HD=2 100MBIT_FD=3} ethernet phyprefer show	shows preferred speed for PHY Auto Negotiation	
extsensor extsensor all show	enters cmd group "extsensor" shows all values from connected external sensors	
extsensor all show	shows all plugged sensors and fields	
extsensor {port_num} {sen_field} value show	shows sensor value	6
extsensor {port_num} {sen_type} label set	sets sensor name to label	6
"{name}"		
extsensor {port_num} {sen_type} label show extsensor {port_num} type show	shows label of sensor shows type of sensor	6
extsensor {port_num} type snow extsensor {port_num} {sen_type} {sen_field}	*	_
events set {off=0 on=1}	enables sensor events on/off	6
extsensor {port_num} {sen_type} {sen_field} events show	shows if sensor events are enabled	6
extsensor {port_num} {sen_type} {sen_field}	enables different event types	6

events type set "(EVT SYSLOG=0, EVT SNMP=1, EVT BEEPER 5, EVT DISPLAY=6, EVT CONSOLE=7, EVT M OTT=8)" extsensor (port_num) (sen_type) (sen_field) maxval set (num) extsensor (port_num) (sen_type) (sen_field) maxval show extsensor (port_num) (sen_type) (sen_field) maxval show extsensor (port_num) (sen_type) (sen_field) minval set (num) extsensor (port_num) (sen_type) (sen_field) minval set (num) extsensor (port_num) (sen_type) (sen_field) minval show extsensor (port_num) (sen_type) (sen_field) minval show extsensor (port_num) (sen_type) (sen_field) publish mode set (NONE=0 INTERVAL=1 DELTA=2 INTERV DELTA=3 extsensor (port_num) (sen_type) (sen_field) publish mqtt retain set extsensor (port_num) (sen_type) (sen_field) publish mqtt retain set extsensor (port_num) (sen_type) (sen_field) publish mqtt retain show extsensor (port_num) (sen_type) (sen_field) publish mqtt retain show extsensor (port_num) (sen_type) (sen_field) publish timer set (num_secs) extsensor (port_num) (sen_type) (sen_field) publish timer set (num_secs) extsensor (port_num) (sen_type) (sen_field) publish timer set (num_secs) extsensor (port_num) (sen_type) (sen_field) publish timer set (num) extsensor (port_num) (sen_type) (sen_field) publish dieta set (float) extsensor (port_num) (sen_type) (sen_fi	enabled 6
EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER 95,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8)" extsensor (port_num) {sen_type} {sen_field} wextsensor (port_num) {sen_type} {sen_field} maxval set {num} extsensor (port_num) {sen_type} {sen_field} minval set {num} extsensor (port_num) {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3 extsensor {port_num} {sen_type} {sen_field} publish mode set (NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3 extsensor {port_num} {sen_type} {sen_field} publish matter teal in set (OFF=0 ON=1) bittp port set {ip_port} http portset {ip_port} http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd local set "(passwd)" http passwd dradius set (OFF=0 ON=1) http passwd local set "(passwd)" http passwd dradius set (OFF=0 ON=1) http	enabled 6
astemsor (port_num) (sen_type) (sen_field) events type show extsensor (port_num) (sen_type) (sen_field) maxval set (num) extsensor (port_num) (sen_type) (sen_field) maxval set (num) extsensor (port_num) (sen_type) (sen_field) maxval show extsensor (port_num) (sen_type) (sen_field) minval show extsensor (port_num) (sen_type) (sen_field) minval show extsensor (port_num) (sen_type) (sen_field) minval show extsensor (port_num) (sen_type) (sen_field) hyst set (num) extsensor (port_num) (sen_type) (sen_field) hyst show extsensor (port_num) (sen_type) (sen_field) publish mode set (NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3 extsensor (port_num) (sen_type) (sen_field) publish mode show extsensor (port_num) (sen_type) (sen_field) publish mode show extsensor (port_num) (sen_type) (sen_field) publish mode sto (Port_num) (sen_type) (sen_field) publish mett retain show extsensor (port_num) (sen_type) (sen_field) publish imer set (num_sees) extsensor (port_num) (sen_type) (sen_field) publish timer set (num_sees) extsensor (port_num) (sen_type) (sen_field) publish timer set (num_sees) extsensor (port_num) (sen_type) (sen_field) publish delta set (float) extsensor (port_num) (sen_type) (sen_field) publish delta show extsensor period set (24H=0 12H=1 2H=2 1H=3 30MIN=4 sets sensor Min/Max measur shows publish delta value enters cmd group "http" sets accepted connection to sets hittp port show hittp port set (ip_port) hittp ports show hittp port show hittp ports show hittp ports show hittp ports show hittp passwd enabled set (OFF=0 ON=1 enables local login enable sets hittp assword down sets hittp assword damin set "(passwd)" sets hittp assword sets hittp assword sets hittp assword sets hittp	enabled 6
extsensor (port_num) {sen_type} {sen_field} maxyal set {num} extsensor (port_num) {sen_type} {sen_field} maxyal set {num} extsensor (port_num) {sen_type} {sen_field} minval show extsensor (port_num) {sen_type} {sen_field} minval show extsensor (port_num) {sen_type} {sen_field} hyst set {num} extsensor (port_num) {sen_type} {sen_field} hyst set {num} extsensor (port_num) {sen_type} {sen_field} hyst set {num} extsensor (port_num) {sen_type} {sen_field} hyst set show extsensor (port_num) {sen_type} {sen_field} publish mode set {NoNe=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3} extsensor (port_num) {sen_type} {sen_field} publish mqtt retain set (OFF=0 ON=1) extsensor (port_num) {sen_type} {sen_field} publish imer set {num_seos} extsensor (port_num) {sen_type} {sen_field} publish imer set {num_seos} extsensor (port_num) {sen_type} {sen_field} publish timer set {num_seos} extsensor (port_num) {sen_type} {sen_field} publish timer set {num_seos} extsensor (port_num) {sen_type} {sen_field} publish timer set {num_seos} extsensor (port_num) {sen_type} {sen_field} publish delta set {float} extsensor (port_num) {sen_type} {sen_field} publish delta set {float} extsensor (port_num) {sen_type} {sen_field} publish delta set {num} sets publish time interval shows publish time interval shows publish time interval shows publish delta value sets sensor Min/Max measur shows publish delta value sets sensor Min/Max measur shows publish delta value sets sensor Min/Max measur shows publish delta value sets publish delta	enabled 6
events type show extsensor {port_num} {sen_type} {sen_field} maxval set {num} extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} hyst extsensor {port_num} {sen_type} {sen_field} hyst extsensor {port_num} {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3} extsensor {port_num} {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish mqtt retain set {OFF=0 ON=1} publish mqtt retain show extsensor {port_num} {sen_type} {sen_field} publish timer set {num_seos} extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_fi	enabled 6
extsensor (port_num) {sen_type} {sen_field} maxval set {num} extsensor {port_num} {sen_type} {sen_field} maxval show extsensor {port_num} {sen_type} {sen_field} minval set {num} extsensor {port_num} {sen_type} {sen_field} hyst set {num} extsensor {port_num} {sen_type} {sen_field} hyst set {num} extsensor {port_num} {sen_type} {sen_field} hyst show extsensor {port_num} {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3} extsensor {port_num} {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish mit retain show extsensor {port_num} {sen_type} {sen_field} publish mit retain show extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish delta set {flout} extsensor {port_num} {	
maxval set {num} sextsensor {port_num} {sen_type} {sen_field} maxval show extsensor {port_num} {sen_type} {sen_field} minval set {num} extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} hyst set {num} extsensor {port_num} {sen_type} {sen_field} hyst show extsensor {port_num} {sen_type} {sen_field} hyst show extsensor {port_num} {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 pelta-2 INTERV_DELTA=3} extsensor {port_num} {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish mqtr retain set {OFF=0 ON=1} extsensor {port_num} {sen_type} {sen_field} publish timer set {num_ses} extsensor {port_num} {sen_type} {sen_field} publish timer set {num_ses} extsensor {port_num} {sen_type} {sen_field} publish timer set {num_ses} extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} extsensor {port_num} {sen_type}	
extsensor (port_num) {sen_type} {sen_field} maxval show extsensor (port_num) {sen_type} {sen_field} minval set {num} extsensor (port_num) {sen_type} {sen_field} minval show extsensor (port_num) {sen_type} {sen_field} hyst set {num} extsensor (port_num) {sen_type} {sen_field} hyst show extsensor (port_num) {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3} extsensor {port_num} {sen_type} {sen_field} publish mode set (NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3} extsensor {port_num} {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3} extsensor {port_num} {sen_type} {sen_field} publish mode set {OFF=0 ON=1} extsensor {port_num} {sen_type} {sen_field} publish mode set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish delta set {num}	sor 6
maxval snow extsensor (port_num) {sen_type} {sen_field} minval set {num} extsensor (port_num) {sen_type} {sen_field} minval set {num} extsensor (port_num) {sen_type} {sen_field} hyst set {num} extsensor (port_num) {sen_type} {sen_field} hyst show extsensor (port_num) {sen_type} {sen_field} hyst show extsensor (port_num) {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3} extsensor (port_num) {sen_type} {sen_field} publish mode show extsensor (port_num) {sen_type} {sen_field} publish mode show extsensor (port_num) {sen_type} {sen_field} publish mqtt retain set {OFF=0 ON=1} extsensor (port_num) {sen_type} {sen_field} publish timer set {num_secs} extsensor (port_num) {sen_type} {sen_field} publish delta set {float} extsensor (port_num) {sen_type} {sen_field} publish delta stow extsensor period set {24H=0 12H=1 2H=2 1H=3 30MIN=4} extsensor period set {24H=0 12H=1 2H=2 1H=3 30MIN=4} extsensor period set {TITP_BOTH=0 ITTPS_ONLY=1 HTTP_ONLY=22 HTTPS_REDIR=3} http tis mode set {TIS12=0 TLS13_12=1 TLS13=2 TLS13_12_1=1 TLS1	ensor 6
minval set (num) extsensor (port_num) {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} hyst set {num} extsensor {port_num} {sen_type} {sen_field} hyst show extsensor {port_num} {sen_type} {sen_field} hyst show extsensor {port_num} {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3} extsensor {port_num} {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish mqtt retain set {OFF=0 ON=1} extsensor {port_num} {sen_type} {sen_field} publish timer set {num_seos} extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor period set {24H=0 12H=1 2H=2 1H=3 30MIN=4} extsensor period show http http server set {HTTP_BOTH=0 HTTPS_ONLY=1 HTTP_ONLY=22 HTTPS_REDIR=3} http tis mode set {IDS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http tis mode set {IDS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http tis mode set {OFF=0 ON=1} http passwd enabled set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius set sen_time_radius radius	11501 0
extsensor (port_num) {sen_type} {sen_field} hyst set {num} extsensor (port_num) {sen_type} {sen_field} hyst set {num} extsensor (port_num) {sen_type} {sen_field} hyst show extsensor (port_num) {sen_type} {sen_field} hyst show extsensor {port_num} {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 DELTA=3 extsensor {port_num} {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish imer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish delta set {num_secs} extsensor {port_num} {sen_type} {sen_field} hyst sets publish delta value extsensor period set {24H=0 12H=1 2H=2 1H=3 sets sensor Min/Max measure sets sensor period set {24H=0 12H=1 2H=2 1H=3 sets sensor Min/Max measure sets {15m_type} {sen_field} hybus sets sensor Min/Max measure sets sets sets sets sets sets sets se	or 6
extsensor (port_num) (sen_type) (sen_field) hyst show sextsensor (port_num) (sen_type) (sen_field) publish mode set (NONE=0]INTERVAL=1 DELTA=2 INTERV_DELTA=3) extsensor (port_num) (sen_type) (sen_field) publish mode set (NONE=0]INTERVAL=1 sets publish mode set (NONE=0]INTERVAL=1 sets publish mode show extsensor (port_num) (sen_type) (sen_field) publish mode show extsensor (port_num) (sen_type) (sen_field) publish mqtt retain set (OFF=0 ON=1) extsensor (port_num) (sen_type) (sen_field) publish timer set (port_num) (sen_type) (sen_field) publish timer set (port_num) (sen_type) (sen_field) publish delta set (float) extsensor (port_num) (sen_type) (sen_field) shows publish delta value extsensor (port_num) (s	
set {num} extsensor {port_num} {sen_type} {sen_field} hyst shows hysterese value for set show extsensor {port_num} {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 DELTA=3 extsensor {port_num} {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish mqtt retain set {OFF=0 ON=1} extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta show extsensor period set {24H=0 12H=1 2H=2 1H=3 shows publish delta value} sets sensor Min/Max measur shows sensor Period set {24H=0 12H=1 2H=2 1H=3 shows sensor Min/Max measur shows sensor Period show http port set {port}	nsor 6
set (rum) extsensor (port_num) {sen_type} {sen_field} hyst show extsensor (port_num) {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3} extsensor (port_num) {sen_type} {sen_field} publish mode show extsensor (port_num) {sen_type} {sen_field} publish mode show extsensor (port_num) {sen_type} {sen_field} publish mode tretain set (OFF=0 ON=1) extsensor (port_num) {sen_type} {sen_field} publish timer set (num_secs) extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta value sets publish time interval sets publish time interval sets publish delta value shows publish delta value sets sensor Min/Max measur shows publish time interval sets publish delta value sets publish time interval sets publish time interval sets publish time interval sets publish delta value shows publish delta value shows publish delta value shows publish time interval sets publish delta value shows publish del	sor 6
show extsensor {port_num} {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 sets publish mode show extsensor {port_num} {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish mqtt retain set {OFF=0 ON=1} sets mqtt retain set publish mqtt retain show extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish delta set {float} setsensor {port_num} {sen_type} {sen_field} publish delta set {float} sets extsensor {port_num} {sen_type} {sen_field} publish delta set {float} sets extsensor {port_num} {sen_type} {sen_field} publish delta set {float} sets extsensor {port_num} {sen_type} {sen_field} sets publish time interval sets publish delta value sets extsensor porton set {24H=0 12H=1 2H=2 1H=3 sets sensor Min/Max measur shows sensor Port_num} {sets sets publish time interval sets publish delta value sets extensor period set {24H=0 12H=1 2H=2 1H=3 sets sensor Min/Max measur shows sensor Port_num} {sets sets publish time interval sets publish delta value sets extensor period set {24H=0 12H=1 2H=2 1H=3 sets sensor Min/Max measur sets enters cmd group "http" sets accepted connection type sets sets enters cmd group "http" sets sets publish delta value sets sets sets publish time interval sets publish time interval sets publish time interval sets publish time interval sets publish delta value sets sets publish delta value sets publish delta value sets	0
extsensor {port_num} {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 } DELTA=2 INTERV_DELTA=3} extsensor {port_num} {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish mqtt retain set {OFF=0 ON=1} extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor period set {24H=0 12H=1 2H=2 1H=3 30MIN=4} extsensor period show http http server show http port set {ip_port} http portssl show http port set {ip_port} http portssl set {ip_port} http portssl set {ip_port} http portssl set {ip_port} http portssl show http piase enabled set {OFF=0 ON=1} http passwd enabled set {OFF=0 ON=1} http passwd enabled show http passwd local set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http pa	ensor 6
publish mode set {NONE=0 INTERVAL=1 sets publish mode DELTA=2 INTERV_DELTA=3 stresnor {port_num} {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish mqtt retain set {OFF=0 ON=1} shows if mqtt retain set yetsensor {port_num} {sen_type} {sen_field} publish mqtt retain show extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} sets publish timer set {num_secs} sets publish timer set {num_secs} sets publish time interval shows publish timer set {num_secs} sets publish delta set {float} sets publish delta set {float} sets publish delta value sets publish time interval shows publish delta value sets publish time interval shows publish time interval shows publish delta value sets sensor Min/Max measur shows sensor Min/Max measur shows sensor Min/Max measur shows sensor Min/Max measur sets set sensor Min/Max measur sets accepted connection type sets accepted connection type sets accepted connection type sets http port sets http port sets http port shows http port sets http port shows http passwd enabled set {OFF=0 ON=1} thitp part sets accepted connection type sets http password enable show shows if nables local login on/off shows if apax autorefresh enables local login on/off shows if nables local login on/off shows if nables local login enable sets http password and sets http admin password set	
extsensor (port_num) {sen_type} {sen_field} publish mode show extsensor {port_num} {sen_type} {sen_field} publish mqtt retain set {OFF=0 ON=1} extsensor {port_num} {sen_type} {sen_field} publish mqtt retain set {OFF=0 ON=1} extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor period set {24H=0 12H=1 2H=2 1H=3 30MIN=4} extsensor period set {24H=0 12H=1 2H=2 1H=3 sets sensor Min/Max measured standard sets sensor Min/Max measured sets sensor period show shows sensor Min/Max measured sets	
publish mode show extsensor {port_num} {sen_type} {sen_field} publish mqtt retain set {OFF=0 ON=1} extsensor {port_num} {sen_type} {sen_field} publish mqtt retain show extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor port_num} {sen_type} {sen_field} publish delta show extsensor period set {24H=0 12H=1 2H=2 1H=3 } and in [Max] extsensor period show http http server set {HTTP_BOTH=0 HTTPS_ONLY=1 } HTTP_ONLY=22 HTTPS_REDIR=3} http server show http port show http port show http port set {ip_port} http portsel set {ip_port} http portsel set {TLS12=0 TLS13_12=1 } TLS13=2 TLS13_12_11=3} http tis mode set {OFF=0 ON=1} http passwd enabled set {OFF=0 ON=1} http passwd enabled set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius show http passwd radius set "{passwd}" sets mttt retain sets mqtt retain set shows if mqtt retain set sets mqtt retain shows if mqtt retain set sets mqtt retain shows if mqtt retain set shows if mqtt retain set sets mptll sets mptll retain set sets mptll sets mptll retain set sets publish delta value se	
extsensor {port_num} {sen_type} {sen_field} publish mqtt retain set {OFF=0 ON=1} extsensor {port_num} {sen_type} {sen_field} publish mqtt retain show extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor period set {24H=0 12H=1 2H=2 1H=3 30MIN=4} extsensor period set {24H=0 12H=1 2H=2 1H=3 sets sensor Min/Max measur shows sensor period show extsensor period show extsensor period show extsensor period set {1TTP_BOTH=0 HTTPS_ONLY=1 sets accepted connection type that port set {port} sets http port show http portssl set {port} show http till mode set {TLS12=0 TLS13_12=1 TLS13_2 TLS13_12_11=3} http till mode show http passwd enabled set {OFF=0 ON=1} http passwd enabled set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd radius show shttp passwd radius show shttp passwd damin set "{passwd}" sets http user passwd sets hashed http user passwd sets	
publish mqtt retain set {OFF=0 ON=1} extsensor {port_num} {sen_type} {sen_field} publish mqtt retain show extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor period set {24H=0 12H=1 2H=2 1H=3 30MIN=4} extsensor period show http server set {HTTP_BOTH=0 HTTPS_ONLY=1 http port set {ip_port} http port set {ip_port} http portssl set {ip_port} http portssl set {ip_port} http portssl set {ip_port} http portssl set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http ajax enabled set {OFF=0 ON=1} http passwd enabled show http passwd enabled show http passwd enabled show http passwd enabled show http passwd local set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd radius show http passwd damin set "{passwd}" http passwd damin set "{passwd}" sets ntip retain set shows if mqtt retain set shows publish time interval sets publish time interval sets publish delta value sets publish delta value sets publish delta value shows publish delta value s	
extsensor {port_num} {sen_type} {sen_field} publish mqtt retain show extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta show extsensor period set {24H=0 12H=1 2H=2 1H=3 sets sensor Min/Max measur shows publish delta value shows publish delta value shows publish delta value sets sensor Min/Max measur shows sensor period show shows sensor Min/Max measur shows sensor period show shows sensor Min/Max measur shows sensor period show shows accepted connection type sets accepted connection sets thtp port set {ip_port} sets http port sets http port show shows http port set {ip_port} sets http port sets http port show shows http port show shows http port sets http port show shows http port sets http port show shows http port sets http port show shows if ajax autorefresh on/shows if ajax autorefresh enables ajax autorefresh enables ajax autorefresh enables local login on/off shows if local login enabled call ogin enabled login for RADIUS on shows if RADIUS login enabled sets thtp passwd radius set "(passwd)" sets http user password sets http user password sets http user password sets hashed http user password sets hash	
extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta show extsensor period set {24H=0 12H=1 2H=2 1H=3 30MIN=4} extsensor period show http http server set {HTTP_BOTH=0 HTTPS_ONLY=1 http server set {HTTP_BOTH=0 HTTPS_ONLY=1 http port set {ip_port} http port set {ip_port} http port set {ip_port} http portsel show http portsel set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http tls mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http tls mode show http passwd enabled set {OFF=0 ON=1} http passwd enabled show http passwd enabled show http passwd local show http passwd local show http passwd radius set {OFF=0 ON=1} http passwd radius set "(passwd)" http passwd radius set "(passwd)" sets publish time interval shows publish delta value sets publish delta value shows publish time interval shows publish time interval shows publish time interval	
publish timer set {num_secs} extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor port_num} {sen_type} {sen_field} publish delta show extsensor period set {24H=0 12H=1 2H=2 1H=3 } sets sensor Min/Max measur shows sensor Min/Max measur sets sensor Min/Max measur shows sensor Min/Max measur shows sensor Min/Max measur shows sensor Min/Max measur sets sensor Min/	
extsensor {port_num} {sen_type} {sen_field} publish timer show extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor period set {24H=0 12H=1 2H=2 1H=3 30MIN=4} extsensor period show http extsensor period show http server set {HTTP_BOTH=0 HTTPS_ONLY=1 HTTP_ONLY=22 HTTPS_REDIR=3} http server show http port set {ip_port} http port set {ip_port} http portssl set {ip_port} http portssl show http portssl show http is mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http tis mode show http passwd enabled show http passwd enabled show http passwd enabled show http passwd local show http passwd radius show http passwd radius show http passwd radius show http passwd dadmin set "{passwd}" http passwd hash user set "{passwd}" sets publish delta value	
publish timer show extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta set {float} extsensor period set {24H=0 12H=1 2H=2 1H=3 30MIN=4} extsensor period show http http server set {HTTP_BOTH=0 HTTPS_ONLY=1 HTTP_ONLY=22 HTTPS_REDIR=3} http port set {ip_port} http port set {ip_port} http portssl set {ip_port} http portssl show http portssl show http tis mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http tis mode show http passwd enabled set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius set *QFF=0 ON=1} http radius radius radius radius radius radius radius radius radiu	
publish delta set {float} extsensor {port_num} {sen_type} {sen_field} publish delta show extsensor period set {24H=0 12H=1 2H=2 1H=3 30MIN=4} extsensor period show http extsensor period show http server set {HTTP_BOTH=0 HTTPS_ONLY=1 HTTP_ONLY=22 HTTPS_REDIR=3} http server sow http port set {ip_port} http port set {ip_port} http portssl set {ip_port} http portssl set {ip_port} http tls mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http tls mode show http piasx enabled set {OFF=0 ON=1} http passwd enabled show http passwd enabled show http passwd local show http passwd radius set {OFF=0 ON=1} http radius radius radius radius radius radius radius radius radius r	
extsensor {port_num} {sen_type} {sen_field} publish delta show extsensor period set {24H=0 12H=1 2H=2 1H=3 } 30MIN=4} extsensor period show http extsensor period show http server set {HTTP_BOTH=0 HTTPS_ONLY=1 } http server show http port set {ip_port} http port set {ip_port} http portssl set {ip_port} http portssl set {ip_port} http portssl set {TLS12=0 TLS13_12=1 } TLS13=2 TLS13_12_11=3} http tis mode show http passwd enabled set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http radius ra	
publish delta show extsensor period set {24H=0 12H=1 2H=2 1H=3 } 30MIN=4} extsensor period show http enters cmd group "http" http server set {HTTP_BOTH=0 HTTPS_ONLY=1 } http server show http port set {ip_port} http port set {ip_port} http portssl set {ip_port} http portssl set {ip_port} http bound set {TLS12=0 TLS13_12=1 } TLS13=2 TLS13_12_11=3} http tis mode set {TLS12=0 TLS13_12=1 } http passwd enabled set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd local show http passwd radius set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http radius	
extsensor period set {24H=0 12H=1 2H=2 1H=3 30MIN=4} extsensor period show shows sensor Min/Max measur shows sensor set set sender Min/Max measur Shows enters comd group "http" sets http passwd and min set "sensor Min/Max measur set sensor Min/Max measur set set sensor Min/Max measur set set sensor Min/Max measur set set sensor Min/Max measur sets show shows sensor Min/Max measur sets show shows sensor Min/Max measur sets sets accepted connection type sets show shows accepted connect	
extsensor period show http enters cmd group "http" sets accepted connection typ http server set {HTTP_BOTH=0 HTTPS_ONLY=1 http server show http port set {ip_port} http port set {ip_port} http portssl set {ip_port} http portssl set {ip_port} http portssl show http portssl show http tls mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http tis mode show http passwd enabled set {OFF=0 ON=1} http passwd enabled set {OFF=0 ON=1} http passwd local show http passwd radius set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd local show http passwd radius show http passwd admin set "{passwd}" sets http admin password sets hashed http user passw	
http http server set {HTTP_BOTH=0 HTTPS_ONLY=1 HTTP_ONLY=22 HTTPS_REDIR=3} http server show http port set {ip_port} http port show http portssl set {ip_port} http portssl show http portssl show http portssl show http tis mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http tis mode show http passwd enabled set {OFF=0 ON=1} http passwd enabled set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http radius rad	ement period
http server set {HTTP_BOTH=0 HTTPS_ONLY=1 sets accepted connection type that per set show shows accepted connection type that port set show shows http port show sets http port show shows http port show shows https port sets its mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} restricts TLS mode restriction shows accepted connection to provide the port sets in the port shows it port shows if a port shows if a port shows if a password on shows if a password on shows if a password on shows if http password on shows if http password on shows if local login on shows if local login enabled show shows if local login enabled show shows if local login enabled show shows if RADIUS login enabled show shows if RADIUS login enabled sets http password admin set "spasswd" sets http admin password sets http admin password sets http user password sets http user password sets hashed http user password s	urement period
http server set {HTTP_BOTH=0 HTTPS_ONLY=1 sets accepted connection type http server show shows accepted connection for the sets http port set {ip_port} http port show shows http port http portssl set {ip_port} sets https port show shows https port http tls mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} restricts TLS mode restriction http ajax enabled set {OFF=0 ON=1} enables ajax autorefresh enables ajax autorefresh enables passwd enabled set {OFF=0 ON=1} enables http password enabled http passwd enabled show shows if http password enabled http passwd local set {OFF=0 ON=1} enables local login enabled http passwd radius set {OFF=0 ON=1} enables local login enabled http passwd radius set {OFF=0 ON=1} enables local login enabled http passwd radius set {OFF=0 ON=1} enables local login enabled show shows if RADIUS login enabled sets http passwd radius set "{passwd}" sets http user password sets http user password http passwd damin set "{passwd}" sets hashed http user password sets hashed http user passwor	
http port set {ip_port} http port set {ip_port} http portsel show http portsel show http is mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http tis mode show http ajax enabled set {OFF=0 ON=1} http passwd enabled set {OFF=0 ON=1} http passwd enabled set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius show http passwd radius show http passwd admin set "{passwd}" sets http admin password http passwd hash user set "{passwd}" sets hashed http user passw	
http port set {ip_port} http port show http portsl set {ip_port} http portsl set {ip_port} http portsl set {ip_port} http portsl show http portsl show http portsl show http shows https port http tls mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http tls mode show http ajax enabled set {OFF=0 ON=1} http ajax enabled show http passwd enabled set {OFF=0 ON=1} http passwd enabled show http passwd local set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd local show http passwd radius show http passwd radius show http passwd user set "{passwd}" sets http admin password http passwd hash user set "{passwd}" sets hashed http user passw	es
http port show http portssl set {ip_port} http portssl set {ip_port} http portssl show http tis mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http tis mode show http ajax enabled set {OFF=0 ON=1} http passwd enabled set {OFF=0 ON=1} http passwd enabled show http passwd enabled show http passwd local set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd radius show http passwd user set "{passwd}" sets http admin password http passwd hash user set "{passwd}" sets hashed http user passw	ypes
http portssl set {ip_port} http portssl show http tls mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http tls mode show http ajax enabled set {OFF=0 ON=1} http passwd enabled set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http radius radi	
http portssl show http tls mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http tls mode show http ajax enabled set {OFF=0 ON=1} http passwd enabled set {OFF=0 ON=1} http passwd enabled show http passwd enabled show http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius show http passwd radius show http passwd set "{passwd}" sets http user password http passwd hash user set "{passwd}" sets hashed http user passw	
http tls mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3} http tls mode show http ajax enabled set {OFF=0 ON=1} http passwd enabled set {OFF=0 ON=1} http passwd enabled set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd radius show http passwd radius show http passwd set set "{passwd}" sets http user password http passwd hash user set "{passwd}" sets hashed http user passw	
http tls mode show shows TLS mode restriction http ajax enabled set {OFF=0 ON=1} enables ajax autorefresh on/n http ajax enabled show shows if ajax autorefresh enables http passwd enabled show shows if http password on/off http passwd local set {OFF=0 ON=1} enables local login on/off http passwd local show shows if local login enabled http passwd radius set {OFF=0 ON=1} enables login for RADIUS on shows if RADIUS on shows if RADIUS login enabled http passwd radius show shows if RADIUS login enabled http passwd user set "{passwd}" sets http admin password sets http admin password sets hashed http user passw	
http ajax enabled set {OFF=0 ON=1} enables ajax autorefresh on/http ajax enabled show shows if ajax autorefresh enablet passwd enabled set {OFF=0 ON=1} enables http password on/off http passwd local set {OFF=0 ON=1} enables local login on/off http passwd local set {OFF=0 ON=1} enables local login on/off http passwd local show shows if local login enabled enables login for RADIUS on http passwd radius set {OFF=0 ON=1} enables login for RADIUS on shows if RADIUS login enable http passwd user set "{passwd}" sets http user password sets http admin password http passwd hash user set "{passwd}" sets hashed http user passw	
http ajax enabled show http passwd enabled set {OFF=0 ON=1} http passwd enabled set {OFF=0 ON=1} http passwd enabled show http passwd local set {OFF=0 ON=1} http passwd local set {OFF=0 ON=1} http passwd local show http passwd radius set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd radius set {OFF=0 ON=1} http passwd radius show http passwd radius show http passwd user set "{passwd}" sets http user password http passwd admin set "{passwd}" sets http admin password http passwd hash user set "{passwd}" sets hashed http user passw	off
http passwd enabled set {OFF=0 ON=1} enables http password on/off shows if http password enabled show shows if http password enables local login on/off enables local login enabled show shows if local login enabled http passwd radius set {OFF=0 ON=1} enables login for RADIUS on shows if RADIUS login enables login for RADIUS login enables login enables login for RADIUS login enables login f	
http passwd local set {OFF=0 ON=1} enables local login on/off http passwd local show shows if local login enabled http passwd radius set {OFF=0 ON=1} enables login for RADIUS on http passwd radius show shows if RADIUS login enable http passwd user set "{passwd}" sets http user password http passwd admin set "{passwd}" sets http admin password http passwd hash user set "{passwd}" sets hashed http user passw	
http passwd local show http passwd radius set {OFF=0 ON=1} http passwd radius show http passwd radius show http passwd user set "{passwd}" http passwd admin set "{passwd}" sets http user password http passwd hash user set "{passwd}" sets hashed http user passw	ed
http passwd radius set {OFF=0 ON=1} enables login for RADIUS on http passwd radius show shows if RADIUS login enable show sets http user password http passwd admin set "{passwd}" sets http admin password http passwd hash user set "{passwd}" sets hashed http user password sets http user p	
http passwd radius show http passwd user set "{passwd}" sets http user password http passwd admin set "{passwd}" sets http admin password http passwd hash user set "{passwd}" sets hashed http user passw	/off
http passwd user set "{passwd}" sets http user password http passwd admin set "{passwd}" sets http admin password http passwd hash user set "{passwd}" sets hashed http user passw	
http passwd hash user set "{passwd}" sets hashed http user passw	
nup passwu nasn admin set {passwu} sets nasned nttp admin pass	
	word
ip4 enters cmd group "ip4"	
ip4 hostname set "{name}" sets device hostname	
ip4 hostname show shows device hostname	3
ip4 address set "{ip_address}" sets IPv4 address	2
ip4 address show shows IPv4 address ip4 netmask set "{ip address}" sets IPv4 netmask	3
ip4 netmask set \text{\text{ip_address}} sets if \forall \text{\text{retmask}} sets if \forall \text{r	
ip4 gateway set "{ip_address}" sets IPv4 gateway address	3
ip4 gateway show shows IPv4 gateway address	3
ip4 dns set "{ip_address}" sets IPv4 DNS server addres ip4 dns show shows IPv4 DNS server addres	3
ip4 dhcp enabled set {OFF=0 ON=1} enables IPv4 DHCP on/off	3 3 ss
ip4 dhcp enabled show shows IPv4 DHCP state	3 3 ss

ip6	enters cmd group "ip6"	
ip6 enabled set {OFF=0 ON=1}	enables IPv6 on/off	
ip6 enabled show	shows if IPv6 is enabled	3
ip6 routadv enabled set {OFF=0 ON=1} ip6 routadv enabled show	enables IPv6 router advertisement shows IPv6 router advertisement state	3
ip6 dhcp enabled set {OFF=0 ON=1}	enables IPv6 DHCP on/off	<u> </u>
ip6 dhcp enabled show	shows if IPv6 DHCP is enabled	3
ip6 address show	show all IPv6 addresses	4
ip6 gateway show	show all IPv6 gateways show all IPv6 DNS server	4
ip6 dns show ip6 manual enabled set {OFF=0 ON=1}	enables manual IPv6 addresses	4
ip6 manual enabled show	shows if manual IPv6 addresses are enabled	3
ip6 manual address {14} set "{ip_address}"	sets manual IPv6 address	
ip6 manual address {14} show	shows manual IPv6 address	3
ip6 manual gateway set "{ip_address}" ip6 manual gateway show	sets manual IPv6 gateway address shows manual IPv6 gateway address	3
ip6 manual dns {12} set "{ip_address}"	sets manual IPv6 DNS server address	J
ip6 manual dns {12} show	shows manual IPv6 DNS server address	3
ipacl ipacl ping enabled set {OFF=0 ON=1}	enters cmd group "ipacl" enables ICMP ping on/off	
ipacl ping enabled set {Off =0 Off=1}	shows if ICMP ping enabled	
ipacl enabled set {OFF=0 ON=1}	enable IP filter on/off	
ipacl enabled show	shows if IP filter enabled	
ipacl filter (ipacl_num) set "{dns_name}"	sets IP filter (ipacl_num)	
ipacl filter {ipacl_num} show	shows IP filter {ipacl_num}	
linesensor	enters cmd group "linesensor"	
linesensor all {field_list} show	shows energy sensors according field list of all line	5
illieselisti ali fileid_list/ silow	sensors	<u> </u>
linesensor {line_num} {field_list} show	shows energy sensors according field list of one	5
linesensor {line_num} {energy_sensor} value show	line sensor vshows energy sensor of given line	5
linesensor {line num} ovp show	show state of Overvoltage Protection	
linesensor {line_num} counter reset	resets energy metering counter	
linesensor {line_num} label set "{name}"	sets line meter to label	
linesensor {line_num} label show linesensor {line num} {energy sensor} events set	shows label of line meter	
{OFF=0 ON=1}	enables events on/off	
linesensor {line_num} {energy_sensor} events show	shows if events are enabled	
linesensor {line_num} {energy_sensor} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2	2 enables different event types	
,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER =5}"	? 	
linesensor {line_num} {energy_sensor} events type show	shows what event types are enabled	
linesensor {line_num} {energy_sensor} maxval set {float}	sets maximum value for line meter	
linesensor {line_num} {energy_sensor} maxval show	shows maximum value for line meter	
linesensor {line_num} {energy_sensor} minval set {float}	sets minimum value for line meter	
linesensor {line_num} {energy_sensor} minval show	shows minimum value for line meter	
linesensor {line_num} {energy_sensor} hyst set {float}	sets hysterese value for line meter	
linesensor {line_num} {energy_sensor} hyst show	shows hysterese value for line meter	
linesensor {line_num} {energy_sensor} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3}	sets publish mode	
linesensor {line_num} {energy_sensor} publish mode show	shows publish mode	
linesensor {line_num} {energy_sensor} publish mqtt retain set {OFF=0 ON=1}	sets mqtt retain	
linesensor {line_num} {energy_sensor} publish mqtt retain show	shows if mqtt retain set	
linesensor {line_num} {energy_sensor} publish timer set {num_secs}	sets publish time interval	
linesensor {line_num} {energy_sensor} publish timer show	shows publish time interval	
linesensor {line_num} {energy_sensor} publish delta set {float}	sets publish delta value	
linesensor {line_num} {energy_sensor} publish delta show	shows publish delta value	

	LEGACY - enables events on/off L
inesensor (line_num) events show	LEGACY - shows if events are enabled L
inesensor {line_num} events type set {EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2	
EVT SMS=3,EVT GSMEMAIL=4,EVT BEEPER	
:5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}"	,,
nesensor {line num} events type show	LEGACY - shows what event types are enabled L
nesensor {line_num} maxval set {float}	LEGACY - sets maximum value for line meter L
nesensor {line_num} maxval show	LEGACY - shows maximum value for line meter L
inesensor (line_num) minval set (float)	LEGACY - sets minimum value for line meter L
inesensor {line_num} minval show inesensor {line_num} hyst set {float}	LEGACY - shows minimum value for line meter LEGACY - sets hysterese value for line meter L
nesensor {line_num} hyst show	LEGACY - shows hysterese value for line meter L
nodbus	enters cmd group "modbus"
nodbus enabled set <off=0 on="1"></off=0>	enables Modbus TCP support
modbus enabled show	shows if Modbus is enabled
nodbus port set <ip_port> nodbus port show</ip_port>	sets Modbus TCP port shows Modbus TCP port
noubus port snow	
nqtt nqtt {broker_idx} enabled set {OFF=0 ON=1}	enters cmd group "mqtt"
ngtt {broker_idx} enabled set {OFF=U ON=1} ngtt {broker_idx} enabled show	enable mqtt shows if mqtt enabled
ngtt {broker_idx} enabled show ngtt {broker_idx} server set "{dns_name}"	sets broker name
nqtt {broker_idx} server show	shows broker name
1 ()	enable TLS
nqtt {broker_idx} tls enabled show	shows if TLS enabled
nqtt {broker_idx} port set {ip_port} nqtt {broker idx} port show	set broker TCP/IP port shows broker TCP/IP port
ngtt {broker_idx} port snow ngtt {broker_idx} user set "{username}"	sets username
nqtt {broker_idx} user show	shows username
nqtt {broker_idx} passwd set "{passwd}"	sets password
nqtt {broker_idx} passwd hash set "{passwd}"	sets hashed passwd
nqtt {broker_idx} client set "{name}"	sets client name shows client name
nqtt {broker_idx} client show nqtt {broker_idx} qos set {QOS0=0 QOS1=1}	sets QoS level
mqtt {broker_idx} qos show	shows QoS level
mqtt {broker_idx} keepalive set {num_secs}	sets keep-alive time
nqtt {broker_idx} keepalive show	shows keep-alive time
nqtt {broker_idx} topic set "{name}"	sets topic prefix
nqtt {broker_idx} topic show nqtt {broker_idx} console enabled set {OFF=0	shwos topic prefix
ON=1}	permit console cmds
mqtt {broker_idx} console enabled show	shows if console cmds allowed
mqtt {broker_idx} device data timer set	sets telemetry interval
num_secs} nqtt {broker_idx} device data timer show	shows telemetry interval
radius	enters cmd group "radius"
adius {PRIMARY=0 SECONDARY=1} enabled	enables radius client
set <off=0 on="1"> radius {PRIMARY=0 SECONDARY=1} enabled</off=0>	
show	show if radius client enabled
adius {PRIMARY=0 SECONDARY=1} server set <dns_name>"</dns_name>	sets radius server address
adius {PRIMARY=0 SECONDARY=1} server	shows radius server address
adius {PRIMARY=0 SECONDARY=1} password set "{passwd}"	sets radius server shared secret
radius {PRIMARY=0 SECONDARY=1} password	sets radius server crypted shared secret
nash set "{nasswd}"	
rash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth	sets server request timeout
adius {PRIMARY=0 SECONDARY=1} auth imeout set {num_secs} adius {PRIMARY=0 SECONDARY=1} auth	shows server request timeout
lash set {passwd} adius {PRIMARY=0 SECONDARY=1} auth imeout set {num_secs} adius {PRIMARY=0 SECONDARY=1} auth imeout show adius {PRIMARY=0 SECONDARY=1} retries set	shows server request timeout
lash set "{passwd}" adius {PRIMARY=0 SECONDARY=1} auth imeout set {num_secs} adius {PRIMARY=0 SECONDARY=1} auth imeout show adius {PRIMARY=0 SECONDARY=1} retries set 099}	shows server request timeout sets server number of retries
radius {PRIMARY=0 SECONDARY=1} auth imeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth imeout show radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries show	shows server request timeout sets server number of retries shows server number of retries
lash set "{passwd}" adius {PRIMARY=0 SECONDARY=1} auth imeout set {num_secs} adius {PRIMARY=0 SECONDARY=1} auth imeout show adius {PRIMARY=0 SECONDARY=1} retries set 099} adius {PRIMARY=0 SECONDARY=1} retries show adius chap enabled set <off=0 on="1"></off=0>	shows server request timeout sets server number of retries shows server number of retries enables CHAP
lash set "{passwd}" adius {PRIMARY=0 SECONDARY=1} auth imeout set {num_secs} adius {PRIMARY=0 SECONDARY=1} auth imeout show adius {PRIMARY=0 SECONDARY=1} retries set 099} adius {PRIMARY=0 SECONDARY=1} retries show adius chap enabled set <off=0 on="1"> adius chap enabled show</off=0>	shows server request timeout sets server number of retries shows server number of retries
radius {PRIMARY=0 SECONDARY=1} auth imeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth imeout show radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries	shows server request timeout sets server number of retries shows server number of retries enables CHAP shows if CHAP is enabled

radius default timeout show	shows default session timeout
snmp	enters cmd group "snmp"
snmp port set {ip_port}	sets SNMP UDP port
snmp port show	shows SNMP UDP port
snmp snmpget enabled set {OFF=0 ON=1}	enables SNMP GET cmds on/off
snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1}	show if SNMP GET cmds are enabled enables SNMP SET cmds on/off
snmp snmpset enabled show	show if SNMP SET cmds are enabled
snmp snmpv2 enabled set {OFF=0 ON=1}	enables SNMP v2 on/off
nmp snmpv2 enabled show	show if SNMP v2 is enabled
snmp snmpv2 public set "{text}"	enables SNMP v3 on/off
snmp snmpv2 public show	show if SNMP v3 isenabled
snmp snmpv2 private set "{text}" snmp snmpv2 private show	sets SNMP v2 public cummnity shows SNMP v2 public community
connip shiftpy2 private show snmp system {CONTACT=0 NAME=1 COCATION=2} set "{text}"	sets sysLocation/sysName/sysContact
nmp system {CONTACT=0 NAME=1 _OCATION=2} show	gets sysLocation/sysName/sysContact
nmp snmpv3 enabled set {OFF=0 ON=1}	sets SNMP v2 private community
nmp snmpv3 enabled show	shows SNMP v2 private community
snmp snmpv3 username set "{text}"	sets SNMP v3 username
snmp snmpv3 username show snmp snmpv3 authalg set {NONE=0 MD5=1	shows SNMP v3 username
SHITP STITTED STATE OF THE SHITE SHI	sets SNMP v3 authentication show SNMP v3 authentication algorithm
snmp snmpv3 grivalg set {NONE=0 DES=1	2.12.1 2.1111 TO GGG ISTIGGGGOTT GIGOTTITITI
BDES=2 AES128=3 AES192=4 AES256=5 AES192*=6 AES256*=7}	sets SNMP v3 privacy algorithm
snmp snmpv3 privalg show	show SNMP v3 privacy algorithm
nmp snmpv3 authpasswd set "{passwd}"	sets SNMP v3 authentication password
snmp snmpv3 privpasswd set "{passwd}"	sets SNMP v3 privacy password
cnmp snmpv3 authpasswd hash set "{passwd}" cnmp snmpv3 privpasswd hash set "{passwd}"	sets SNMP v3 authentication hashed password sets SNMP v3 privacy hashed password
snmp trap type set {NONE=0 V1=1 V2=2 V3=3}	sets type of SNMP traps
nmp trap type show	show SNMP trap type
nmp trap receiver {trap_num} set "{dns_name}"	sets address and port of SNMP trap receiver {trap_num}
snmp trap receiver {trap_num} show	show address and port of SNMP trap receiver {trap_num}
syslog	enters cmd group "syslog"
syslog enabled set {OFF=0 ON=1}	enables syslog msgs on/off
syslog enabled show	show if syslog enabled
syslog server set "{dns_name}"	sets address of syslog server
syslog server show	shows address of syslog server
	antone and analys llavatorall
system system restart	enters cmd group "system" restarts device
system festalt system fabsettings	restore fab settings and restart device
system bootloader	enters bootloader mode
system flushdns	flush DNS cache
system uptime	number of seconds the device is running
system name show	shows device name
system version show	shows actual firmware version
system display {disp_num} default extsensor port_num} {sen_type} set {sen_field} system display {disp_num} default linesensor	shows external sensor
line_num} set {sen_field} system display {disp_num} default set	shows energy line sensor
BLANK=0,LOCAL_TIME=1,UTC_TIME=2} ystem display {disp_num} default show	shows other contents shows default setting for display
	sets hashed display setting
ystem display default hash show	shows hashed display setting
system display default hash show system display brightness set {brightness_num}	sets display brightness
system display default hash show system display brightness set {brightness_num} system display brightness show	sets display brightness shows display brightness
system display default hash show system display brightness set {brightness_num} system display brightness show system panel enabled set {OFF=0 ON=1}	sets display brightness
system display default hash set "{data}" system display default hash show system display brightness set {brightness_num} system display brightness show system panel enabled set {OFF=0 ON=1} system panel enabled show imer	sets display brightness shows display brightness blocks panel buttons when not enabled shows if panel buttons are enabled
system display default hash show system display brightness set {brightness_num} system display brightness show system panel enabled set {OFF=0 ON=1} system panel enabled show imer	sets display brightness shows display brightness blocks panel buttons when not enabled
system display default hash show system display brightness set {brightness_num} system display brightness show system panel enabled set {OFF=0 ON=1} system panel enabled show simer simer enabled set {OFF=0 ON=1}	sets display brightness shows display brightness blocks panel buttons when not enabled shows if panel buttons are enabled enters cmd group "timer"
system display default hash show system display brightness set {brightness_num} system display brightness show system panel enabled set {OFF=0 ON=1} system panel enabled show imer imer enabled set {OFF=0 ON=1} imer enabled show imer syslog facility set {023}	sets display brightness shows display brightness blocks panel buttons when not enabled shows if panel buttons are enabled enters cmd group "timer" enables timer functions
system display default hash show system display brightness set {brightness_num} system display brightness show system panel enabled set {OFF=0 ON=1} system panel enabled show imer imer enabled set {OFF=0 ON=1} imer enabled show imer syslog facility set {023} imer syslog facility show	sets display brightness shows display brightness blocks panel buttons when not enabled shows if panel buttons are enabled enters cmd group "timer" enables timer functions shows if timer a enabled sets facility level for timer syslog shows facility level for timer syslog
system display default hash show system display brightness set {brightness_num} system display brightness show system panel enabled set {OFF=0 ON=1} system panel enabled show imer imer enabled set {OFF=0 ON=1} imer enabled show imer syslog facility set {023}	sets display brightness shows display brightness blocks panel buttons when not enabled shows if panel buttons are enabled enters cmd group "timer" enables timer functions shows if timer a enabled sets facility level for timer syslog

© 2021 GUDE Systems GmbH

timer {rule num} enabled show	shows if rule is enabled
timer {rule_num} name set "{name}"	sets name of rule
timer {rule num} name show	shows name of rule
timer (rule_num) {FROM=0 UNTIL=1} set "{yyyy-mm-dd}"	sets date range of rule
timer {rule num} {FROM=0 UNTIL=1} show	shows date range of rule
timer {rule num} trigger jitter set {065535}	sets jitter for rule
timer {rule num} trigger jitter show	show jitter of rule
timer {rule num} trigger random set {0100}	sets probability for rule
timer {rule_num} trigger random show	shows rule probability
timer {rule_num} trigger {HOUR=0 MIN=1 SEC=2 DAY=3 MON=4 DOW=5} set "{time_date_list}"	sets time date list
timer {rule_num} trigger {HOUR=0 MIN=1 SEC=2 DAY=3 MON=4 DOW=5} show	shows time date list
timer {rule_num} action mode set {SWITCH=1 CLI=2}	sets switch or cli cmd
timer {rule_num} action mode show	shows if switch or cli cmd
timer {rule_num} action {SWITCH1=0 SWITCH2=1} {OFF=0 ON=1} set "{port_list}"	sets port list for switch cmd
timer {rule_num} action {SWITCH1=0 SWITCH2=1} {OFF=0 ON=1} show	shows port list for switch cmd
timer {rule_num} action delay set {065535}	delay between cmds
timer {rule_num} action delay show	shows delay between cmds
timer {rule_num} action console set "{cmd}"	sets cmd string
timer {rule_num} action console show	shows cmd string
timer {rule_num} action hash set "{data}"	sets action binary form
timer {rule_num} action hash show	shows action binary form
timer {rule_num} delete	delete one timer
timer delete all	delete all timer
vt100	enters cmd group "vt100"
vt100 echo set {OFF=0 ON=1}	sets console echo state
vt100 echo show	shows console echo state
vt100 numeric set {OFF=0 ON=1}	sets numeric mode
vt100 numeric show	shows numeric mode state
vt100 reset	resets terminal

Notes

- Legacy The command has been replaced by a newer version
 Command can be entered on any level
- 3. the output may show 2 lines the 1st line shows the actual state, the 2nd line the status after reboot
- 4. the output may show several lines
- 5. Please see the **Energy Sensor Table** for the right energy index
- 6. Please see the External Sensor Field Table for the right sensor index

Energy Sensor Table "{energy_sensor}"

Index	Description	Unit
0	Forward Active Energy	Wh
1	Power Active	W
2	Voltage	V
3	Current	Α
4	Frequency	0.01 hz
5	Power Factor	0.001
6	Power Angle	0.1 degree
7	Power Apparent	VA
8	Power Reactive	VAR
9	Forward Active Energy Resettable	Wh
10	Forward Reactive Energy	VARh
11	Forward Reactive Energy Resettable	VARh
12	Reset Time - sec. since last Energy Counter Reset	S
13	Reverse Active Energy	Wh
14	Reverse Reactive Energy	VARh

15	Reverse Active Energy Resettable	Wh
16	Reverse Reactive Energy Resettable	VARh
17	Absolute Active Energy	Wh
18	Absolute Reactive Energy	VARh
19	Absolute Active Energy Resettable	Wh
20	Absolute Reactive Energy Resettable	VARh
21	Residual Current	Α

Dependent on the device model Residual Current may not be supported

External Sensor Type Table "{7x01=0|7x02=1|7x03=2}"

Index	Description	Products
0	Temperature	7001, 7101, 7201
1	Temperature, Humidity	7002, 7102, 7202
2	Temperature, Humidity, Air Pressure	7003, 7103, 7203

External Sensor Field Table "{sen_field}"

Index	Description	Unit
0	Temperature	°C
1	Humidity	%
2	Digital Input	bool
3	Air Pressure	hPa
4	Dew Point	°C
5	Dew Point Temperature Difference	°C

Modbus TCP 4.9

If Modbus TCP is activated in the configuration, the ports (relays, outputs, eFuses) can be switched and the following data is callable:

Address range overview:

Device Resource	Start	End	Modbus Data Type
Power/Output/eFuse Ports	0x000	0x3ff	Coils
DC Inputs	0x400	0x7ff	Discrete Inputs
Stop Condition active	0x800	0x800	Discrete Inputs
POE active	0x801	0x801	Discrete Inputs
Status Power Sources	0x1000	0x100f	Discrete Inputs
OVP active (Line-Ins)	0x1010	0x101f	Discrete Inputs
eFuse Errors	0x1100	0x11ff	Discrete Inputs
Info Area	0x000	0x005	Input Registers
CPU Sensor values	0x080	0x083	Input Registers
External Sensors	0x100	0x1ff	Input Registers
Fan Level	0x200	0x20f	Input Registers
Line Energy Sensors	0x400	0x39ff	Input Registers
Port Energy Sensors	0x3a00	0x81ff	Input Registers
Bank Energy Sensors	0x8200	0x823f	Input Registers
Power Source Sensors	0x8240	0x827f	Input Registers
Residual Current Monitor	0x8280	0x82cf	Input Registers
Bank Power Source Select	0x000	0x00f	Holding Registers

Fan Mode 0x010 0x01f Holding Registers
--

This chapter is general for all Gude devices. Depending on the device type, some ports or certain sensors are not available.

All calculations in this chapter are based on addresses starting at "0". For some Modbus TCP Utilities, however, the addresses start at 1, in which case a 1 must be added to the addresses in this chapter. Please try both possibilities for tests!

The Unit-ID is ignored because the device is uniquely identified by its IP address.

Supported Modbus TCP Functions

Function	Request Code
Read Coils	0x01
Read Discrete Inputs	0x02
Write Single Coil	0x05
Write Multiple Coils	0x0f
Read Input Registers	0x04
Read Holding Registers	0x03
Write Holding Register	0x06
Write Multiple Holding Registers	0x10
Read Device Identification	0x2B / 0x0E

Coils

Device Resource	Start	End	Device Function
Power/Output/eFuse	0x000	0x3ff	Coil represens Port State

Discrete Inputs

Device Resource	Start	End	Function when set
DC Inputs	0x400	0x7ff	Input logically 1
Stop Condition active	0x800	0x800	Stop Input active
POE active	0x801	0x801	POE active
Status Power Sources	0x1000	0x100f	Power Source active
OVP active (Line-Ins)	0x1010	0x101f	OVP active
eFuse Error	0x1100	0x11ff	eFuse Error

Status Power Sources	Offset
EPC 8221 / 8226	0 = Bank A, 1 = Bank B
ENC 2111 / 2191	0 = Pwr1, 1 = Pwr2
ESB 7213 / 7214	0 = Pwr1, 1 = Pwr2 (only 7214)

Input Registers

Device Resource	Start	End	Function
Info Bereich	0x000	0x005	see table
CPU Sensor values	0x080	0x083	see table
Externe Sensoren	0x100	0x1ff	see table
Fan Level	0x200	0x20f	0 (aus) bis 3 (maximal)
Line Energy Sensors	0x400	0x39ff	see table
Port Energy Sensors	0x3a00	0x81ff	see table
Bank Energy Sensors	0x8200	0x823f	see table
Power Source Sensors	0x8240	0x827f	see table
Residual Current Monitor	0x8280	0x82cf	see table

Info Area

Address	Width	Information
0	16-bit	Number of Ports (Relay)
1	16-bit	Number of Ports (Outlets) with
		Energy Measurement
2	16-bit	Number of Banks
3	16-bit	Number of Line-In
4	16-bit	Phases per line
5	16-bit	Number of Inputs

Sensor Type Description

Address	Width	Information
0x080 to 0x083	16-bit (signed	CPU Sensor values
0x100 to 0x1ff	16-bit (signed)	external Sensors
0x400 to 0x39ff	32-bit (signed)	Line Energy Sensors
0x3a00 to 0x81ff	32-bit (signed)	Port Energy Sensors
0x8200 to 0x823f	16-bit (signed)	Bank Energy Sensors
0x8240 to 0x827f	16-bit (signed)	Power Source Energy Sensors
0x8280 to 0x82cf	16-bit (signed)	Residual Current Monitor

CPU Sensor Values

Offset	Sensor Field	Unit
0	Vsystem	0.01 V
1	Vaux	0.01 V
2	Vmain	0.01 V
3	CPU Temperature	0.1 °C

External Sensors:

The measured value of the external sensors are coded as fixed point arithmetic. For a factor of e.g. 0.1 in the unit the value must be divided by 10 in order to reach the real measured value. A value of 0x8000 means that no sensor is plugged into the corresponding port, or the corresponding field in the sensor is not available. The formula for the address is (the port numbers start at zero):

0x100 + Port * 8 + Offset

In the Expert Sensor Box 7213 / 7214 the internal sensor corresponds to the value Port = 0, and is coded Port = 1 for Sensor 2 and Port = 2 for Sensor 3.

Offset	Sensor Field	Unit
0	Temperature	0.1 °C
1	Humidity	0.1 %
2	Digital Input	bool
3	Air Pressure	1 hPa (millibar)
4	Dew Point	0.1 °C
5	Dew Point Difference	0.1 °C

For example, the humidity of the second port has the address: 0x100 + 1 * 8 + 1 = 0x109

Energy Sensors:

We distinguish the line sensors (which correspond to the input circuits) and the port sensors, which measure the energy that is passed over the switched port. The measured values of the energy sensors are returned as signed 32-bit integers. The high-order 16-bits are starting on the even address, followed by the low-order 16-bits on the odd address. To calculate the address, there are the following formulas (the values for line, port and phase start at zero):

Line: 0x0400 + Line * 0x120 + Phase * 0x60 + Offset * 2

Port: 0x3a00 + Port * 0x120 + Phase * 0x60 + Offset * 2



For devices with only one phase, the phase is set to zero in the formula.

Examples:

"Power Active" for 1st line sensor and 3rd phase: 0x400 + 0 * 0x120 + 2 * 0x60 + 1 * 2 = 0x4C2

"Voltage" for 2nd line sensor and single phase device: 0x400 + 1 * 0x120 + 2 * 2 = 0x524

"Power Angle" for 4th port sensor and single phase device: 0x3a00 + 3 * 0x120 + 6 * 2 = 0x3d6c

Offset	Sensor Field	Unit
0	Absolute Active Energy	Wh
1	Power Active	W
2	Voltage	V
3	Current	mA
4	Frequency	0.01 hz
5	Power Factor	0.001
6	Power Angle	0.1 degree
7	Power Apparent	VA
8	Power Reactive	VAR
9	Absolute Active Energy Resettable	Wh
10	Absolute Reactive Energy	VARh
11	Absolute Reactive Energy Resettable	VARh
12	Reset Time - sec. since last Energy Counter Reset	S
13	Forward Active Energy	Wh
14	Forward Reactive Energy	VARh
15	Forward Active Energy Resettable	Wh
16	Forward Reactive Energy Resettable	VARh
17	Reverse Active Energy	Wh
18	Reverse Reactive Energy	VARh

19	Reverse Active Energy Resettable	Wh
20	Reverse Reactive Energy Resettable	VARh
21	Residual Current Type A	mA
22	Neutral Current	mA

Whether the measured values "Residual Current" and "Neutral Current" are supported depends on the respective device model. For measured values such as "Neutral Current", which are independent of the phase, the same value is returned for all phases.

DC Energy Sensors:

With the EPC 8291 / 8290 devices, the voltage and current of the individual banks and voltage sources can be read out. The measured values of the energy sensors are returned as signed 16-bit integers. The following formulas are available for the address (the values for Bank and PowerSrc start at zero):

Bank: 0x8200 + Bank * 2 + Offset

Power Source: 0x8240 + PowerSrc * 2 + Offset

Examples:

"Voltage" at third bank: 0x8200 + 2 * 2 + 0 = 0x8204

"Current" at first PowerSrc: 0x8240 + 0 * 2 + 1 = 0x8241

Offset	Sensor Field	Unit
0	Voltage	0.01 V
1	Current	mA

Residual Current Monitor Type B (RCMB):

Devices with a Residual Current Monitor Type B (RCMB) module separately measure the RMS and DC fault current components of the input supply. The values are returned as signed 16-bit integers. The following formulas are used for the address (the module number starts at zero):

Bank: 0x8280 + ModuleNo * 8 + Offset.

Examples:

"Residual Current DC" at first module: 0x8280 + 0 * 8 + 1 = 0x8281.

"Output DC" for second module: 0x8280 + 1 * 8 + 3 = 0x828b

Offset	Sensor Field	Unit
0	Residual Current RMS Type B	0.1 mA
1	Residual Current DC Type B	0.1 mA
2	Output RMS	bool
3	Output DC	bool
4	Module State	

Whether a Residual Current Monitor Type B (RCMB) module is present depends on the particular device model.

Holding Registers

Device Resource	Start	End	Function
Bank Power Source	0x000	0x00f	Sets Power Source for Bank
Fan Mode	0x010	0x01f	0 = Automatic / 1 = Maximum

Device Identification

Returns manufacturer name and device identification:

Request Code	1 Byte	0x2b
MEI Type	1 Byte	0x0e
Read Dev ID code	1 Byte	0x01
Object Id	1 Byte	0x00

Response Code	1 Byte	0x2b
MEI Type	1 Byte	0x0e
Read Dev ID code	1 Byte	0x01
Conformity Level	1 Byte	0x01
More Follows	1 Byte	0x00
NextObjectID	1 Byte	0x00
Number of Objects	1 Byte	0x03
Object ID	1 Byte	0x00
Object Length	1 Byte	n1
Object Value	n1 Bytes	"Company Id"
Object ID	1 Byte	0x00
Object Length	1 Byte	n2
Object Value	n2 Bytes	"Product Id"
Object ID	1 Byte	0x00
Object Length	1 Byte	n3
Object Value	n3 Bytes	"Product Version"

4.10 MQTT

This device supports MQTT 3.1.1 to send configured messages and also to receive commands. This chapter is general for all Gude devices, some Gude models do not have switchable ports.

- Default port for an unencrypted connection is port 1883.
- Default port for a TLS secured connection is port 8883.
- If the broker allows anonymous login, username and password are arbitrary, but a username must be specified.
- If multiple MQTT clients are connected to a broker, the names of the clients must be different. For this reason, "client_xxxx" is generated as the default name. Here "xxxx" are the last 4 digits of the MAC address.

Message format

The MQTT messages of the device are always sent in JSON format. E.G..

```
{"type": "portswitch", "idx": 2, "port": "2", "state": 1, "cause": {"id": 2, "txt": "http"}, "ts": 1632}
```

This is a switching of the second port to the state on. The source of the switching command is CGI ("http"). The index is always numeric, "port" can also be alphanumeric for devices with multiple banks, e.g. "A2". At the end follows a timestamp ("ts"), which indicates the number of seconds the device is on, or unixtime if the device has synchronized with an NTP server.

MQTT Topic Prefix

The topic prefix for the messages can be set in the MQTT configuration. A default would be e.g. "de/gudesystems/epc/[mac]". Here "[mac]" is a placeholder for the MAC address of the device, another possible placeholder is "[host]", which contains the host name. An example topic for a switching message of the second port would then be:

"de/gudesystems/epc/00:19:32:01:16:41/switch/2".

Executing console commands

The device can be controlled remotely via MQTT using console commands. A list of all commands can be found in the Console of chapter. Depending on the topic, the commands are accepted in different formats.

As default the execution of commands is not allowed, but must be enabled in the MQTT configuration! ("Permit CLI commands")

Format 1: Command in JSON Syntax

```
Publish Topic: "de/gudesystems/epc/00:19:32:01:16:41/cmd" Publish Message: "{"type": "cli", "cmd": "port 2 state set 1", "id": 10}"
```

Response from device to "de/gudesystems/epc/00:19:32:01:16:41/cmdres" "{"type": "cli", "cmdres": ["OK."], "result": {"num": 0, "hint": "ok"}, "id": 10}"

The JSON object "result" returns whether the command was valid. The object "id" in the command is optional and is passed through in the response from the device. The passed number can help to establish a synchronicity between command and response via the broker.

Format 2: Raw Text

Publish Topic: "de/gudesystems/epc/00:19:32:01:16:41/cmd/cli" Publish Message: "port 2 state set 1".

Response from device to "de/gudesystems/epc/00:19:32:01:16:41/cmdres/cli" "OK."

Format 3: Simplified port switching

Publish Topic: "de/gudesystems/epc/00:19:32:01:16:41/cmd/port/2" Publish Message: "0" or "1".

Response from device to "de/gudesystems/epc/00:19:32:01:16:41/cmdres/port/2" "0" or "1"

🦊 This special form exists only for the port switching commands.

Device Data Summary

In the **Device Data Summary** the most important data of the device are summarized in a JSON object and sent periodically in a configurable time interval. This summary depends on the properties of the device and the connected sensors, and could look like this:

Topic: en/gudesystems/epc/00:19:32:01:16:41/device/telemetry

```
Message:
```

```
"type": "telemetry",
           "portstates": [{
        "port": "1",
        "name": "Power Port",
        "state": 1
                       "port": "2",
"name": "Power Port",
                       "state": 0
                       "port": "3",
"name": "Power Port",
"state": 0
                       "port": "4",
"name": "Power Port",
"state": 0
           }],
"line_in": [{
    "wolta
                       "voltage": 242.48,
"current": 0.000
           }],
"sensors": [{
"".a."
                       "idx": 1,
"name": "7105",
                       "v": 21.1,
"unit": "deg C"
                       }, {
                                  "field": "humidity",
                                  "v": 71.9,
"unit": "%"
                       }, {
                                  "field": "dew_point",
                                  "v": 15.8,
"unit": "deg C"
                       }, {
                                  "field": "dew diff",
                                  "v": 5.3,
"unit": "deg C"
                       } ]
           }],
"ts": 210520
}
```

4.10.1 **Example HiveMQ**

What does an MQTT configuration look like using HiveMQ as an example?


Expert PDU Energy 8311




Create a free or commercial account at www.hivemq.com and create a new cluster.



In the "Manage Clusters" section, go to "Access Management" and add an MQTT user with name and password.

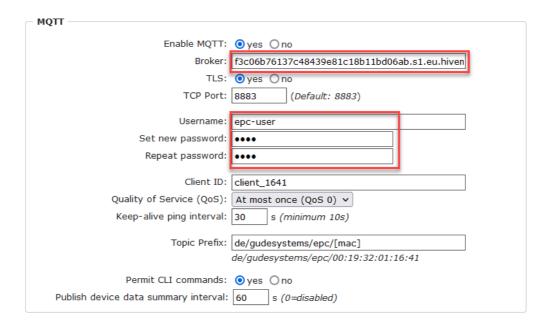

 In the MQTT configuration of the Gude device, transfer the hostname of the HiveMQ broker, as well as username and password. Additionally activate TLS and set the correct port.



5 Support

You will find the latest product software on our website at www.gude.info available for download. If you have further questions about installation or operation of the unit, please contact our support team. Furthermore, we present in our support wiki at www.gude.info/wiki FAQs and configuration examples.

5.1 Data Security

To provide the device with a high level of data security, we recommend the following measures:

- Check that the HTTP password is switched on.
- Set up your own HTTP password.
- Allow access to HTTP via SSL (TLS) only.
- Use TLS 1.3 if possible and avoid TLS 1.1.
- Enable authentication and encryption in SNMPv3.
- Disable SNMP v2 access.
- Enable STARTTLS or SSL in the e-mail configuration.
- Archive configuration files securely, they contain sensitive information.
- In the IP ACL, enter only the devices that require access to HTTP or SNMP.
- Use SSH if possible, since Telnet is not encrypted.
- Set login for telnet or serial console.
- Use MQTT 3.1.1 only with TLS and password.
- Only permit MQTT CLI commands when the broker is trustworthy.
- Modbus TCP is not encrypted, only activate it in a secure environment.
- Activate "Message Authentication" in RADIUS.

When accessed from the Internet

- Use a randomized password with at least 32 characters.
- If possible, place the device behind a firewall.

5.2 Contact

GUDE Systems GmbH Von-der-Wettern-Straße 23 51149 Cologne Germany

Phone: +49-221-912 90 97
Fax: +49-221-912 90 98
E-Mail: mail@gude.info
Internet: www.gude.info
shop.gude.info

Managing Director: Dr.-Ing. Michael Gude

District Court: Köln, HRB-Nr. 17 7 84

WEEE-number: DE 58173350

Value added tax identification number (VAT): DE 122778228

5.3 Declaration of Conformity

This product from the **Expert PDU Energy 8311** series is in conformity with the European directives for CE marking applicable to this product. The complete CE declaration of conformity for this product can be found on the website www.gude.info in the download section of the product.

5.4 FAQ

1. What can I do if the device is no longer accessible?

- If the Status LED is red, the device has no connection to the switch. Unplug and plug
 the Ethernet cable. If the Status LED is still red, try other switches. If one uses no
 switch, but connects e.g. a laptop directly to the device, make sure you are using a
 crossover Ethernet cable.
- If the status LED is orange for a longer time after unplugging and plugging the Ethernet cable, then DHCP is configured, but no DHCP server was found in the network. After a timeout, the last IP address is configured manually.
- If there is a physical link (status LED is green) to the device, but you can not access the web server, bring the device into bootloader mode and search for it with GBL_Conf.exe 14. Then check the TCP-IP parameters and change them if necessary.
- If the device is not found by GBL_Conf.exe in bootloader mode, you can reset the settings to factory defaults as the last option.

2. What can be done if the device is no longer accessible, but the buttons still respond?

• Entering or leaving the bootloader mode does not change the state of the relays. In the chapter Maintenance there is a description how to activate the bootloader by pressing the buttons and how to exit the bootloader afterwards. This will restart the firmware without switching relays. However, this procedure does not help if the network itself is incorrectly configured.

3. Where is the serial number stored in the device?

The serial number is not stored in the device, but only visible on the device label. However, you can display the MAC address in the IP address configuration [23]. If you contact Gude Systems Support with the MAC address, we will be happy to give you the corresponding serial number.

4. Why does it sometimes take so long to configure new SNMPv3 passwords on the website?

The authentication methods "SHA-384" and "SHA-512" are calculated purely in software, and can not use the crypto hardware. On the configuration page, e.g. "SHA-512", needs up to 45 seconds to calculate the key.

5. Can you enter multiple e-mail recipients?

• Yes. In the E-Mail configuration in the <u>Recipient Address</u> field, it is possible to enter multiple e-mail addresses separated by commas. The input limit is 100 characters.

6. Why did the MIB tables change after the firmware update?

• Since the number of possible event types was increased, the previous trap design resulted in an excess of trap definitions: See Change in Trap Design 50.

7. Importing an older firmware

• During a firmware update, old data formats are sometimes converted to new structures. If an older firmware is newly installed, the configuration data and the energy meters may be lost! If the device then does not run correctly, please restore the factory settings (e.g. from the Maintenance Page 16).

8. Disable switching events

• You can set the sending of syslog, emails etc. when switching ports (only concerns Gude devices with relays) under "System" in the sensor configuration 41.

- A -	- I -
automated Access 45	Installation 7 IP-ACL 25, 47
- B -	IP-Address 23 IPv6 48
Bootloader Mode 14, 19 Button Lock 43	- L -
- C -	load Configuration 16
Certificate-Upload 14, 16 clear DNS-Cache 16	- M -
Configuration Management 18 Content of Delivery 6 creating certificates 53	Maintenance 14 messages 45 Modbus TCP 66
- D -	MQTT 32, 71
Data Security 76 Declaration of Conformity 77 Default Display 43	- N - NTP 33
Description 6 device MIB 51	- O -
- E -	Ok button 7 Operating the device directly 13
Electrical Measurement 8 E-Mail 42	- R -
Ethernet connnector 7	Radius 48 Restart 16
- F -	- S -
Factory Reset 14 FAQ 77	Security Advice 6
Firmware Upload 14 Firmware-Update 16	Select button 7 Sensors 9, 41 SNMP 28, 49
- G -	SSH 58 SSL 53
GBL_Conf.exe 14	Start-up the device 7 Status LED 7
- H -	Status-LED 13 syslog 28
HTTP 26 HTTPS 26	- T -
	Technical Specifications 8

Index

Timer 34
Timer Configuration 34
TLS 53





Expert PDU Energy 8311 © 2021 GUDE Systems GmbH 11/18/2021