 


Kompaktmodul K60
Compact Module K60
Module compact K60
Módulo compacto K60
Modulo compatto K60



- 3RK1100-1CQ00-0AA3 (K60 40)
- 3RK1200-0CQ00-0AA3 (K60 4I)
- 3RK1400-1BQ00-0AA3 (K60 2I/2O)
- 3RK1400-1DQ00-0AA3 (K60 4I/4O)
- 3RK1400-1DQ01-0AA3 (K60 4I/4O)
- 3RK1400-1DQ02-0AA3 (K60 4I/4O)
- 3RK1400-1MQ00-0AA3 (K60 4I/2O)
- 3RK2400-1FQ03-0AA3 (K60 4I/3O)


Betriebsanleitung Instructivo	Operating Instructions Istruzioni di servizio	Instructions de service Instruções de Serviço	Bestell-Nr./Order No.: 3RK1701-2KB05-0AA3
--	--	--	--

Vor der Installation, dem Betrieb oder der Wartung des Geräts muss diese Anleitung gelesen und verstanden werden.
 Read and understand these instructions before installing, operating, or maintaining the equipment.
 Ne pas installer, utiliser ou entretenir cet équipement avant d'avoir lu et assimilé ce instructions.
 Leer y comprender este instructivo antes de la instalación, operación o mantenimiento del equipo.
 Leggere con attenzione questi istruzioni prima di installare, utilizzare o eseguire manutenzione su questa apparecchiatura.
 Ler e compreender estas instruções antes da instalação, operação ou manutenção do equipamento.


Eine sichere Gerätefunktion ist nur mit zertifizierten Komponenten gewährleistet!
 Reliable functioning of the equipment is only ensured with certified components.
 Le fonctionnement sûr de l'appareil n'est garanti qu'avec des composants certifiés.
 El funcionamiento seguro del aparato sólo está garantizado con componentes certificados.
 Il funzionamento sicuro dell'apparecchiatura viene garantito soltanto con componenti certificati.
 O funcionamento seguro do aparelho apenas pode ser garantido se forem utilizados os componentes certificados.

Montage/Verdrahtung **Montaje/Cableado**
Installation/Wiring **Montaggio/Cablaggio**
Montage/Câblage **Montagem/Cablagem**

Adressen einstellen
Setting addresses
Réglage de l'adresse
Ajustar dirección
Indirizzamento
Ajustar direcção

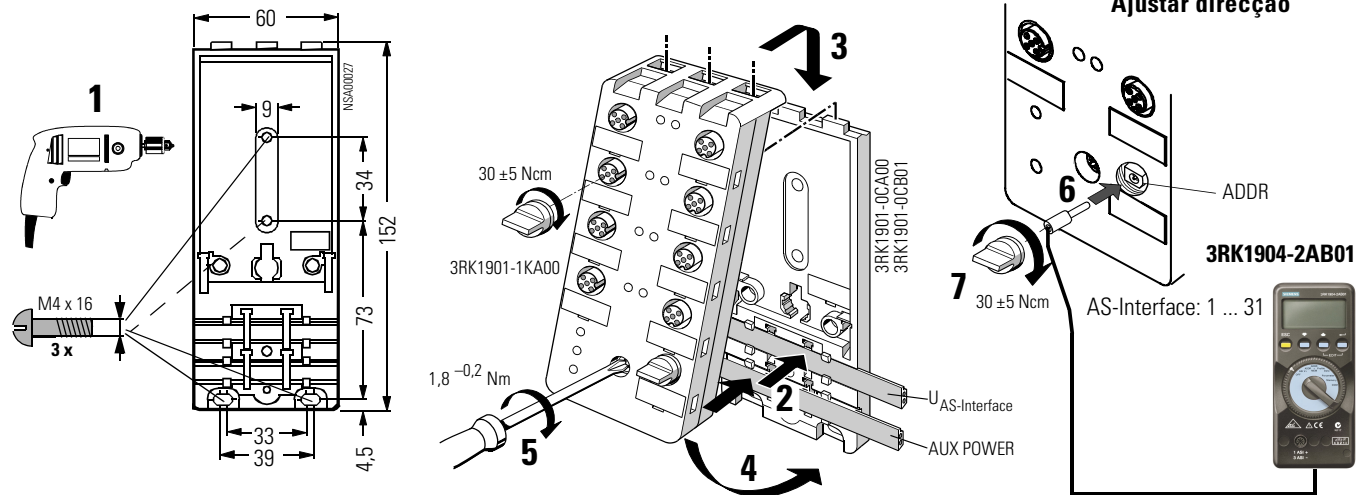



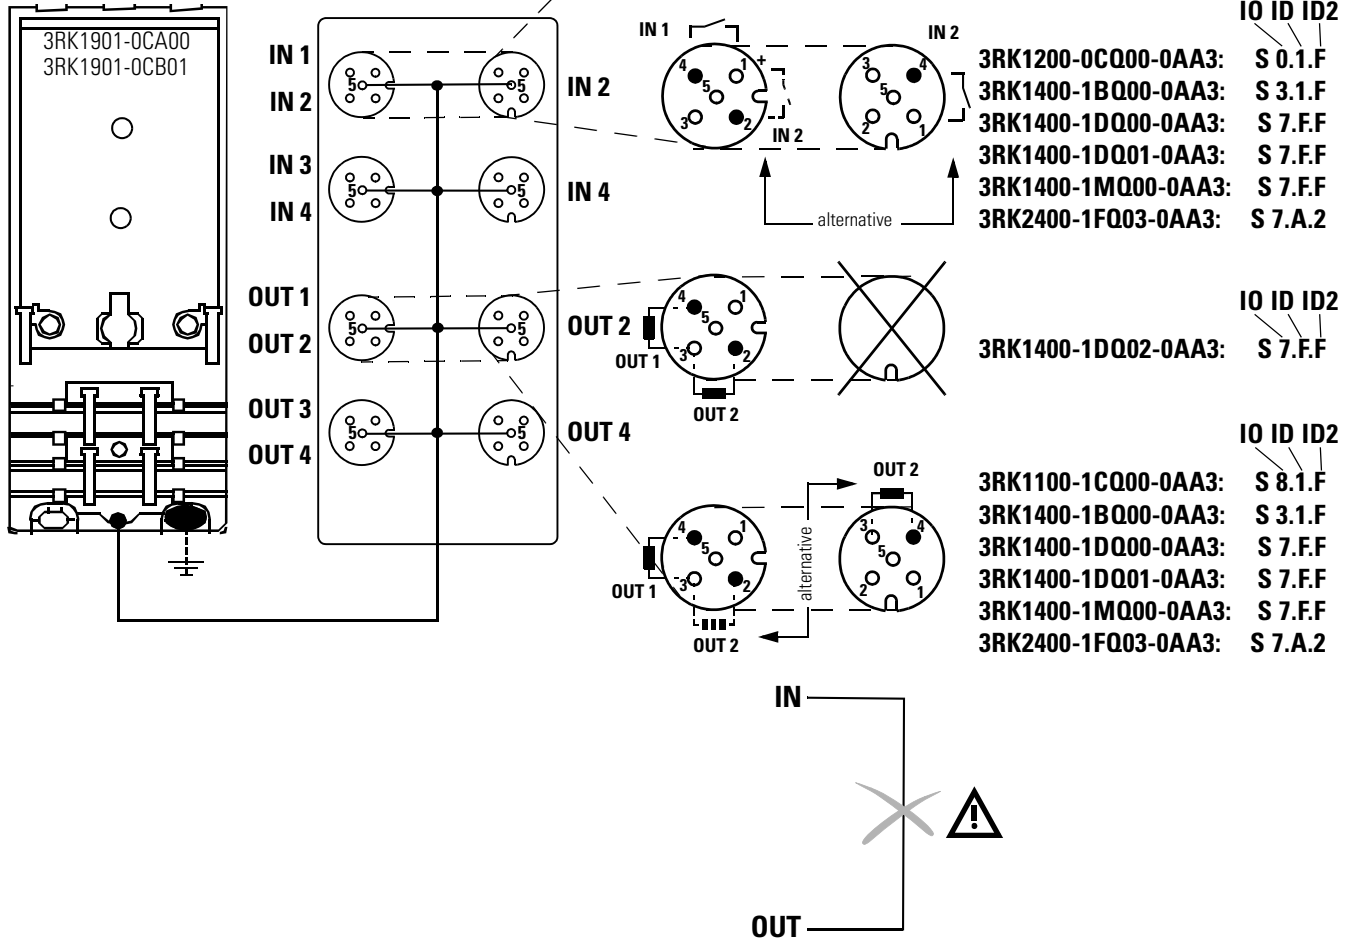


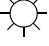
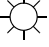




Logische Zuordnung
Logic assignments
Affectation logique
Asignación lógica
Assegnazione logica
Atribuição logística



Logische Zuordnung – Ein-/Ausgänge
Logic assignments – Inputs/Outputs
Affectation logique – Entrées/Sorties
Asignación lógica – Entradas/Salidas
Assegnazione logica – Ingressi/Uscite
Atribuição logística – Entradas/Saídas

	3RK1100-...	3RK1200-...	3RK1400-1BQ00-0AA3	3RK1400-1MQ00-0AA3	3RK1400-...	3RK2400-...
IN1		D0	D0	D0	D0	D0
IN2		D1	D1	D1	D1	D1
IN3		D2		D2	D2	D2
IN4		D3		D3	D3	D3
OUT1	D0		D0	D0	D0	D0
OUT2	D1		D1	D1	D1	D1
OUT3	D2				D2	D2
OUT4	D3				D3	

Status LEDs/Status LEDs/LED d'état/LEDs de estado/LED di stato/LEDs de estado					
	3RK1100-.. 3RK1200-.. 3RK1400-.. 3RK2400-..	3RK1100-.. 3RK1200-.. 3RK1400-.. 3RK2400-..	3RK1200-.. 3RK1400-.. 3RK2400-..	3RK1100-.. 3RK2400-.. 3RK1400-1DQ02-0AA3 3RK1400-1DQ00-0AA3 3RK1400-1DQ01-0AA3 3RK1400-1MQ00-0AA3	
Betriebszustand	Kommunikation in Ordnung	Keine Spannung am AS-Interface-Chip	Kommunikation ausgefallen	Slave hat Adresse "0"	Überlast (Kurzschluss am Ausgang (Peripheriefehler))
Operating state	Communication OK	No voltage present at AS interface chip	Communication failed	Slave has address "0"	Overload/short-circuit in output terminal (I/O error)
Etat	Communication O.K.	ASIC AS-Interface non alimenté	Communication perturbée	Esclave avec adresse "0"	Surcharge alimentation des capteurs
Estado de servicio	La comunicación en esta O.K.	No hay tensión en el chip AS-Interface	Falla la comunicación	El esclavo tiene dirección "0"	Sobrecarga/cortocircuito en la salida (error de perifería)
Stato di funzionamento	Comunicazione in ordine	Manca tensione su chip AS-Interface	Comunicazione interrotta	Slave ha indirizzo "0"	Sovraccarico/cortocircuito sull'uscita (errore di periferia)
Estado de funcionamiento	Comunicação em ordem	Nenhuma tensão no chip AS-Interface	Falha na comunicação	O escravo tem endereço "0"	Sobrecarga/curto-circuito na saída (erro periferico)
AS-Interface (grün) (green) (verte) (verde)					
FAULT (rot) (red) (rouge) (rojo) (rosso) (vermelho)					
3RK1100-../3RK1400-../3RK2400-..					
Betriebszustand Ein/Operating state On/Etat actives/Estado de servicio activada/Stato di funzionamento on/Estado de funcionamento ligado					
AUX POWER		grün/green/verte/verde			

Weitere Daten und Bestellnummern für Zubehör siehe Katalog.
For further data and accessories see Catalog.
Pour de plus amples informations et pour les accessoires, voir Catalogue.
Para más datos y el N° de referencia para accesorios, v. Catálogo.
Per altri dati e per le sigle di ordinazione degli accessori vedere il catalogo.
Para outros dados e número de encomenda para os acessórios, consulte o Catálogo.

Technical Assistance:	Telephone: +49 (0) 911-895-5900 (8 ⁰⁰ - 17 ⁰⁰ CET)	Fax: +49 (0) 911-895-5907
	E-mail: technical-assistance@siemens.com	
	Internet: www.siemens.de/lowvoltage/technical-assistance	
Technical Support:	Telephone: +49 (0) 180 50 50 222	