

Our website uses cookies to provide services and visitor analyse. By using this website, you agree to accept these cookies.


[Continue](#)

[More details](#)

DIL8W/SOIC8 ZIF 200mil SFlash-1a (Ord. no. 70-1270A)

- special adapter, assigned for Serial Flash devices in 200/208mil SOIC/SOP/SO package with 8-pins
- designed for TurboMode
- operating (mechanical) warranty of ZIF socket - 10,000 actuations
- this adapter is for use with new, extremely fast universal device programmers such as BeeProg2, BeeHive204 and BeeHive208S.
- made in Slovakia

Ord. no.	70-1270A
Socket	ZIF SOIC8, OpenTop type
Bottom	2x24 pins, square, 0.6x0.6mm, rows spacing 600mil
Class	Specialized
Subclass	Memory (NOR/NAND/eMMC)

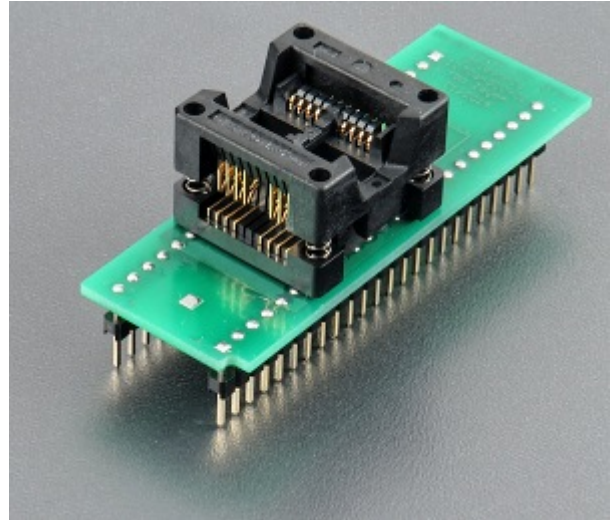

Adapter manual

- Insert adapter to the device programmer ZIF socket according to the picture placed near of it. If you have some doubts about orientation of this adapter in device programmer ZIF socket, it is valid general rule, the orientation of the text of title is the same as the text on the top of the device programmer.
- Push the top of adapter ZIF socket to open it. Insert the device into the adapter ZIF socket. The right position of the programmed device in adapter ZIF socket is show at picture near (mainly left above) the adapter ZIF socket. Then release adapter ZIF socket.
- Visually check interconnection between device and adapter ZIF socket. If everything looks OK, the device is ready for programming.
- Be careful, because the incorrect insertion of adapter to the device programmer ZIF socket or device to the adapter ZIF socket can damage the programmed device.
- To take out the device push the top of adapter ZIF socket and remove device from it.
- When you finish work with adapter, remove it from the device programmer ZIF socket.
- Do not directly touch the pins of the adapter and adapter ZIF socket, because dirt may cause errors during programming of device.
- For handling with the device we recommended to use a vacuum pick up tool.
- Operation conditions: operating temperature 5°C ÷ 40°C (41°F ÷ 104°F), operating humidity 20%..80%, non condensing.

Software note

- If software version, you're using currently, doesn't contain support for this programming adapter, please download the latest version of software - Regular or OnDemand - from our web site.

Accepted package(s)

<p>SOIC8</p>	<p>5.20 [0.205] max.</p> <p>5.08 [0.200] Nom.</p> <p>1.27 [0.050]</p> <p>1.50 [0.059] max.</p>
<p>SOIC8</p>	<p>5.40 [0.213] max.</p> <p>5.275±0.125 [0.208±0.005]</p> <p>1.27 [0.050]</p> <p>2.20 [0.087] max.</p>