

## PROFINET / Modbus Slave - Converter

To obtain the complete manual please go to

[www.adfweb.com/download/filefold/MN67603\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67603_ENG.pdf)

To obtain the new version of this box sheet please go to


[www.adfweb.com/download/filefold/BS67603-485-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67603-485-A1_ENG.pdf)

### CONNECTION SCHEME:

#### Dip-Switch A:

-Dip1 - Must be at ON  
-Dip2 - Functioning Mode

= Normal = Boot

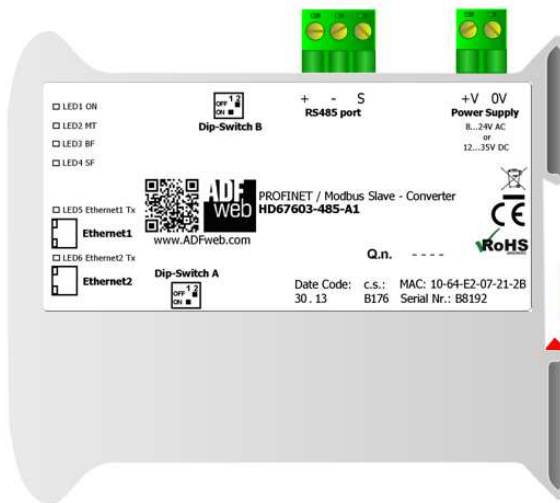

**Led1:**  
Green  
ON

**Led2:**  
Yellow  
MT

**Led3:**  
Red  
BF

**Led4:**  
Red  
SF

**Led5:**  
Green  
Ethernet1 Tx

**Connector3:**  
Ethernet1 Port  
(RJ45 Plug)

**Led6:**  
Green  
Ethernet2 Tx

**Connector4:**  
Ethernet2 Port  
(RJ45 Plug)

Rail DIN  
Clamp

#### Dip-Switch B:

-Dip1 - RS485 Termination Resistor

= Open = 120 Ohm

-Dip2 - Not used

#### Connector5:

RS485 (Isolated port)

S = Shield\* (to Isolated Ground)  
B = Negative wire  
A = Positive wire

#### Connector1:

Power Supply port

0V = Ground  
+V = Positive wire

V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

### CONFIGURATION SOFTWARE:

For setting up the device you need the software named SW67603.

To obtain this software please go to

[www.adfweb.com/download/filefold/SW67603.zip](http://www.adfweb.com/download/filefold/SW67603.zip)

ADFweb.com s.r.l.  
www.adfweb.com  
info@adfweb.com  
support@adfweb.com

Manual



Box-Sheet



Software

