

PB 138

Schraubenzieher für Schlitzschrauben

Tournevis pour vis à fente

 


PB 138/4	3,5	1	6,5	5	45	85	30.9	10	7 610733 030576
PB 138/5	4-5	1.2	8	6	45	85	35.5	10	7 610733 030583
PB 138/6	6	1.6	10	7	45	85	41.3	10	7 610733 030590

PB 198

Kreuzschraubenzieher Phillips, Spitze nach DIN ISO 8764-1

Tournevis en croix Phillips, pointe selon DIN ISO 8764-1

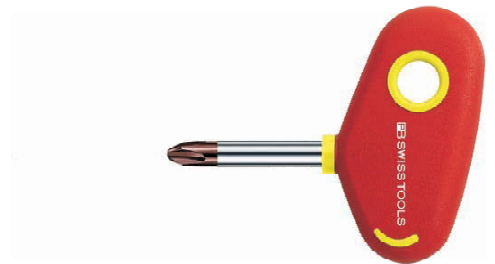 


PB 198/2	3-5	2	6	45	85	35.7	10	7 610733 030606
PB 198/3	6	3	7	45	85	41.5	10	7 610733 030613

PB 199

Kreuzschraubenzieher Pozidriv, Spitze nach DIN ISO 8764-1

Tournevis en croix Pozidriv, pointe selon DIN ISO 8764-1

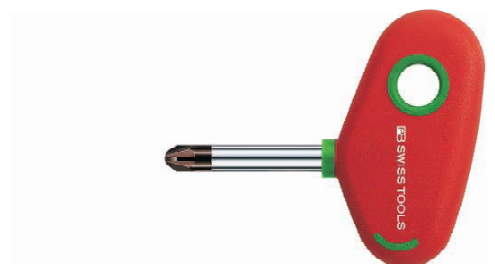

PB 199/2	4-5	2	6	45	85	35.6	10	7 610733 002078
PB 199/3	6	3	7	45	85	41.5	10	7 610733 002085