



PiGRRL 2

Created by Ruiz Brothers



Last updated on 2018-08-22 03:51:53 PM UTC

Guide Contents

Guide Contents	2
Overview	5
Raspberry Pi Retro Game Console	5
Easier to build!	5
Project Expectations	6
Adafruit Parts	6
Tools and Supplies	7
Circuit Diagram	8
Wired Connections	8
3D Printing	9
Material Options	9
Parts	9
Dimensions	10
Tap Screw Holes	10
Test Fit Openings	12
Finishing Parts	12
Software	13
Download & Burn RetroPie	13
Setup RetroPie	13
Install PiTFT (fbcp) Support	14
Installing Keypress (retrogame) support	15
Uploading ROMs	16
Exiting ROMs	16
Remapping Controls	16
Testing Controls	16
Default Controls	17
Gamepad	19
PiGRRL Gamepad Design	19
PiGRRL Gamepad PCB	20
Install IC Box Header	21
Solder IC Box Header	22
Prep 6mm Tactile Buttons	23
Install 6mm Tactile Buttons	24
Solder Buttons to Gamepad PCB	25
Soldered Gamepad PCB	26
Tap Gamepad PCB Mounting Holes	26
PiTFT Display	28
GPIO #18 - LED Backlighting	28
Cut Trace #18	28
PiCable	30
PiCable Resizing	30
Measure, Mark and Cut Ribbon Cable	31
Cut Cable	32
Removing Connector	32
Peel Cable from Connector	34
Install Connector to Shortened Ribbon Cable	34

Mash Top Piece to Connector	36
Shortened Pi Ribbon Cable	36
Amp & Speaker	38
Prep PAM8302 Amp	38
Measure Wires for Amp and Speaker	39
Strip and Tin Wires	40
Connect Wires to Speaker	41
Connect Wires to Amp	42
Power Circuit	43
Prep PowerBoost 1000C	43
Measure Wires for PowerBoost and Amp	44
Connect Amp to PowerBoost 1000C	45
Connected Amp, Speaker and PowerBoost 1000C	45
Test fit Power Switch	45
Prep Slide Switch	47
Connect Wires to Switch	48
Connect Switch to PowerBoost 1000C	48
Wired Power Circuit	49
Pi Audio	50
Prep Wires for Rasp Pi Audio	50
Prep Raspberry Pi Audio Pins	50
Connect Wires to Raspberry Pi	51
Connect Wires to Amp	52
Shoulder Buttons	53
Prep 12mm Tactile Buttons	53
Prep Wires for Shoulder Buttons	53
Connect Wires to Buttons	54
Shoulder Buttons	54
Final Connections	56
Prep Wires for Gamepad PCB	56
Prep Power Pins on Gamepad PCB	57
Connect Shoulder Buttons to Gamepad PCB	58
Connect Gamepad PCB to PowerBoost 1000C	59
Final Wired Components	59
Test Components	60
Mount Components	61
Install 2.8" PiTFT	61
Install Gamepad PCB	62
Connect Pi Cable	64
Connected PiTFT and Gamepad	65
Install Speaker	65
Shoulder Button Mount	66
Shoulder Button (cont.)	67
Install Shoulder Button Mount	68
Install Switch	69
Install Raspberry Pi 2	69
Mount PowerBoost 1000C	71
Mount Amp	72
Test PowerBoost Circuit	73
Install Lipo Battery	74

Almost Done!	74
Close It Up!	75
Join Parts	75
Screw Bottom Portion	76
Insert microSD Card	77
Completed Build!	77
Share Your Creation With Us!	77
Trouble Shooting	78
Buttons don't work, things are very weird	78
Audio Issues	78
No Audio	79
Pressing Button Turns Off Screen	79
Button on pin #18 doesn't work	79
PiTFT Shows Only White Screen	79
Custom Mute Function	79
Better Sound quality	80
Issues, Problems, Need Help?	80
Extras	81
Safely Shutdown via Tactile Switch	81
Troubleshooting RetroPie and retrogame	82
retrogame Related Troubleshooting	82
Some of my buttons/controls aren't working!	82
NONE of my buttons/controls are working!	82
My controls only work if there's also a USB keyboard plugged in!	82
Retrogame doesn't work with my optical buttons!	82
I ran Adafruit's retrogame installer script and rebooted, and now the keyboard and network are unresponsive!	82
RetroPie Related Troubleshooting	83
My controls work in the EmulationStation UI, but not in one or more specific emulators!	83
The ROM files I have worked in a different emulator before, but aren't working in RetroPie!	83
Installing RetroPie Packages	83
Accessing Alternate Emulators	85
More RetroPie Help	86

Overview



Raspberry Pi Retro Game Console

This project takes the original concept of the [PiGRRRL](https://adafru.it/kTD) and makes it more powerful, using a Raspberry Pi 2. It's about the same size but features more buttons (D-Pad, A,B,X,Y, L, R, pause and start.) and four extra buttons on the PiTFT. It's sporting a small audio amplifier and speaker, so you can enjoy the crispy sounds of 8-bit goodness.


Easier to build!

With this update, we really wanted to make it easier to build. We've dramatically cut the build time in half by making a custom gamepad PCB. Just solder in the buttons and an IDC box header to the gamepad PCB - No more tedious button wiring!



Project Expectations

This project is geared towards beginners, but is still a big project to take on. This guide will walk you through all the necessary steps to wire, assemble and build your very first Raspberry Pi game console. It does require a good amount of soldering, wire tinning and good ol' elbow grease, but don't be discouraged! If your dedicated to take on this project, it'll only take a weekend to make.

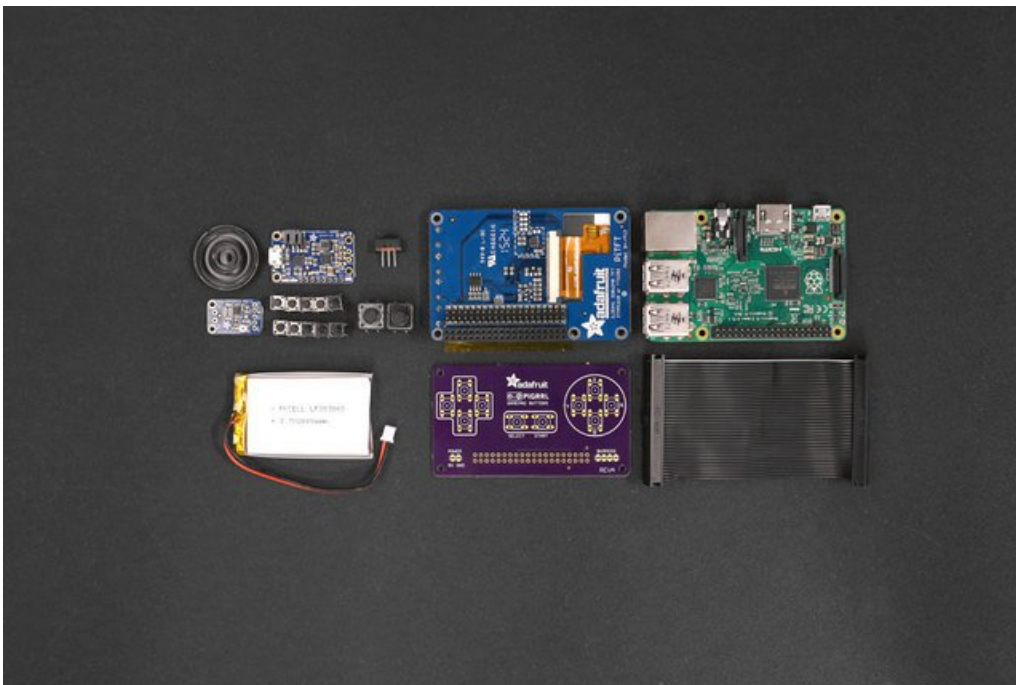

Adafruit Parts


- [Raspberry Pi 2](http://adafru.it/2358) (<http://adafru.it/2358>) or [Raspberry Pi 3](http://adafru.it/3055) (<http://adafru.it/3055>)

- [2.8" PiTFT Plus \(http://adafru.it/2298\)](http://adafru.it/2298)
- [PiGRRL Gamepad PCB \(http://adafru.it/3015\)](http://adafru.it/3015)
- [PowerBoost 1000c \(http://adafru.it/2465\)](http://adafru.it/2465)
- [2500mAh battery \(http://adafru.it/328\)](http://adafru.it/328)
- [PAM8302 2.5W Audio Amp \(http://adafru.it/2130\)](http://adafru.it/2130)
- [Mini Metal Speaker \(http://adafru.it/1890\)](http://adafru.it/1890)
- [40pin GPIO ribbon cable \(http://adafru.it/1988\)](http://adafru.it/1988)
- [Slide Switch \(http://adafru.it/805\)](http://adafru.it/805)
- [10x 6mm \(http://adafru.it/367\)](http://adafru.it/367) + [2x 12mm tactile buttons \(http://adafru.it/1119\)](http://adafru.it/1119)
- [1x 2by20 pin IDC box header \(http://adafru.it/1993\)](http://adafru.it/1993)

Tools and Supplies

- [3D Printer \(https://adafru.it/doT\)](https://adafru.it/doT) + [Filament \(http://adafru.it/2080\)](http://adafru.it/2080)
- [Soldering Iron \(https://adafru.it/doU\)](https://adafru.it/doU) + [Solder \(https://adafru.it/doU\)](https://adafru.it/doU)
- [30AWG \(http://adafru.it/2051\)](http://adafru.it/2051) + [26AWG \(http://adafru.it/1970\)](http://adafru.it/1970) Wire
- [Helping Third Hands \(http://adafru.it/291\)](http://adafru.it/291) / [Panavise \(http://adafru.it/151\)](http://adafru.it/151)
- [Heat Shrink \(http://adafru.it/1649\)](http://adafru.it/1649)
- Glue / Mounting Tack
- [Wire Stripper \(http://adafru.it/527\)](http://adafru.it/527) / [Cutters \(http://adafru.it/152\)](http://adafru.it/152)
- Filing Tool / Hobby Knife
- 14x #4-40 3/16 machine screws
- 6x #2-56 3/8 machine screws
- [#4-40 Screw Tap \(https://adafru.it/tGe\)](https://adafru.it/tGe)

Circuit Diagram

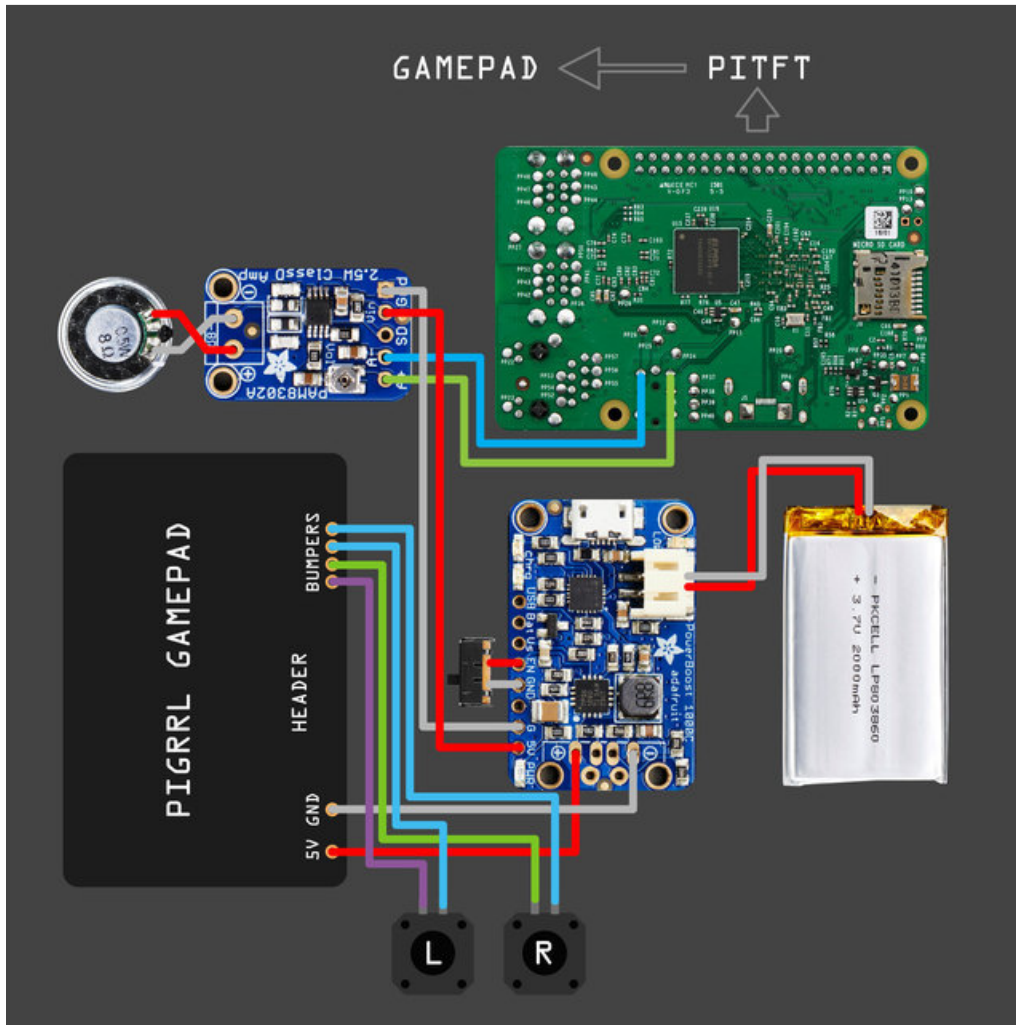

Wired Connections

The diagram above depicts the connections for the power, audio and gamepad. Use this as a reference for wiring the components. Note, the length of wires and position of components are not exactly how the circuit will be - it's just a diagram to show connections.

The 2.8" PiTFT connects to the Raspberry Pi's GPIO header. A GPIO ribbon cable plugs into the GPIO breakout of the PiTFT and connects to the PiGRRL gamepad PCB.

PowerBoost 1000c	PAM8302 Amp
5V	VIN
GND	GND

3D Printing



Material Options

The top case, bottom case and shoulder mount should be printed in hard plastic like PLA, ABS or other. We recommend using PLA to minimize warping. ABS and other filaments requires a heated bed.



Parts

Download the parts and print them out accordingly - referencing the table below for material suggestions. If you don't have access to a 3D printer, use a service like [3DHubs.com](https://3dhubs.com) (<https://adafru.it/efH>) to send them to you.

<https://adafru.it/kTF>

<https://adafru.it/kTF>


<https://adafru.it/kUa>

<https://adafru.it/kUa>

Dimensions




- Top Part – 141mm x 91mm x 18mm (5.55in x 3.85in x 0.71in)
- Bottom Part – 141mm x 91mm 16mm (5.55in x 3.85in x 0.63in)


pigrrl2-top.stl	Top part of case	PLA/ABS
pigrrl2-bot.stl	Bottom of case	PLA/ABS
pitft-buttons.stl	Buttons for PiTFT display	Ninjabflex/TPE
dpad.stl	D-Pad for gamepad	Ninjabflex/TPE
action-btns.stl	A,B,X and Y buttons for gamepad	Ninjabflex/TPE
pause-start.stl	Pause and Start buttons for gamepad	Ninjabflex/TPE
shoulder-btns.stl	Buttons for L and R shoulder buttons	Ninjabflex/TPE
shoulder-mount.stl	Mounting plate for L and R shoulder buttons.	PLA/ABS

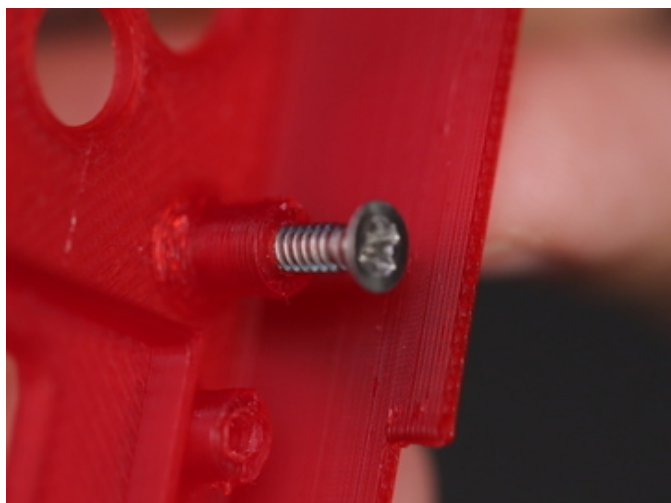

Tap Screw Holes

After the parts are finished printing, you'll need to tap the standoffs with screw holes to create the threads for mounting the components. Use a #4-40 and #2-56 sized tap or use machine screws.

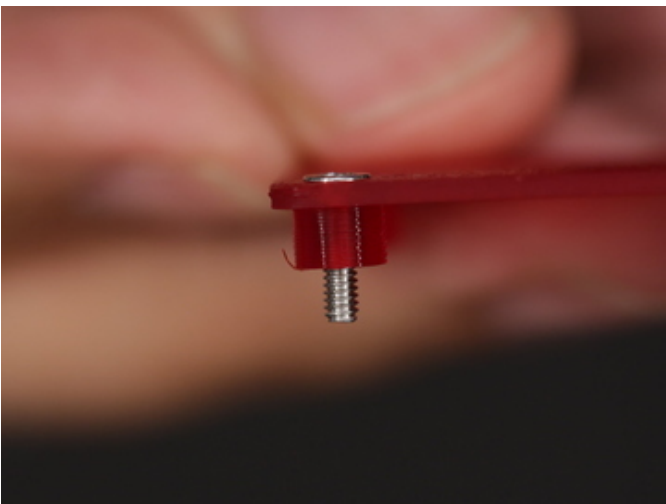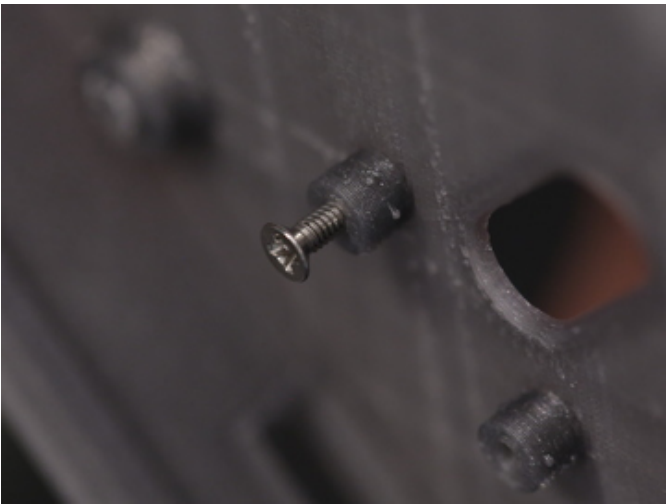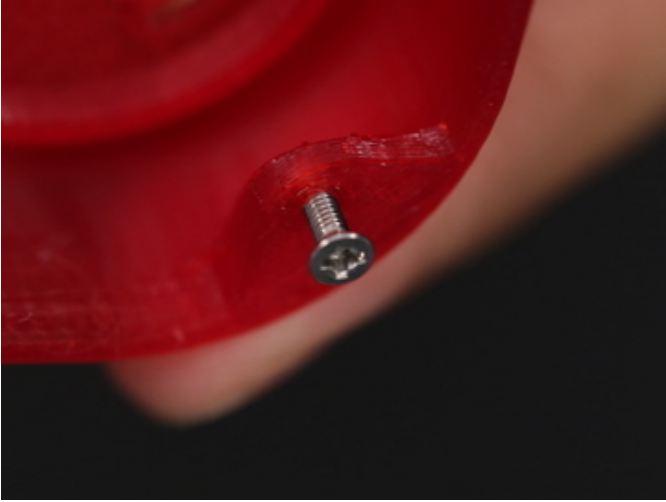

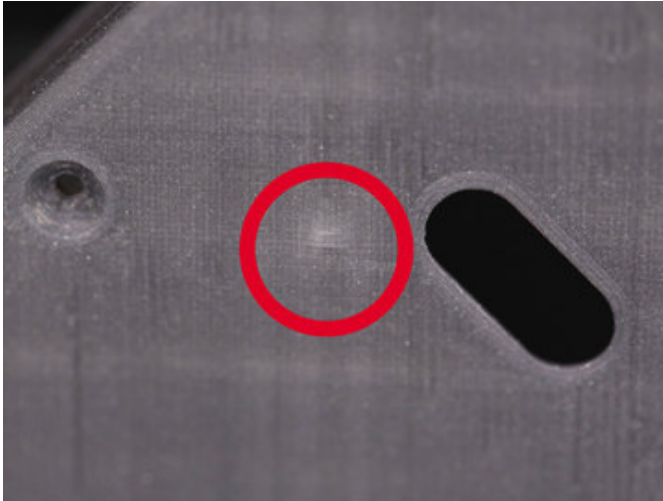

Be careful tapping the standoffs from the top -To prevent puncturing the surface, **DO NOT** tap all the way through the standoff. Be careful not to tap too fast or forcefully to avoid damaging the standoffs.

Test Fit Openings

Use a hobby knife to remove any excess bits from printing. Lay the components over the standoffs to see if mounting holes line up. See if the port cutouts are in the right place. If they don't, use a filing tool to open them up.

Finishing Parts

You can smooth the parts by applying epoxy resin like Smooth-On's XTC-3D. To finish the surface, wait for it to dry and sand it down. Apply a filler primer paint and a colored top coat of spray paint to make it extra smooth.

Software

Download & Burn RetroPie

Game emulation is handled by a package called *RetroPie*. It's a complete Linux distribution designed specifically for running classic games on Raspberry Pi.

Download the current version from the [RetroPie web site \(https://adafru.it/rA3\)](https://adafru.it/rA3), then [write this to an SD card \(https://adafru.it/dDL\)](https://adafru.it/dDL) using Etcher or similar software.

We'll then make some modifications to tune this for the PiGRRL's buttons and small display.

Setup will require an **HDMI monitor**, **USB keyboard** and a **network connection** (either **WiFi** or **Ethernet**). This is best done *before* the Pi is enclosed in the PiGRRL case. If you have a spare Raspberry Pi board around, that's an ideal option...you could prepare the software on that system and then move the card over to the PiGRRL 2.


Setup RetroPie

Insert the RetroPie card to your Pi, attach monitor and keyboard (and Ethernet, if networking that way), then power the system from a USB power source (a USB phone charger or a powered USB hub can usually work). The system will automatically reboot once (it needs this to make use of the whole SD card), then on second boot it will ask to configure the game controls...

The PiGRRL buttons don't work yet; this is normal. For initial setup, use the **USB keyboard** to select the D-pad directions (arrow keys), Start, Select, A and B keys. For anything else, just hold down the space bar or other key to skip that item. Don't worry, we'll re-do the keymap later once we've finished assembly! When finished, you'll see a graphical interface called *Emulation Station* where you'll select games and other options.

Let's **get this Raspberry Pi on the network** first. If using Ethernet, it's a simple matter of plugging in. If WiFi, from the main EmulationStation screen, access the RetroPie settings using whatever key you've assigned as the "A" button. You'll see **WiFi** in this list:



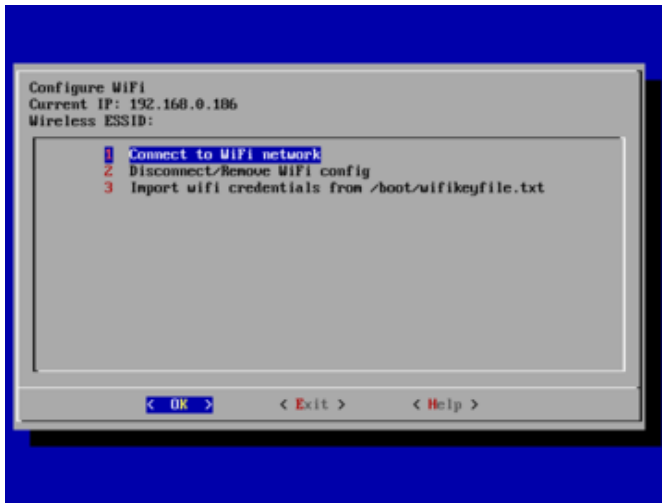

Here you can select your WiFi network name and enter a password. It's not beautiful, but gets the job done.

Select "Exit" when done to return to the EmulationStation UI...

With networking enabled, we can now access the remaining software needed for the PiGRRL 2 experience. There are a couple ways to do this...

- **BEST:** Use an `ssh` terminal client to log into the Raspberry Pi at `retropie.local`
This is recommended, as you can just copy-and-paste the commands that follow. The default name and password are "pi" and "raspberrypi," respectively.
- **OR:** Press "F4" to exit EmulationStation for a command-line prompt (works, but you'll need to type these commands *exactly*).

Install PiTFT (fbcp) Support

This first sequence configures the system for the PiTFT display:

```
cd
sudo curl https://raw.githubusercontent.com/adafruit/Raspberry-Pi-Installer-Scripts/master/pitft-fbcp.sh
sudo bash pitft-fbcp.sh
```

Select the "PiGRRL 2" option, which sets up various system parameters to match this project.

```
This script enables basic PiTFT display support for portable gaming, etc. Does not cover X11, touchscreen or buttons (see adafruit-pitft-helper for those). HDMI output is set to PiTFT resolution, not all monitors support this, PiTFT may be only display after reboot. Run time ~5 minutes. Reboot required.
```

```
CONTINUE? [y/N] y
```

```
Select project:
```

1. PiGRRL 2
2. Configure options manually

```
SELECT 1-2: 1
```

```
Device: pitft28-resistive  
HDMI framebuffer rotate: 0  
TFT MADCTL rotate: 270
```

```
CONTINUE? [y/N] y
```

```
-- Check for working CXX compiler: /usr/bin/c++ -- works  
-- Detecting CXX compiler ABI info  
-- Detecting CXX compiler ABI info - done  
-- Configuring done  
-- Generating done  
-- Build files have been written to: /tmp/rpi-fbcp-master/build  
Scanning dependencies of target fbcp  
[100%] Building C object CMakeFiles/fbcp.dir/main.c.o  
Linking C executable fbcp  
[100%] Built target fbcp  
Configuring PiTFT...  
Done.
```

```
Settings take effect on next boot.
```

```
REBOOT NOW? [y/N]
```

Answer “NO” to the reboot question...

Installing Keypress (retrogame) support

let’s take care of this second script, which enables the PiGRRL buttons:

```
cd  
curl https://raw.githubusercontent.com/adafruit/Raspberry-Pi-Installer-Scripts/master/retrogame.sh >retro  
sudo bash retrogame.sh
```

Again, select the “PiGRRL 2” option. When finished, *now* you can reboot when prompted.

```
This script downloads and installs retrogame, a GPIO-to-keypress utility for adding buttons and joysticks, plus one of several configuration files. Run time <1 minute. Reboot recommended.
```


```
Select configuration:
```

1. PiGRRL 2 controls
2. Two buttons + joystick
3. Six buttons + joystick
4. Adafruit Arcade Bonnet
5. Quit without installing

```
SELECT 1-5: 1
```

After rebooting, the HDMI monitor may display a “no signal” message. This is normal. Not all monitors can handle the resolution setting we’re using. Once the PiTFT is wired up, that will be the primary display.

Also, **after the system is assembled with the PiTFT and controls**, you’ll need to **re-do the controller setup**. This might wait ‘til all the parts are assembled in the case.

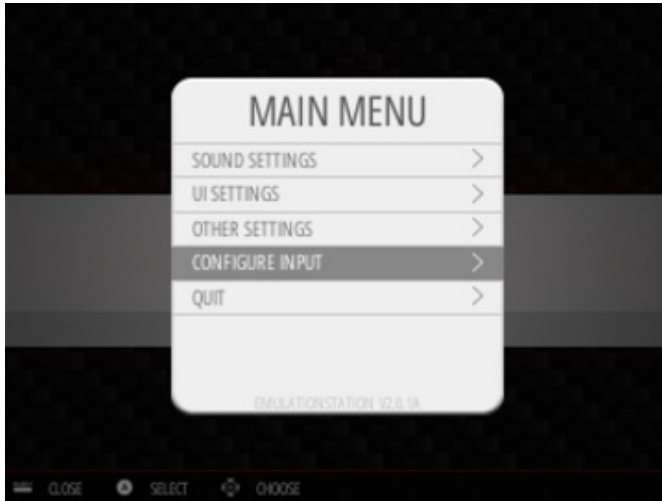

From the main EmulationStation screen, press whatever key was assigned to the “Start” button to access the main menu. You’ll find an option here for “CONFIGURE INPUT.”

Go through the control setup process again using the PiGRRL buttons now instead of the keyboard; assign the D-pad directions, Start and Select buttons, A, B, X and Y. For anything else, hold down a key or button to skip it.

Uploading ROMs

Check out the Wiki on the RetroPie Setup page for how to upload ROMs:

<https://adafru.it/fbb>

<https://adafru.it/fbb>

Exiting ROMs

RetroPie has changed how to exit out of ROMs/Emulators. Hold down the **Pause & Start** buttons at the same time to exit.

Remapping Controls

The buttons are premapped to work with NES and SNES emulators. If you'd like to remap the controls, you'll need to modify the **retrogame.cfg** file in **/boot**.

Make sure the Raspberry Pi is configured for Wifi. Open up terminal and ssh into the Pi. (Default username: **pi** password: **raspberrypi**)

Then follow the [retrogame tutorial](https://adafru.it/sct) to set it up the way you like! (<https://adafru.it/sct>)

Testing Controls

If you log in (via SSH or F4 shell) you can see exactly what keypresses are detected by running **evtest** then select 1 (or whatever **retrogame** is numbered):

```
pi@retropie: ~  
pi@retropie:~$ evtest  
No device specified, trying to scan all of /dev/input/event*  
Not running as root, no devices may be available.  
Available devices:  
/dev/input/event0:      stmpe-ts  
/dev/input/event1:      retrogame  
Select the device event number [0-1]: 1  
Input driver version is 1.0.1  
Input device ID: bus 0x3 vendor 0x1 product 0x1 version 0x1  
Input device name: "retrogame"  
Supported events:  
Event type 0 (EV_SYN)  
Event type 1 (EV_KEY)  
Event code 1 (KEY_ESC)  
Event code 2 (KEY_1)  
Event code 3 (KEY_2)  
Event code 4 (KEY_3)  
Event code 28 (KEY_ENTER)  
Event code 29 (KEY_LEFTCTRL)  
Event code 30 (KEY_A)  
Event code 31 (KEY_S)  
Event code 44 (KEY_Z)  
Event code 45 (KEY_X)  
Event code 56 (KEY_LEFTALT)  
Event code 57 (KEY_SPACE)  
Event code 103 (KEY_UP)  
Event code 105 (KEY_LEFT)  
Event code 106 (KEY_RIGHT)  
Event code 108 (KEY_DOWN)  
Properties:  
Testing ... (interrupt to exit)  
Event: time 1481496231.217685, type 1 (EV_KEY), code 103 (KEY_UP), value 1  
Event: time 1481496231.217685, ----- EV_SYN -----  
Event: time 1481496231.445632, type 1 (EV_KEY), code 103 (KEY_UP), value 0  
Event: time 1481496231.445632, ----- EV_SYN -----  
Event: time 1481496232.275566, type 1 (EV_KEY), code 106 (KEY_RIGHT), value 1  
Event: time 1481496232.275566, type 1 (EV_KEY), code 108 (KEY_DOWN), value 1
```


Make sure each keypress works and matches the table below!

Default Controls

Below is a table of the controls set to the GPIO. Use this as a reference if you ever need to revert when changing something.

LEFT	Pin 7	GPIO 4
UP	Pin 36	GPIO 16
RIGHT	Pin 35	GPIO 19
DOWN	Pin 37	GPIO 26
SELECT	Pin 29	GPIO 5
START	Pin 31	GPIO 6
A	Pin 8	GPIO 14
B	Pin 10	GPIO 15
X	Pin 38	GPIO 20
Y	Pin 12	GPIO 18
L	Pin 32	GPIO 12
R	Pin 33	GPIO 13

Gamepad

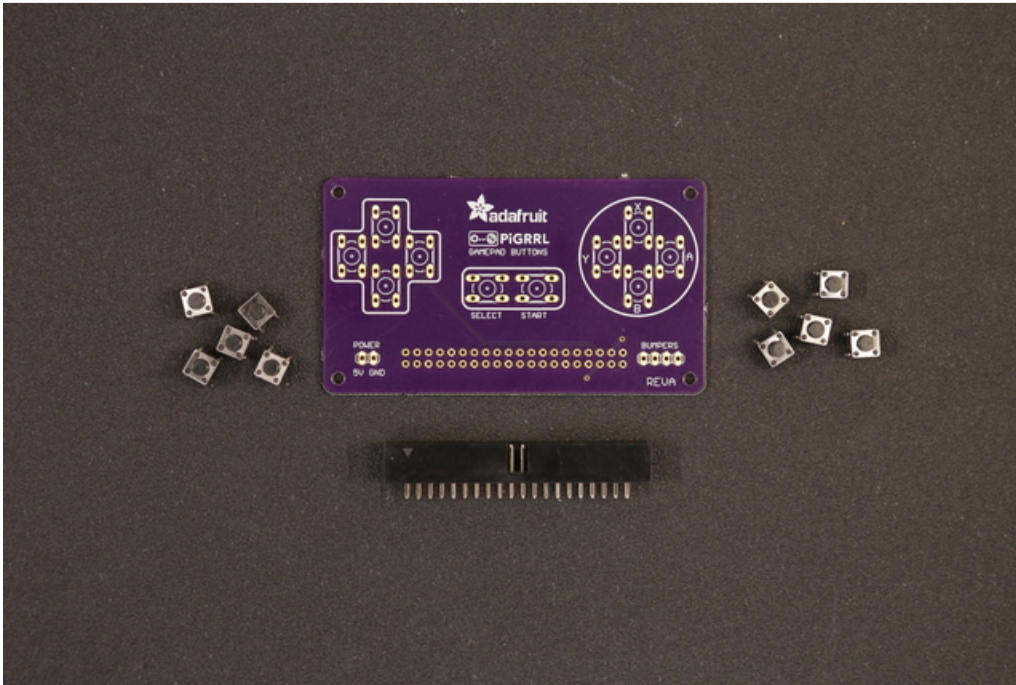

PiGRRL Gamepad Design

The gamepad was designed in EagleCAD and available to download and modify. It's also a shared project on Oshpark.

<http://adafru.it/3015>


<http://adafru.it/3015>

<https://adafru.it/l1A>

<https://adafru.it/l1A>


<https://adafru.it/kTE>

<https://adafru.it/kTE>

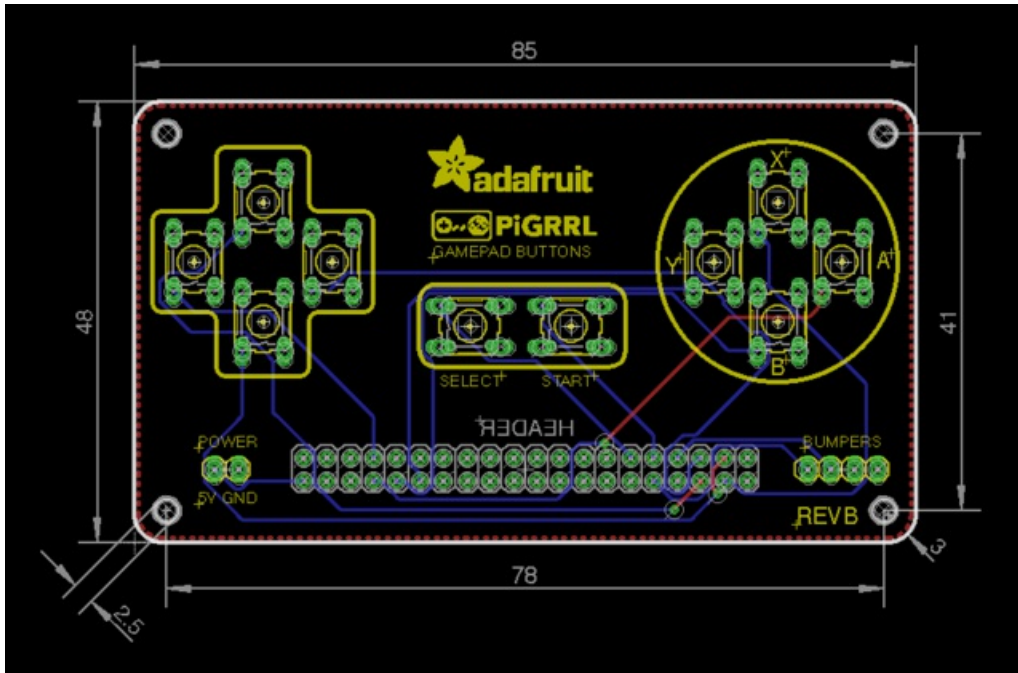


PiGRRL Gamepad PCB


Let's start assembly by putting the gamepad together. Gather up 10x 6mm tactile buttons and a 40pin IC box header.

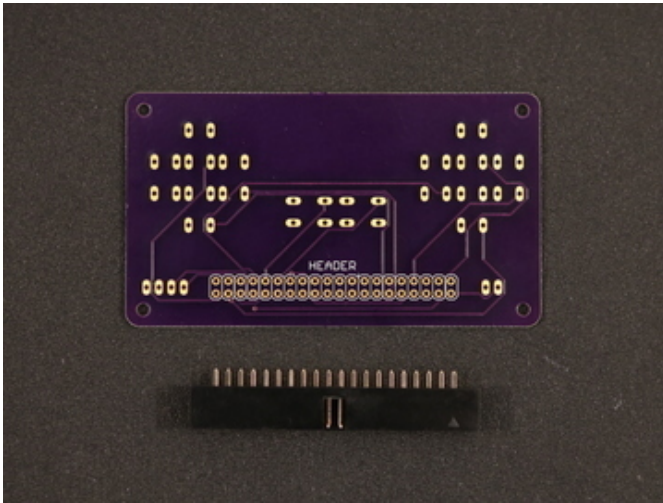

Install IC Box Header


Insert the box header into the header labeled pin on the back of the gamepad PCB. Make sure the "notch" opening is pointing towards the "header" label. Secure it in place by adding mounting tack to the sides. Now we can secure the PCB to a Panavise to assist while soldering.

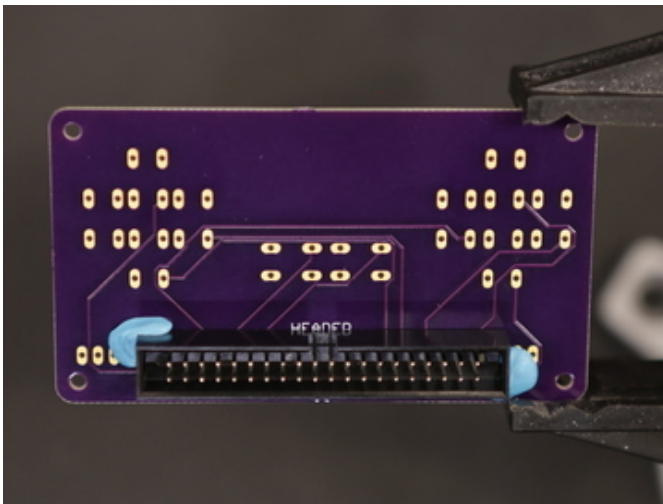

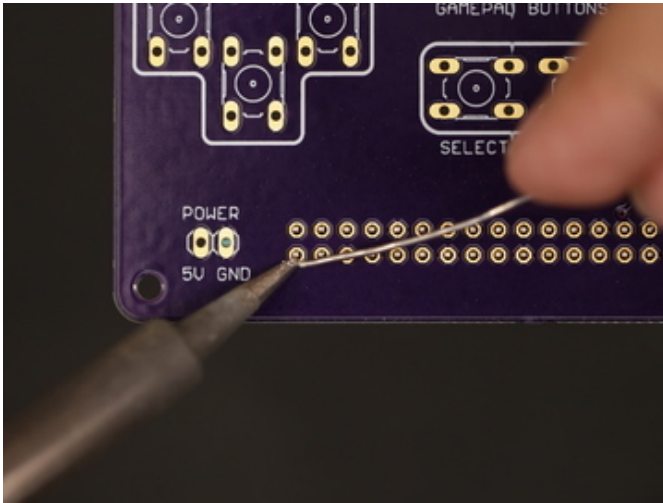

Solder IC Box Header


Flip the gamepad PCB over so the header pins are facing up. Now heat up the soldering iron and apply solder to each of the 40 pins on the header. Ensure the solder joints are clean with no cold solder joints or blobs. They should look like Hershey's Kisses.

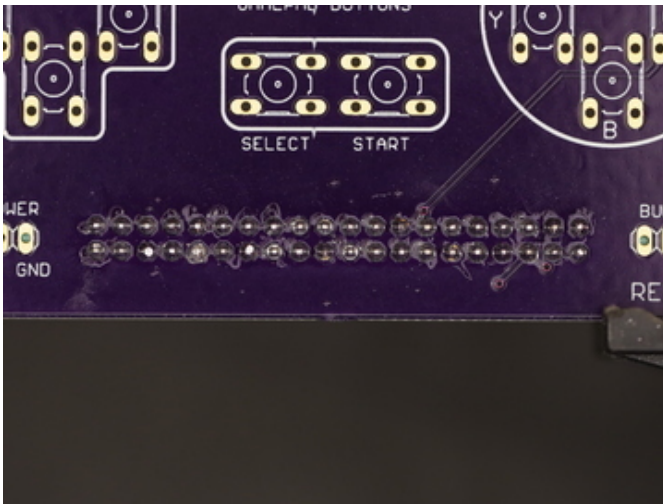




Prep 6mm Tactile Buttons


To make it easier to insert the buttons to the PCB, use a pair of flat plier to straighten out the four leads of each button.

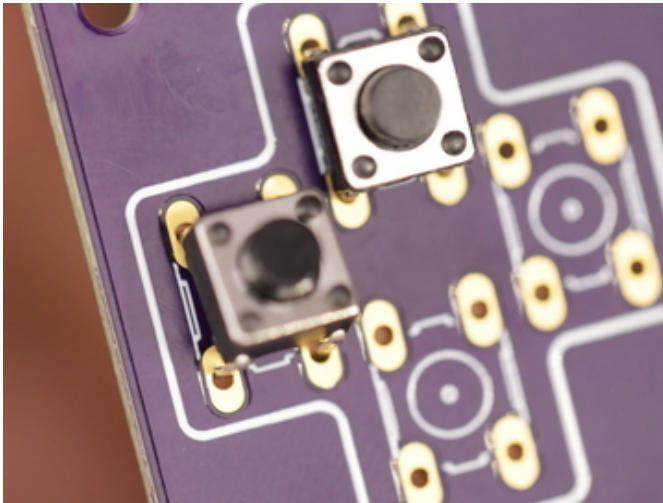


Install 6mm Tactile Buttons

Insert each button into the through-hole spots on the gamepad PCB. Once installed, place your hand over the buttons and bend each of the leads inward so they "bite" onto the PCB - This will help hold them in place.

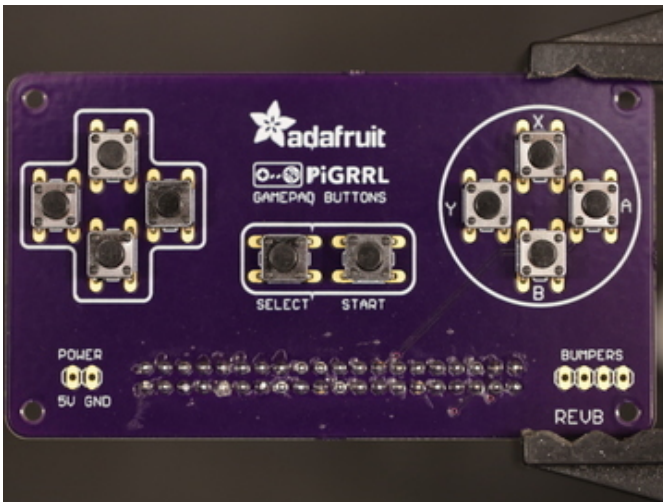

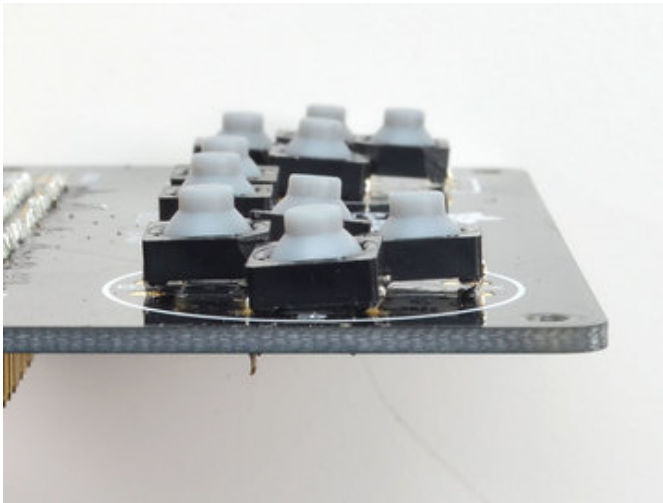


If you are using the elastomer buttons, they're still possible to use, but they won't sit perfectly flat. That's OK just make them as flat as you can!

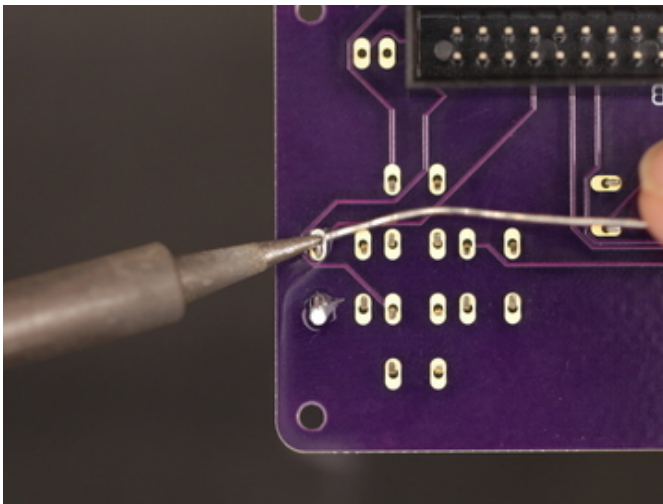

Solder Buttons to Gamepad PCB

Secure the gamepad PCB to a Panavise and solder up the buttons. Make sure solder joints are clean like you did on the pins of the IC box header.

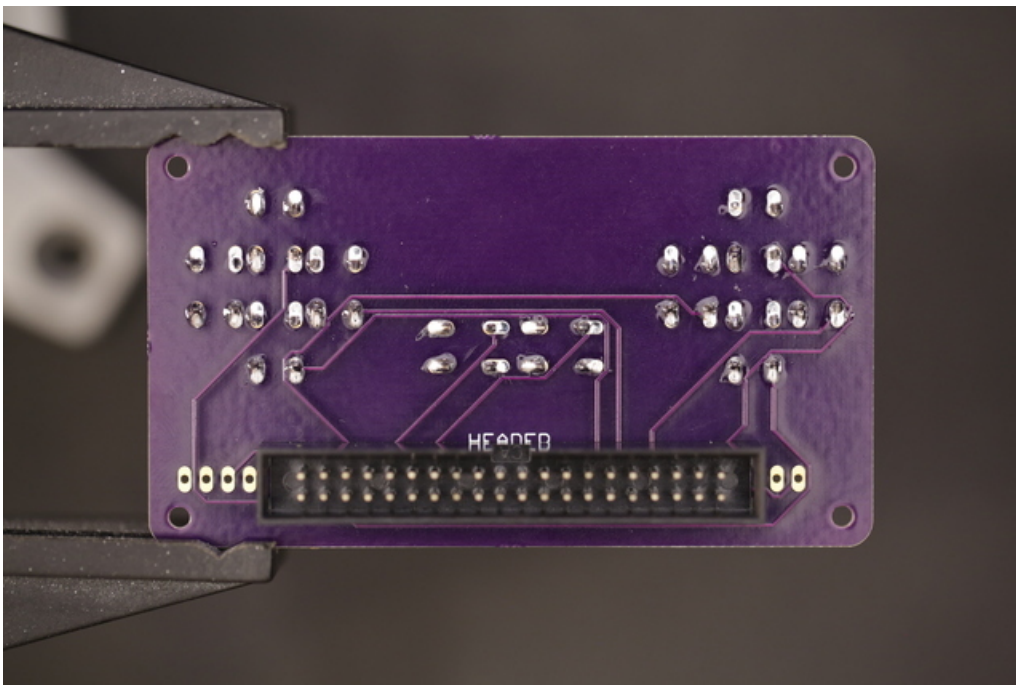

Soldered Gamepad PCB


Here's what the soldered gamepad will look like. Clean and Shiny!



Tap Gamepad PCB Mounting Holes


Now is a good time to tap the mounting holes of the gamepad PCB. We need to create threads on each hole so that it's easier to mount to the case. You can use a #4-40 sized tap tool, or a #4-40 machine screw to do this, just make sure to fasten as straight as you can.

PiTFT Display

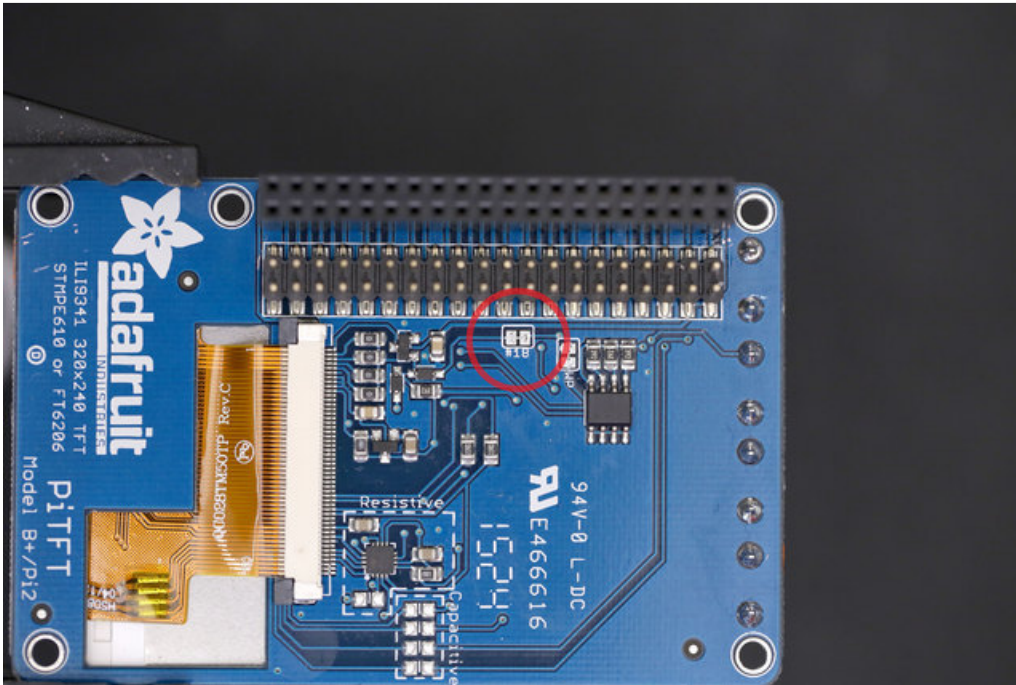

GPIO #18 - LED Backlighting

Flip the 2.8" PiTFT display over and locate the pad with **label #18**. We need to cut this trace in order to properly use GPIO 18 (The Y Button is wired to this GPIO). By default, when GPIO 18 is triggered to ground, it will disable the LED backlighting on the display - Cutting the trace here will disable that feature.

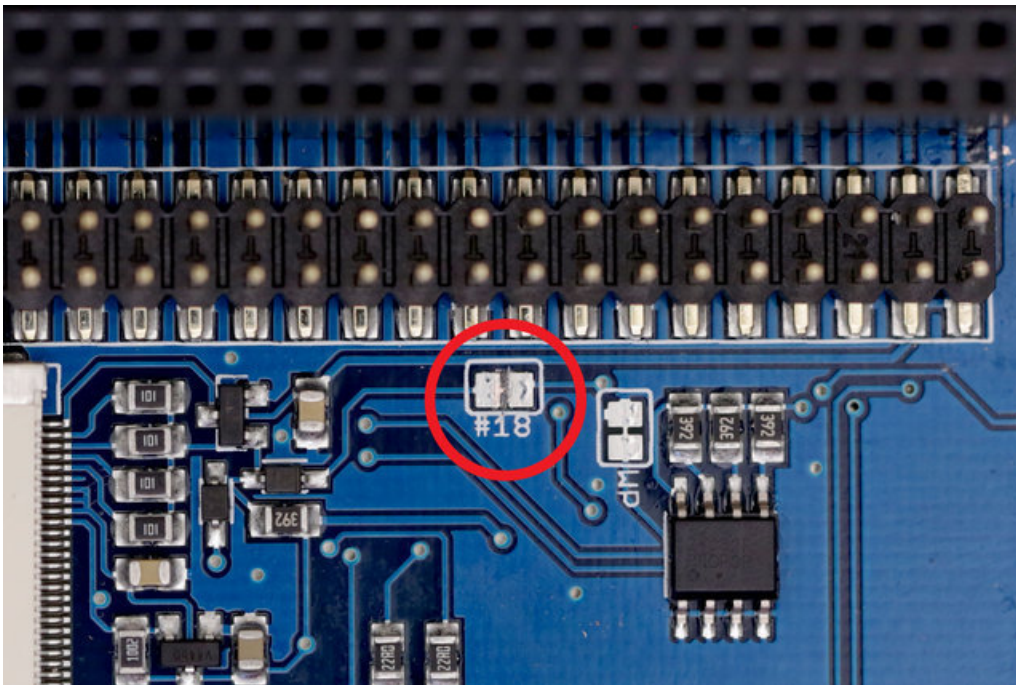


Cut Trace #18

Use a hobby knife to mark in between the two pads and make sure it is deep enough to fully break the trace.

That's pretty much all we need to do to the PITFT display!


PiCable

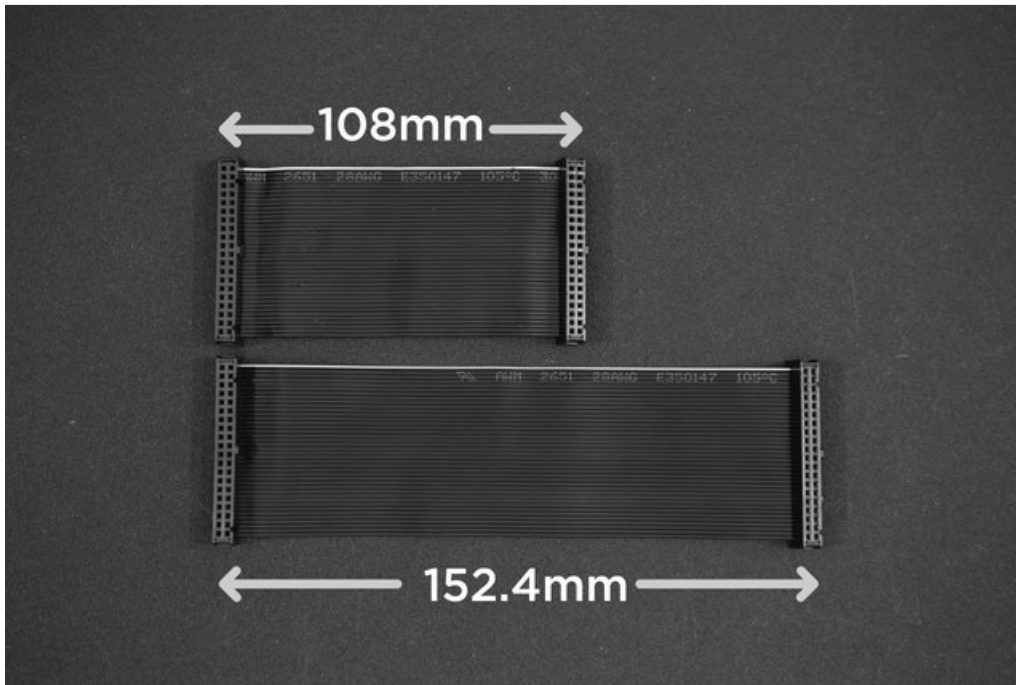

PiCable Resizing


In this section, we'll resize the PiCable so it's more manageable once installed inside the case. It's somewhat optional - you can skip it but if you find space too tight when closing the case, you may want to resize the PiCable.

The stock ribbon cable is 152.4mm(6") in length, but I've found shortening it down to 108mm is just the right fit for the length we need.

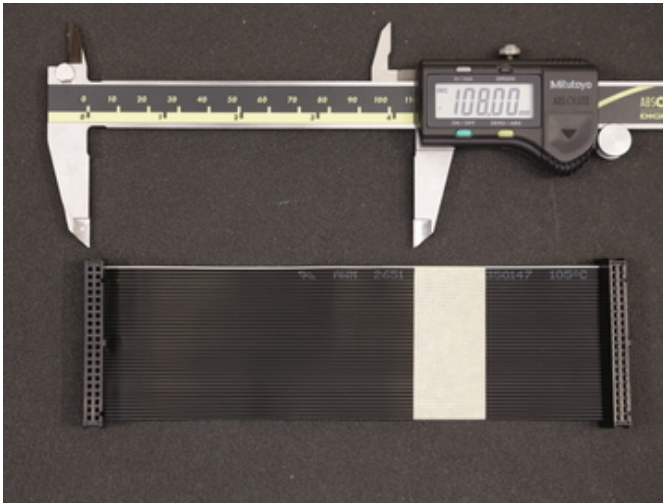


Measure, Mark and Cut Ribbon Cable
Use a pair of calipers or measuring tape to get the desired length and mark the ribbon cable - Tape, marker or otherwise.



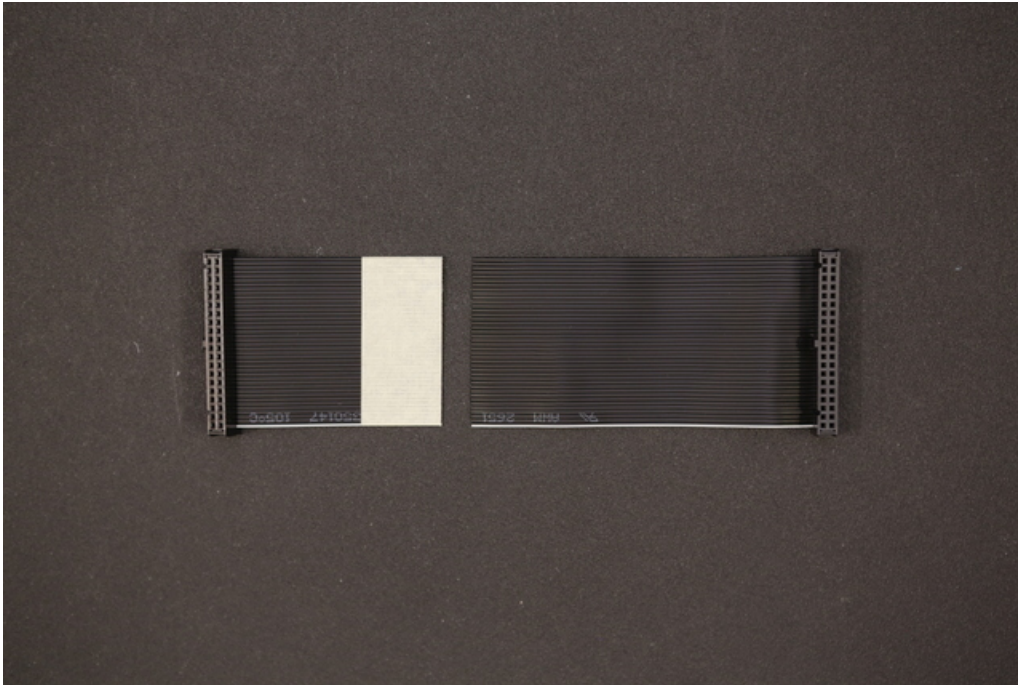




Cut Cable

With the cable split in two, set aside the longer end and keep the short end handy - we need to remove the connector from the end of it.

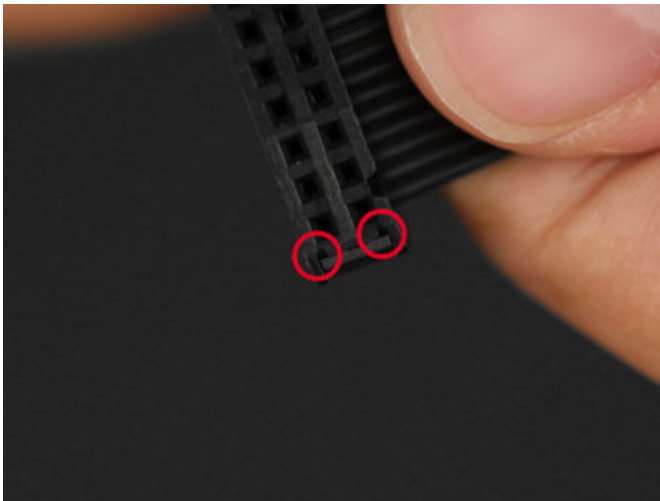


Removing Connector

Take a close look at the bottom of the connector. You'll see two tiny holes near each side. Now take a look at the side. You'll see the connector has a clip that is held in place with a notch. The goal here is to push that clip away from the notch so we can fit the top from the connector. You can fit something small and pointy such as a needle into the holes and push the clip away from the notch while pulling the top from the connector. When the clip is free, carefully pull the top part out. You'll need to do this for both sides.

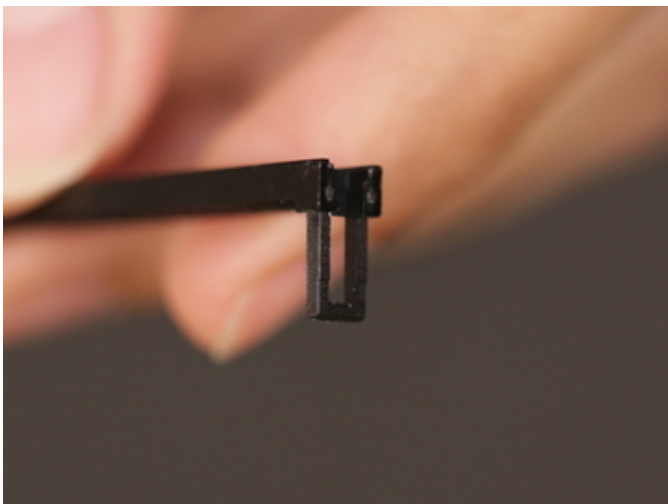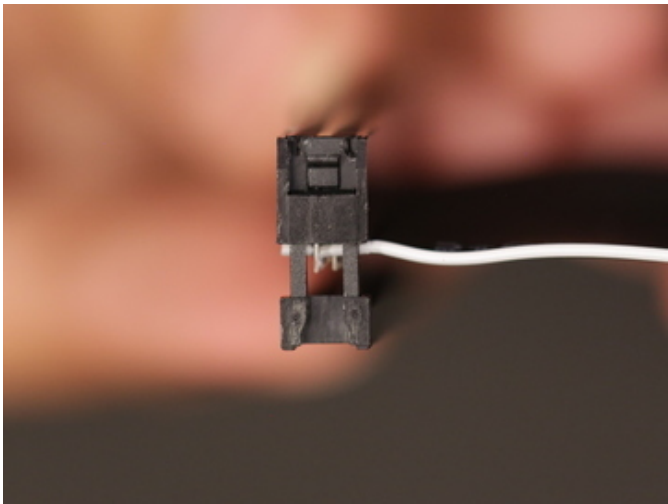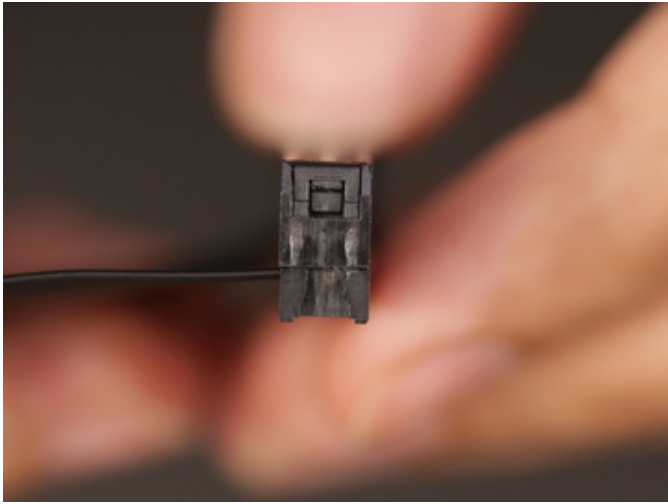

DO THIS SLOWLY - Be very careful not to break the clips off!

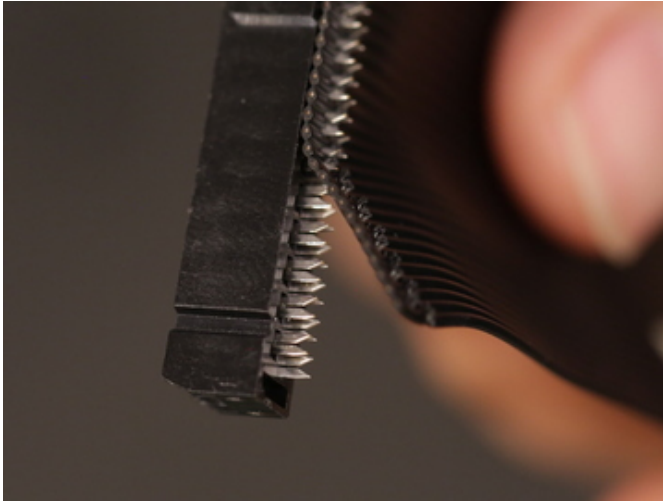

Peel Cable from Connector




With the top removed from the connector, carefully peel the ribbon cable from the connector. You should be left with the top part and the female connector. You can discard the ribbon cable.



Slowly peel the ribbon cable off - If any metal bits come out, carefully push them back into the connector.

Install Connector to Shortened Ribbon Cable


Grab the longer piece of the ribbon cable from earlier and lay the cut end over the top piece - The ribbon cable should nicely fit into the grooves of the top piece. Now grab the female connector and insert the top piece into back onto the connector. Make sure the arrow/triangle marking lines up with the side of the ribbon cable with the single white colored wire. Press the two pieces together and make sure the clips nicely fit into the sides of the connector.

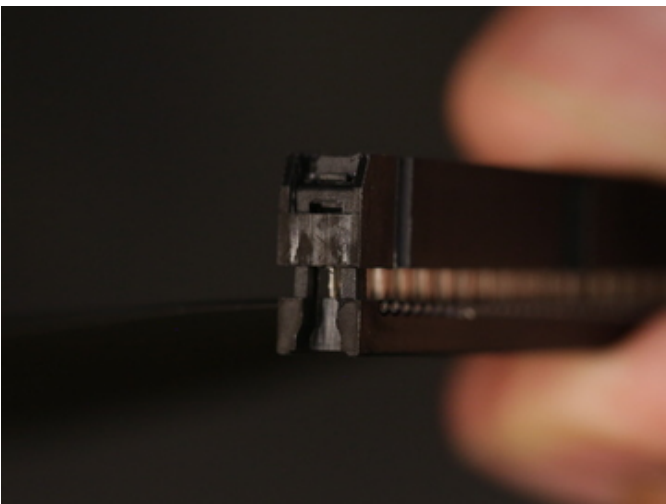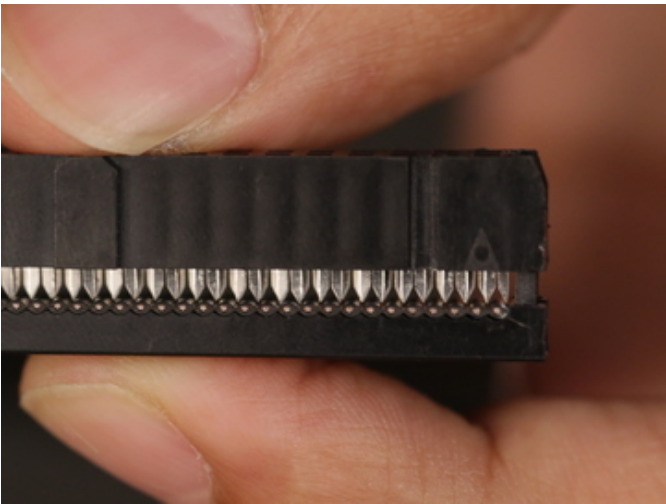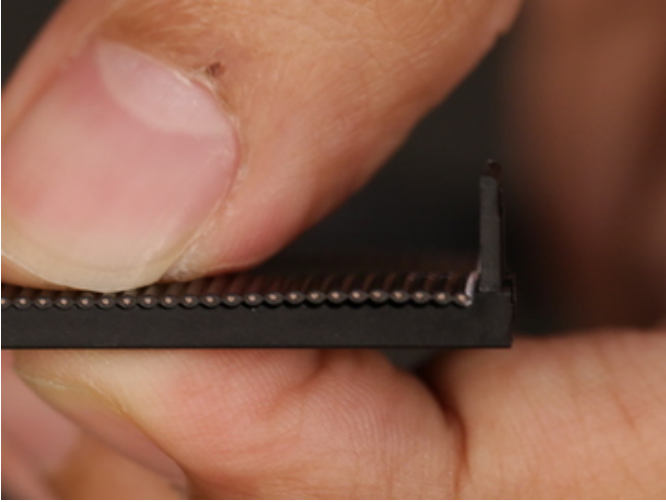



Mash Top Piece to Connector


Unless you're incredibly strong, you won't be able to press the top piece back onto the connector because it's hard to puncture the wire with the pointy teeth. The easiest way to do this is to use a rubber mallet to smash the pieces together. I recommend doing this on a hard surface (like on the floor) while holding the connector in place. Tap the top piece in sessions as straight as you can and be careful not to mash your fingers in the process. If all goes well, the teeth from the connector will puncture the ribbon cable and close the two pieces back together.

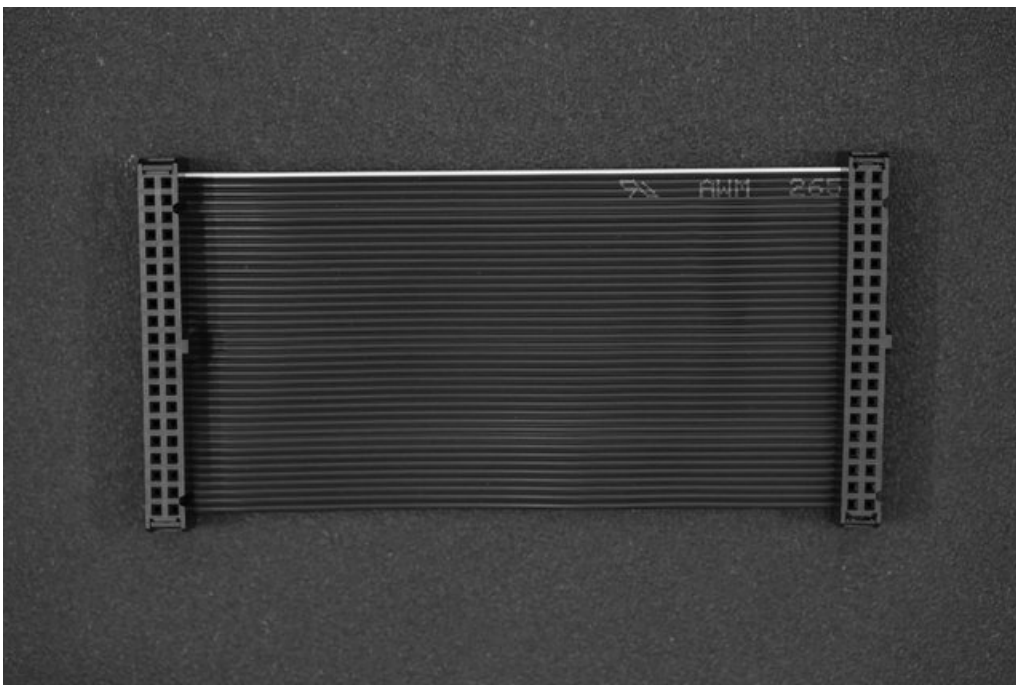

Shortened Pi Ribbon Cable


And there you have it! A shortened Raspberry Pi Ribbon Cable. Bit of a hack, I know - But it really does make closing the case much easier in when we're all done.


Amp & Speaker

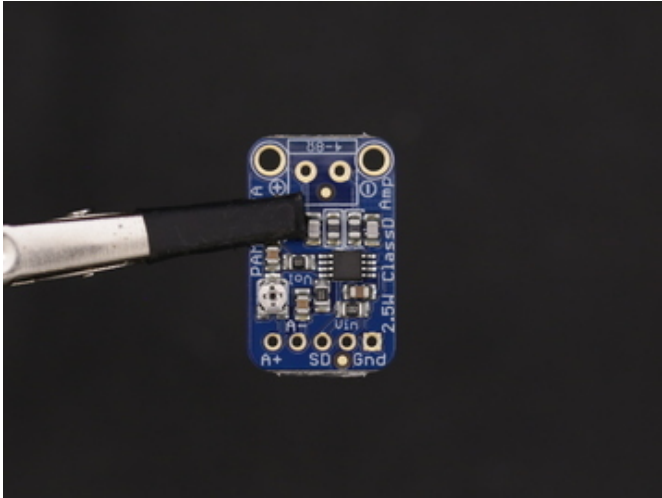

Prep PAM8302 Amp

Secure the amp to a pair of helping third hands. Use the tip of the soldering iron to heat up solder and apply to the **VIN**, **GND**, **A+**, **A-**, + and - pins. This will make it easier to solder wires to the pins.

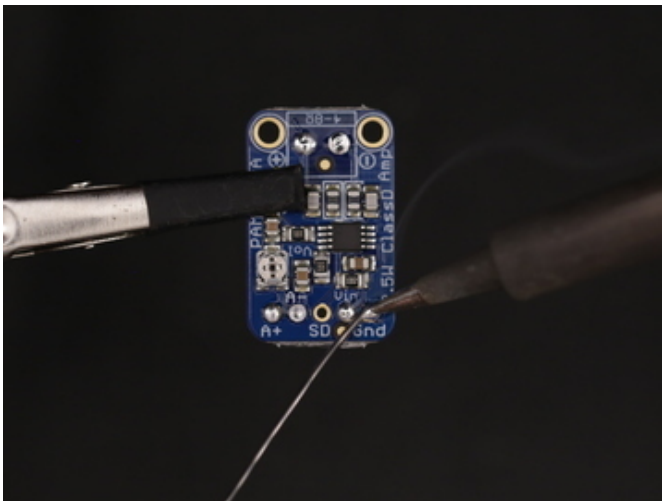

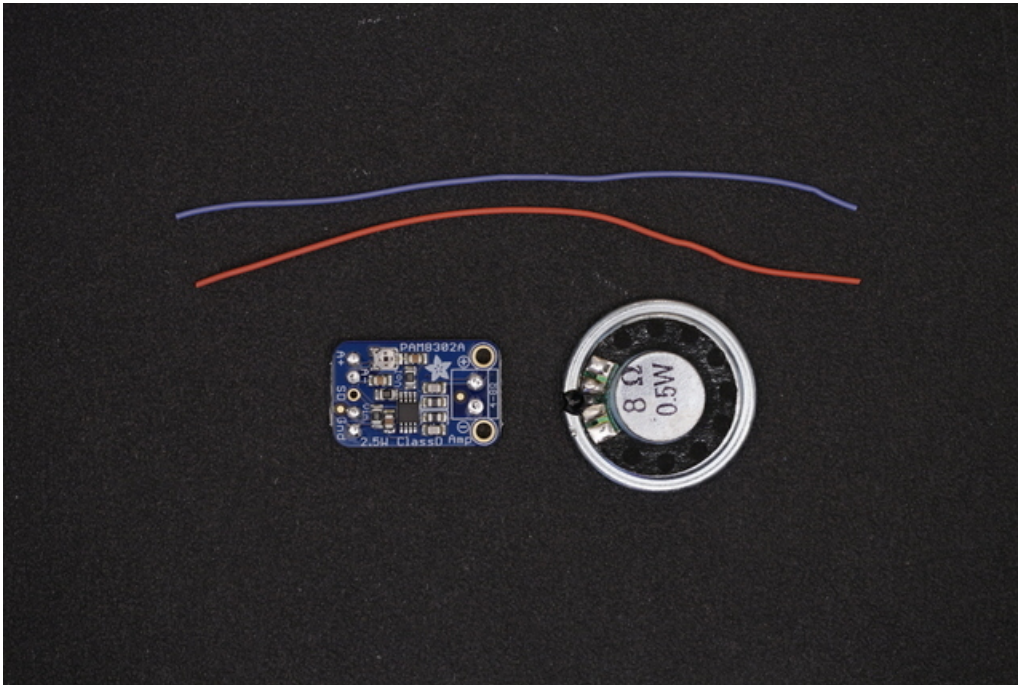


Measure Wires for Amp and Speaker


We'll need two pieces of 30AWG wires to connect the speaker to the amp. We recommend using silicone-coated stranded wire. Measure about 9cm in length for each wire. You don't have to use different colored wires, but we recommend it to help tell them apart.



Strip and Tin Wires

Use a pair of wire strippers to remove about 4mm of insulation from the tips of each wire. To keep the tips of wires from fraying, use the tip of the soldering iron to apply solder. You can bundle the tips of wires together and use a pair of helping third hands to tin the tips at the same time.

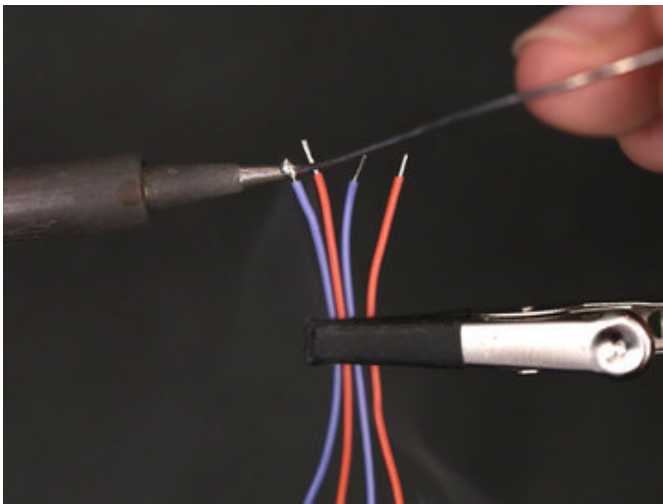


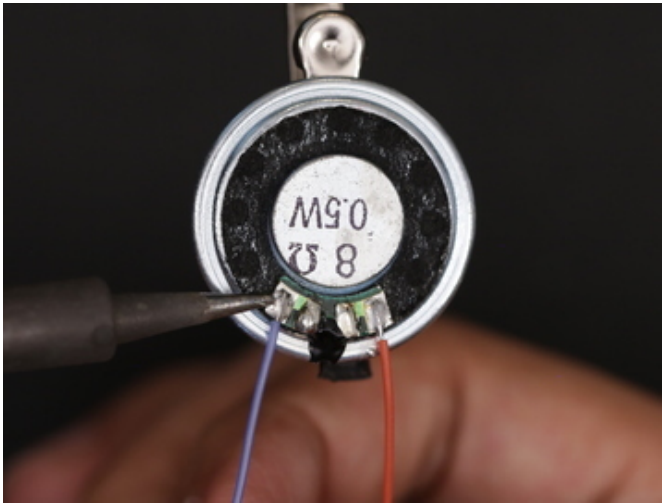


Connect Wires to Speaker

Remove the wires connected to the speaker, they're too short. We'll need to connect the new pieces of wire we just prepped onto the solder pads of the speaker.


Secure the speaker to the helping third hands - Since there's a magnet on it, we can stick it to one of the grabber arms. Reference the photo to see which is positive (right pad) and negative (left pad). Next, slip on a piece of heat shrink tubing to group the two wires.

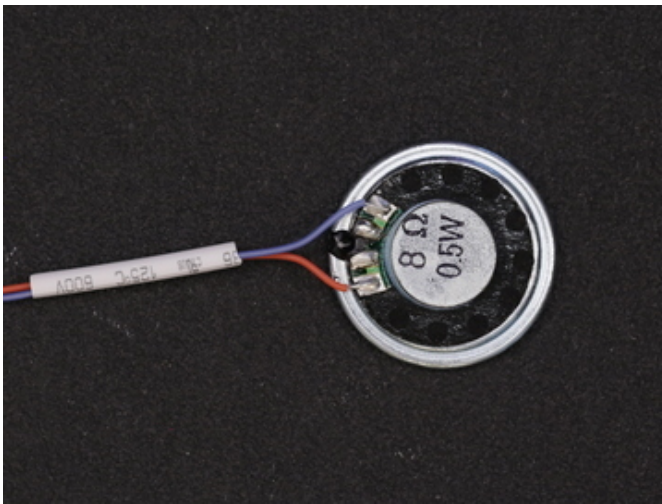

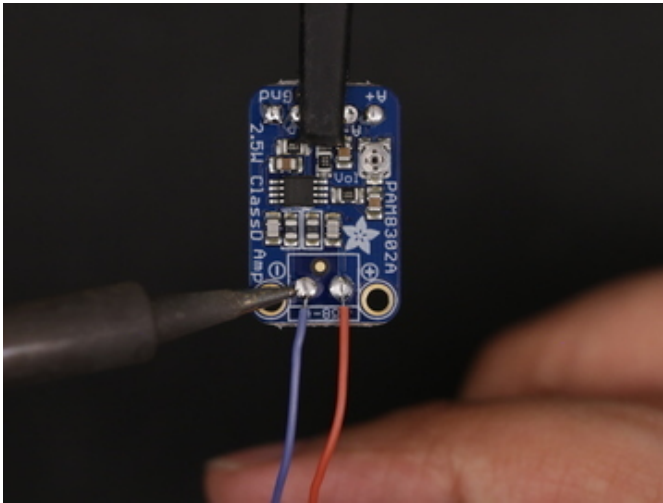


Connect Wires to Amp

Secure the amp back onto the helping third hands. Solder the positive wire from the speaker to the positive output pin on the amp, then, solder the negative wire to the negative output pin. Now we can proceed to work on the power circuit.

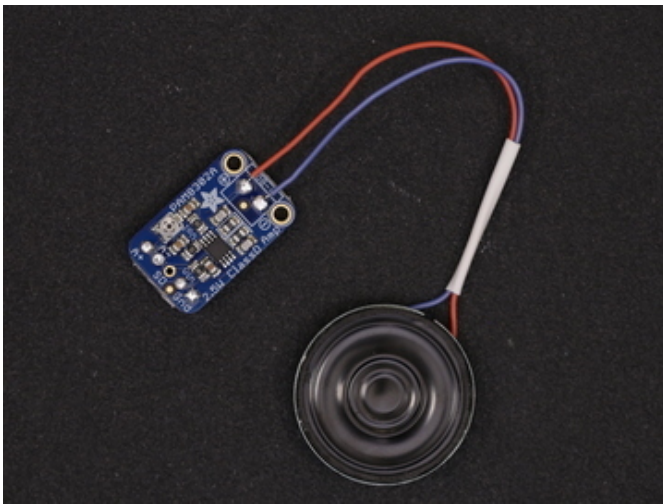


Power Circuit

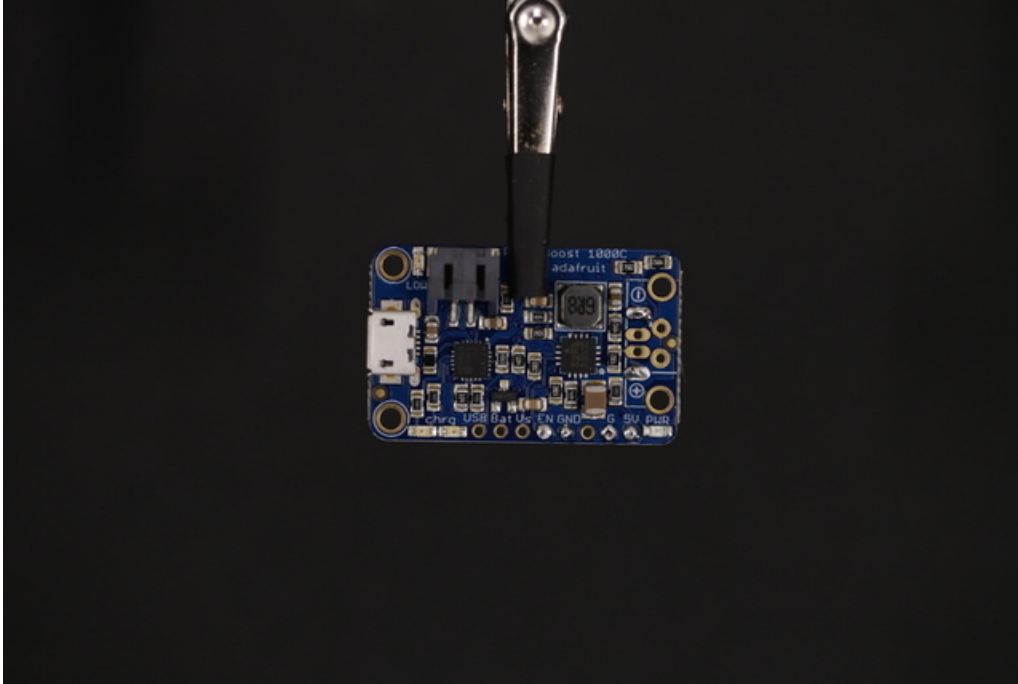



Prep PowerBoost 1000C

Secure the PowerBoost to the pair of helping third hands. Apply solder to the following pins: **Positive(+)** out, **Negative(-)** out, **EN**, **GND**, **G** and **5V**.

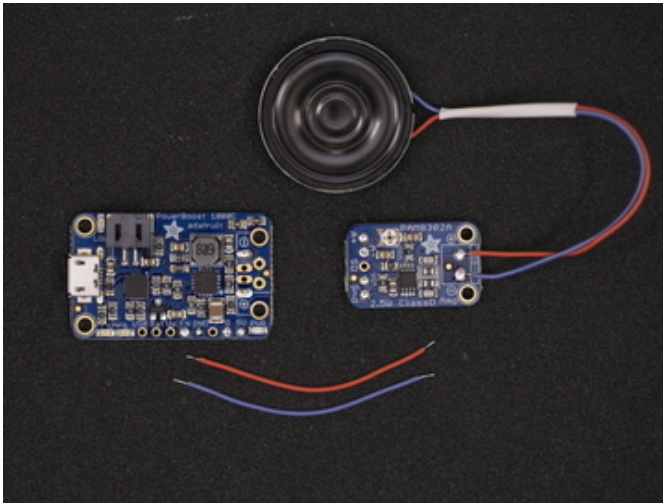


Measure Wires for PowerBoost and Amp
We'll need about 3cm in length of 30AWG wire to connect the Amp to the PowerBoost 1000C. Use wire strippers to remove about 4mm of insulation from each tip and apply solder to tin them. Now secure the amp to the helping third hands and solder the wires to the **Vin** and **Gnd** pins.

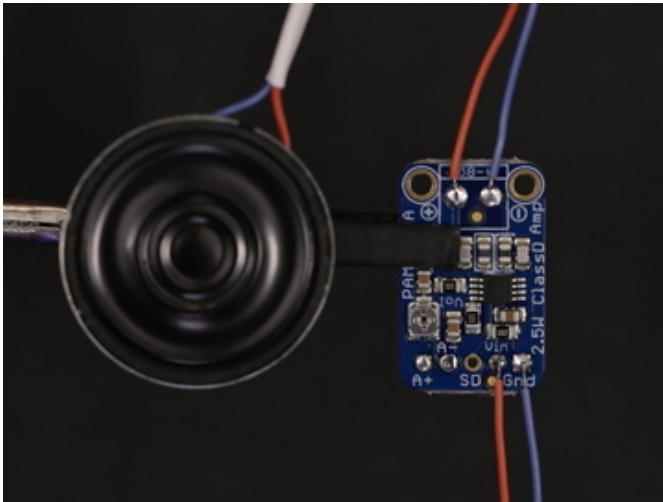

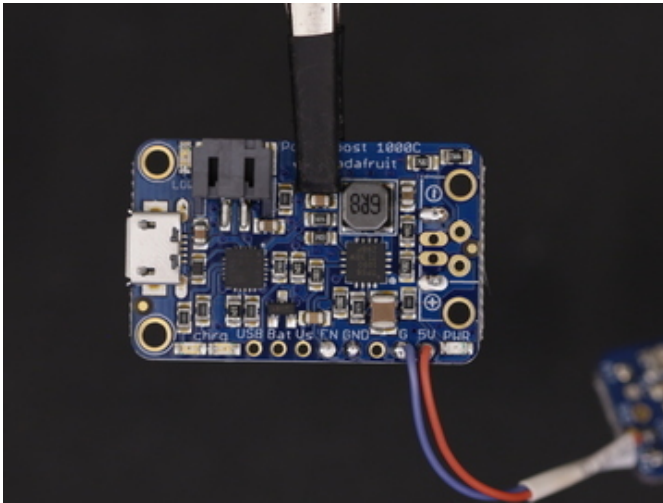

Connect Amp to PowerBoost 1000C

Slip on a piece of heat shrink tubing to the wires connected to the **Vin** and **Gnd** pins. Next, secure the PowerBoost 1000C to the helping third hands. Solder the **VIN** wire from the amp to the **5V** pin on the PowerBoost. Then, solder the **Gnd** wire from the amp to the **G** pin on the PowerBoost 1000C.


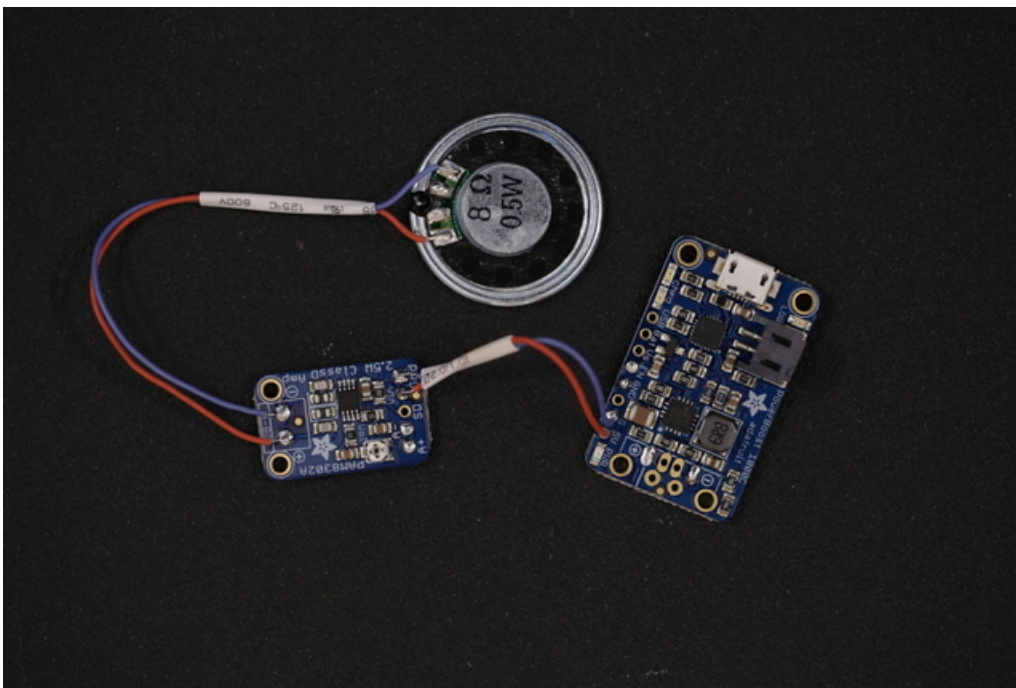





Connected Amp, Speaker and PowerBoost 1000C

Now our amplifier and speaker are wired up the PowerBoost 1000C.

Test fit Power Switch


Next up we need to connect our slide switch to the PowerBoost 1000C. First, we should do a test fit and see if our switch can fit into the case. Insert the switch into the switch cutout of the bottom case. Press it all the way through. If it's too tight, you can use a filing tool to open it up.

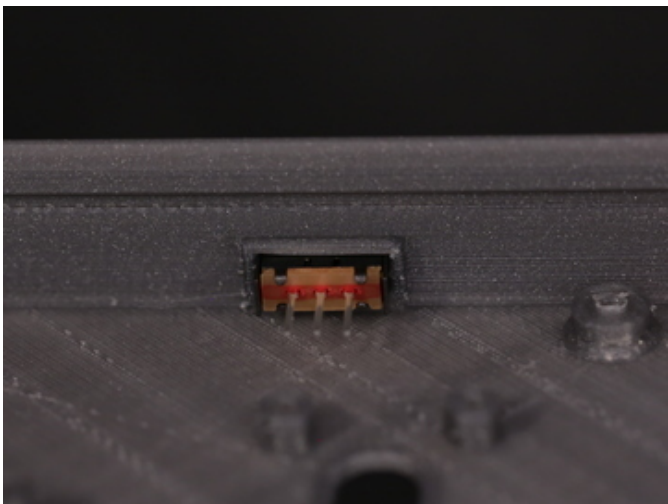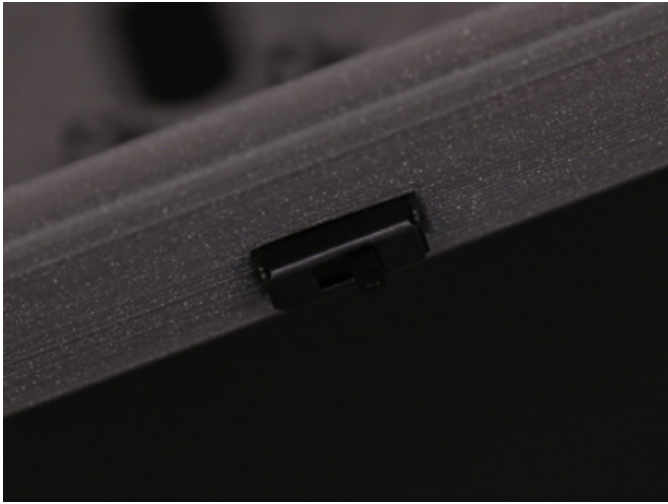

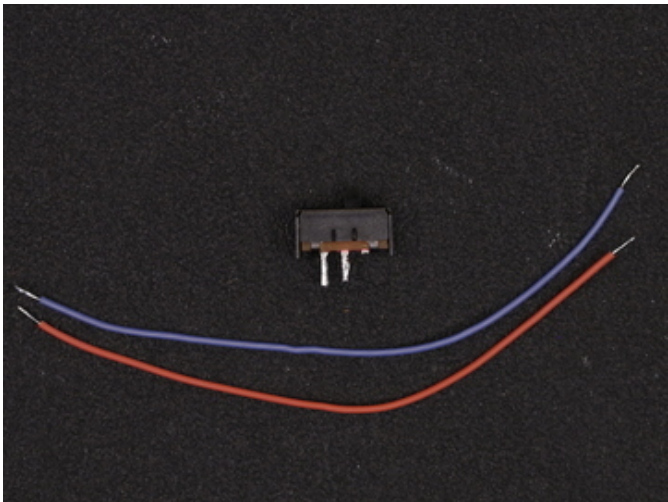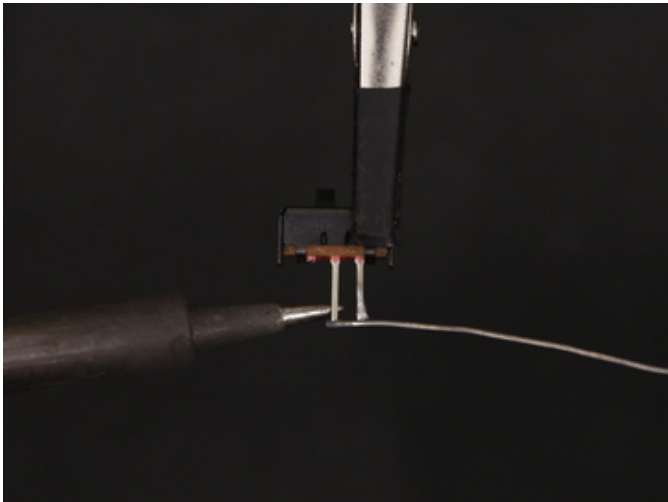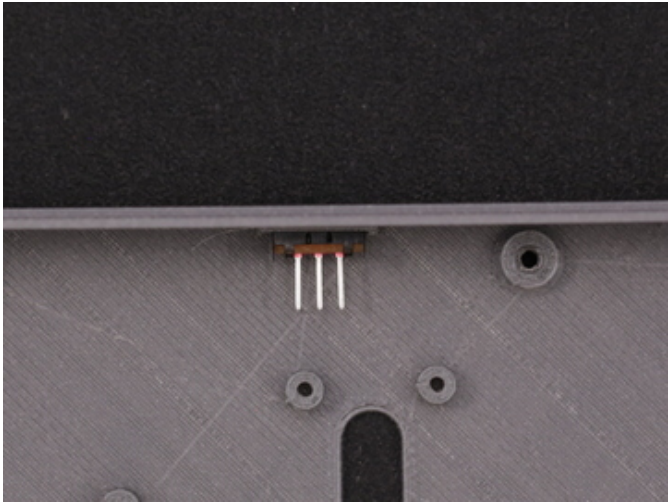



Prep Slide Switch

Remove one of the legs from the slide switch. Secure the switch to the helping third hands and apply solder to the two remaining legs. Now we'll need two new 30AWG wires that measure about 7cm in length. Strip and tin the tips of each wire.

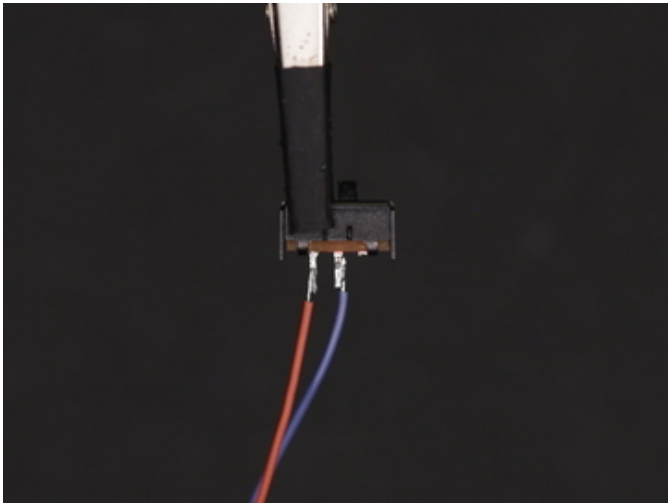


Connect Wires to Switch

Solder the two wires to the two leads of the slide switch. Add pieces of heat shrink tubing to each terminal to insulate them.

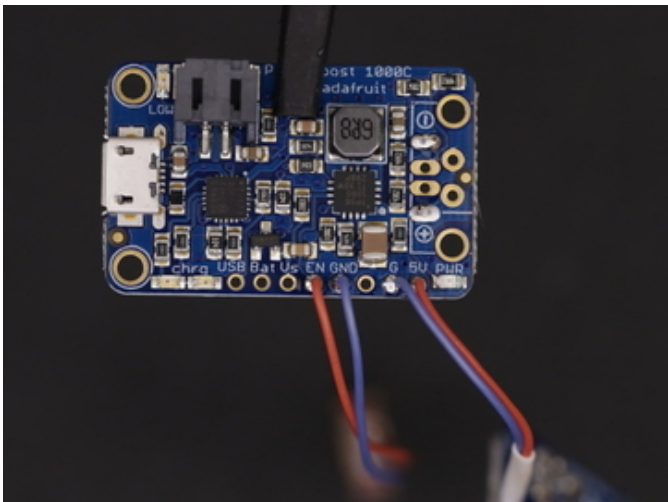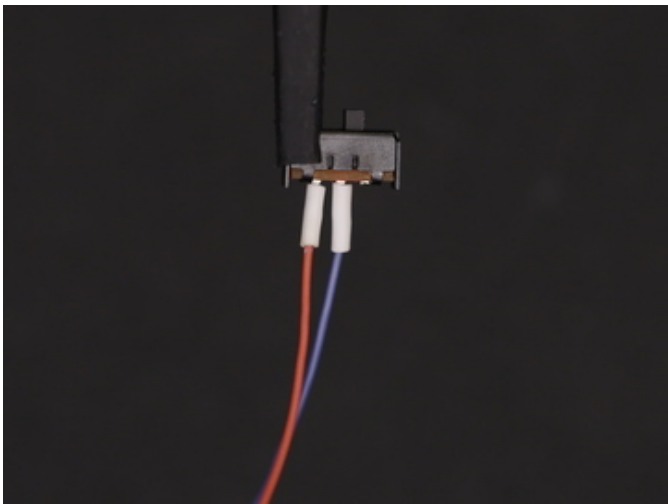

Connect Switch to PowerBoost 1000C


Now we need to solder the two wires to the **EN** and **GND** pins of the PowerBoost. The polarity doesn't matter that much here. The switch can be installed in your preferred position later (ie. Up position is ON, Down position if OFF, it's up too you!).

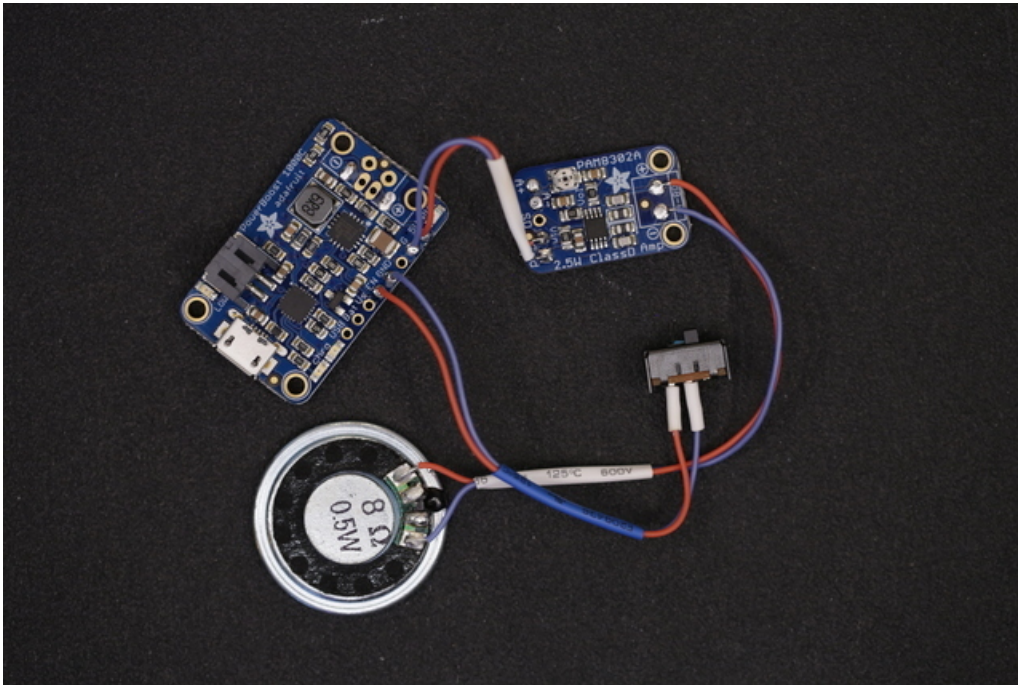

Wired Power Circuit


Now we have our amp, speaker, PowerBoost and slide switch all wired up and connected. Now's a good time to take a break or continue!

Pi Audio

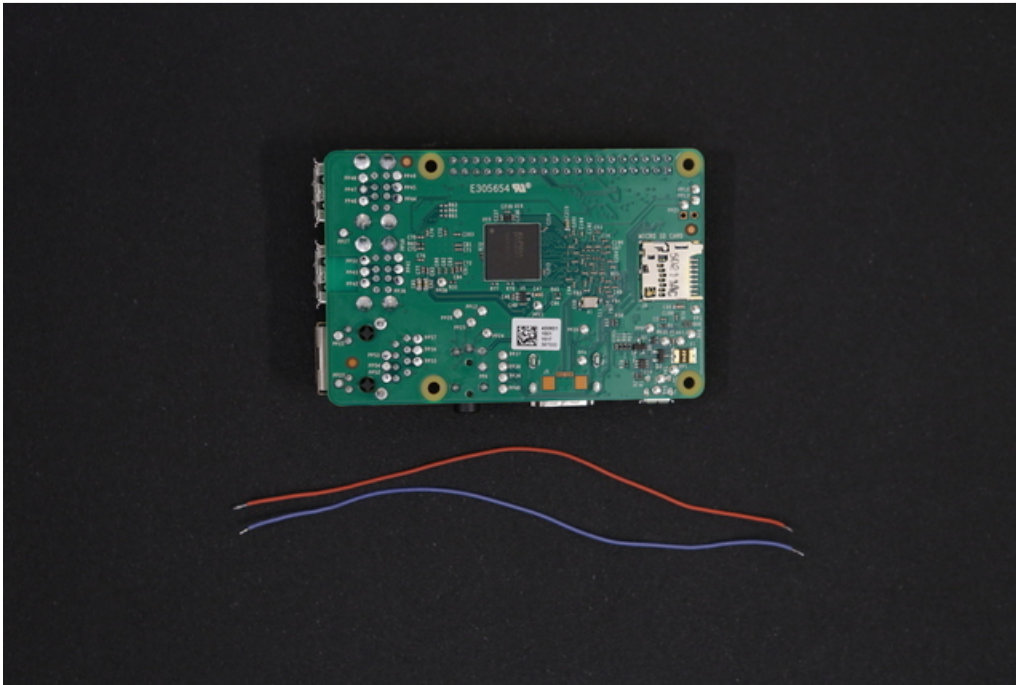

Prep Wires for Rasp Pi Audio

To connect the amp to the Raspberry Pi 2, we'll need two wires. Cut two pieces of 30AWG wires to about 10cm in length. Strip and tin the tips of each wire.

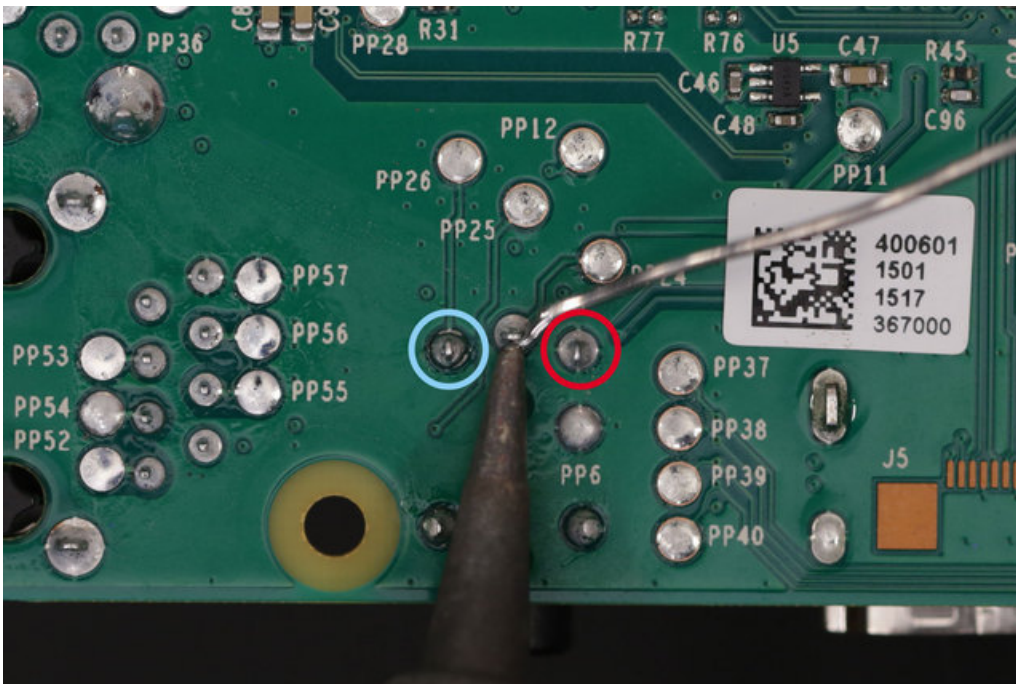


Prep Raspberry Pi Audio Pins

On the bottom of the Raspberry Pi 2 PCB, locate the audio jack and inspect the three pin connected to the component.


Take note of the two circles highlighting the pins. The left pin (blue) will connect to the negative pin on the amp, while the right pin (red) connects to the positive pin. The middle pin does not need to be tinned (disregard the tinning in the photo).

Place the tip of the soldering iron over the pin and apply a **small amount** of solder. This will make connecting wires to the audio amp much easier.

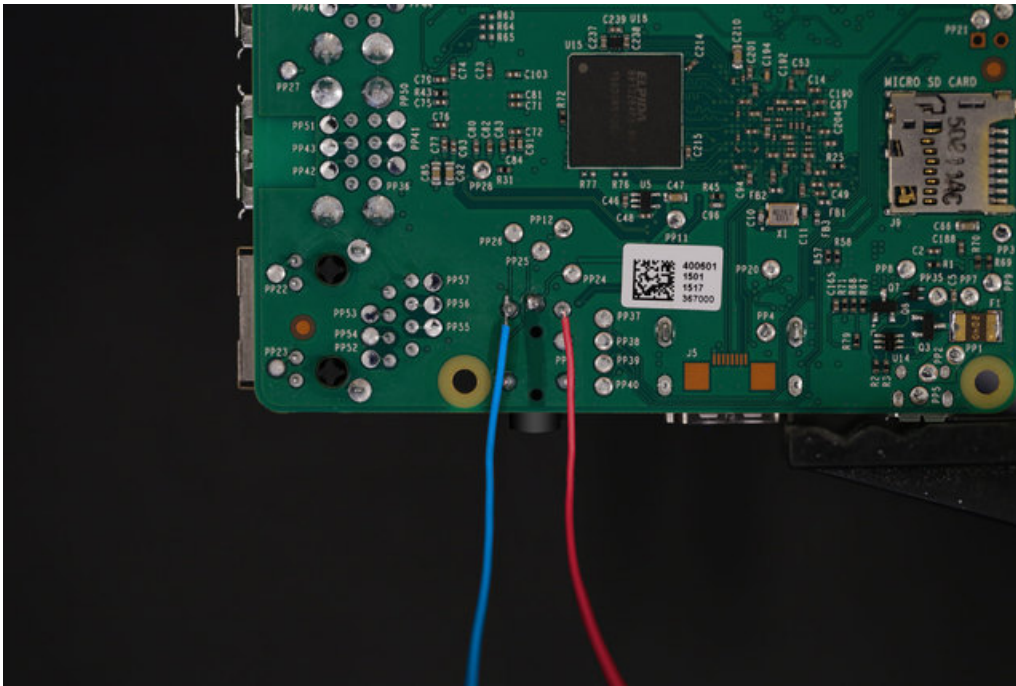

Connect Wires to Raspberry Pi

Solder the new wires to the pins on the bottom of the Raspberry Pi. The negative(blue) wire connects to the left pin, while the positive(ed) wire connects to the right pin.

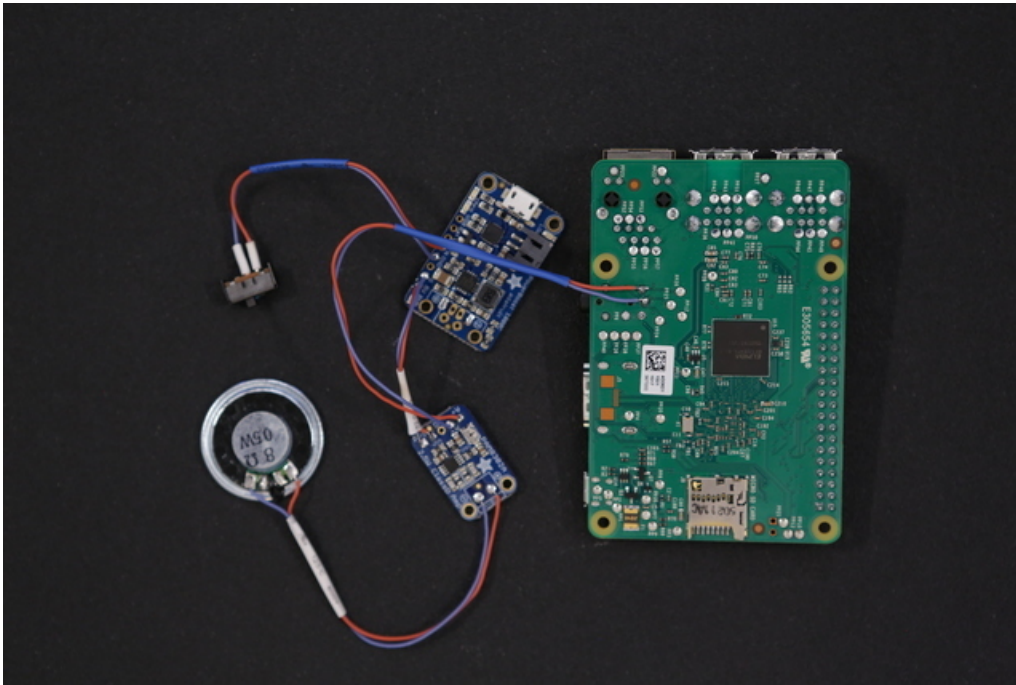


Connect Wires to Amp

Solder the negative (blue) wire to the A- pin on the amp, and the positive (red) wire to the A+ pin on the amp.

Audio Connection Confusion? You may notice the audio connections in the photo above are reserved. This photo is intended for the Pi 1 Model B+ (not the 2 or 3). Be sure to follow the first set of photos if you're using the Pi 2 or 3. If your using the Pi 1 Model B+, then reference the photo above.


Shoulder Buttons

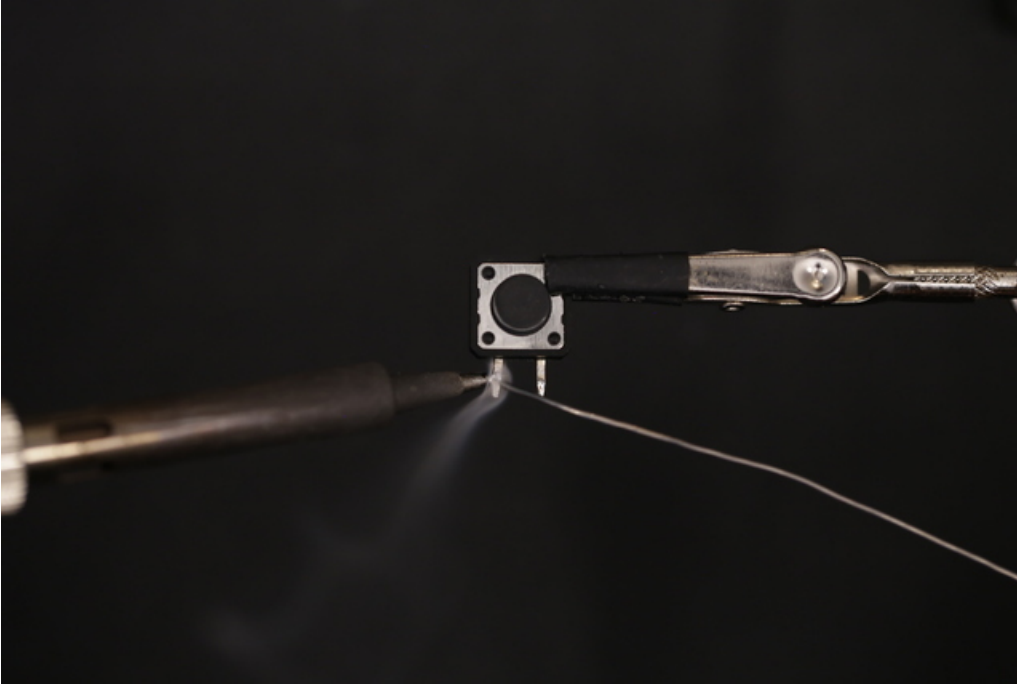

Prep 12mm Tactile Buttons


Next up we need to prepare two 12mm buttons for our shoulder L and R buttons.

Start by clipping two of the four legs from each button. Use a pair of flat pliers to flatten out the legs so they point out like in the photo. Secure the button to a pair of helping third hands and apply solder to each leg to tin them.

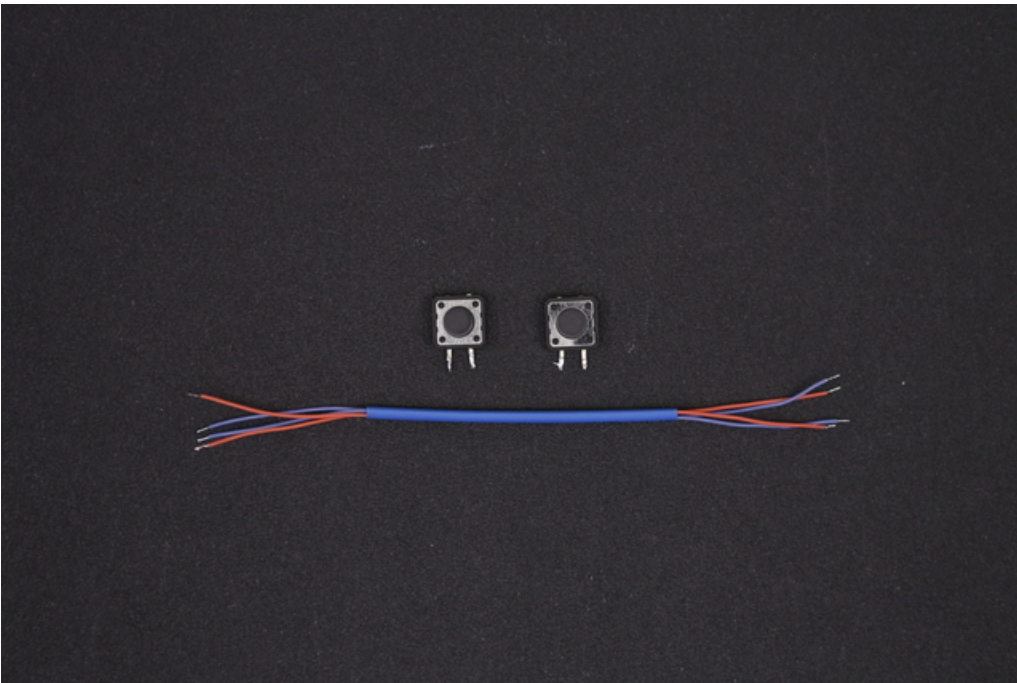


Prep Wires for Shoulder Buttons

We'll need two sets of wires (four total) to measure about 14cm in length. Strip and tin the tips from each wire and thread them through one big piece of heat shrink tubing. This will keep the wires together in a neat bundle.

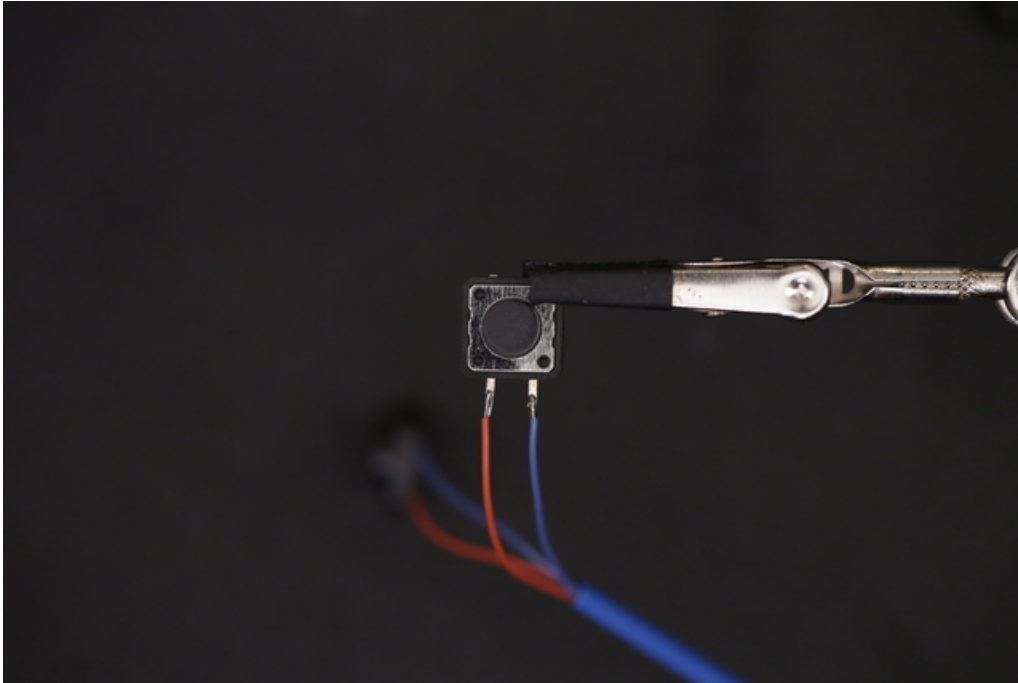

Connect Wires to Buttons


Solder wires to the legs of each button - Like before, use a pair of helping third hands to assist you. Polarity doesn't matter too much on these buttons, but you can reference the photo.

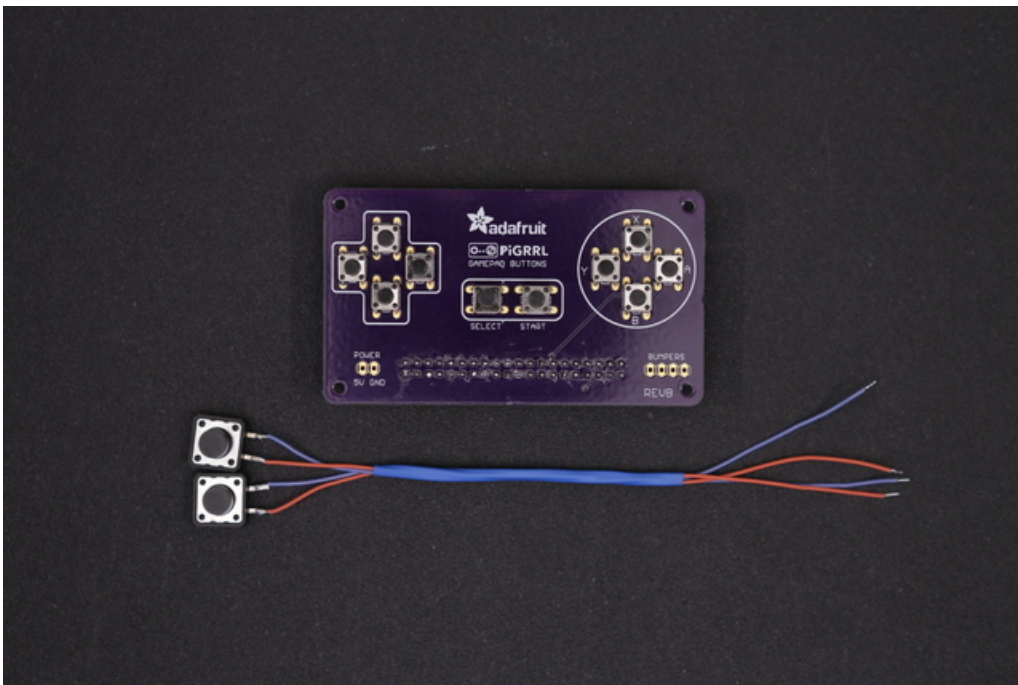

Shoulder Buttons


OK, now we have our shoulder buttons prepped and ready to wire into our gamepad PCB. The next page will go through the final connections for our build.

Final Connections

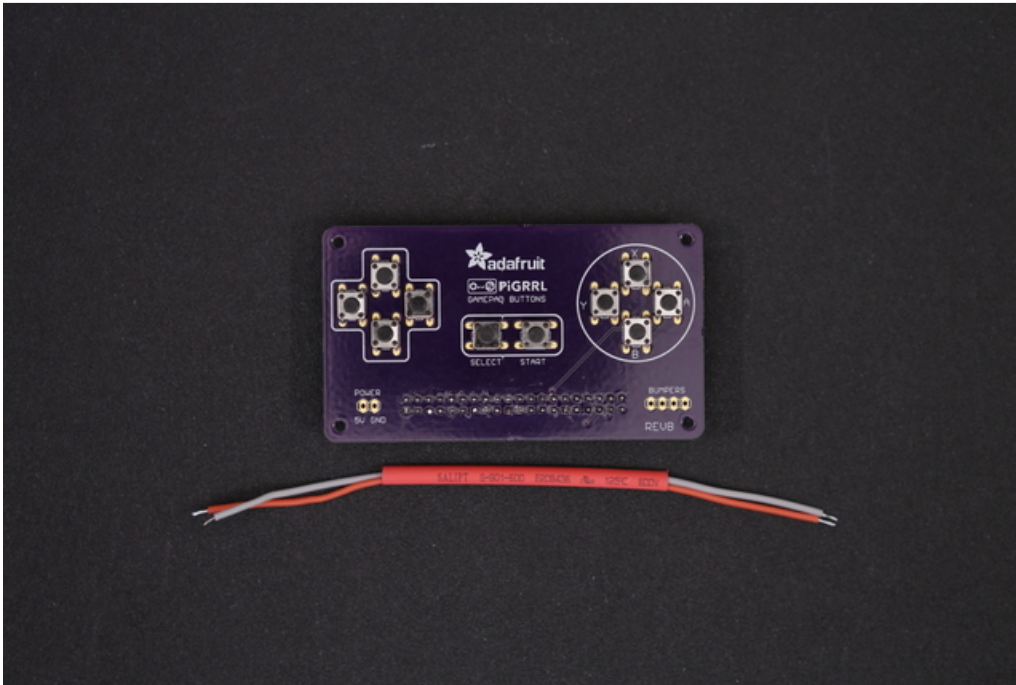


Prep Wires for Gamepad PCB


Now we need to connect our gamepad PCB to the PowerBoost 1000C. We'll need two 26AWG (which is thicker than the 30AWG we've been using so far) that's about 14cm in length. Like before, strip and tin the ends of each wire. Then, let's slip on a long piece of heat shrink tubing to keep the two wires together.

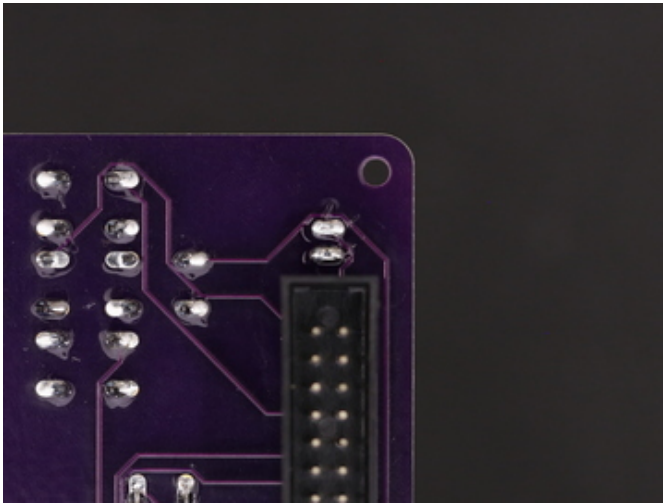

Prep Power Pins on Gamepad PCB


Locate the power label on the gamepad PCB and take note of the **5V** and **GND** pins. Flip the gamepad PCB over and secure it to a Panavise to hold it in place. Apply solder to the two pins and solder in our two 26AWG wires. Use the photo to reference which wires goes were (red right, white left).

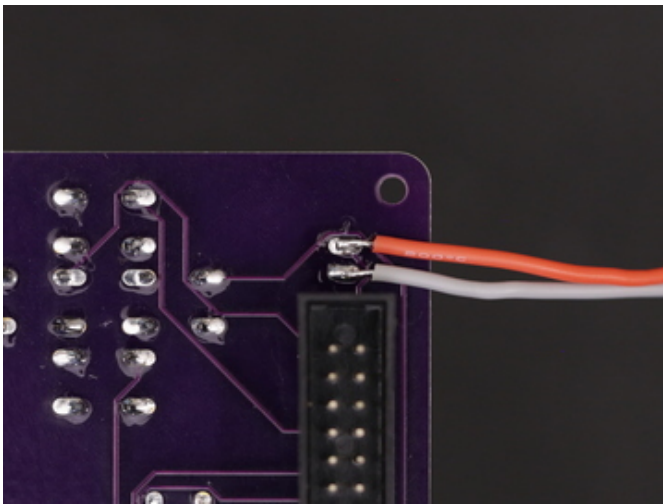


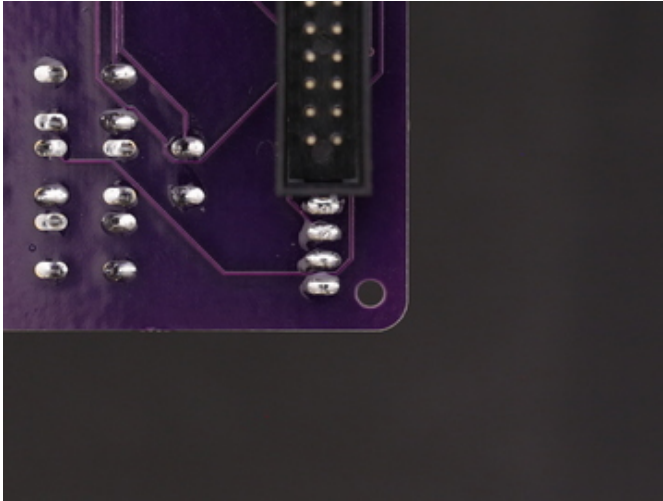

Connect Shoulder Buttons to Gamepad PCB


Locate the bumper labeled pins on the opposite side of the gamepad PCB. Referencing the photo, from the bottom up, the order of pins are: **L button**, **R button**, **Ground**, **Ground**. Once you're familiar with the pin order, solder in the wires from the 12mm tactile buttons.

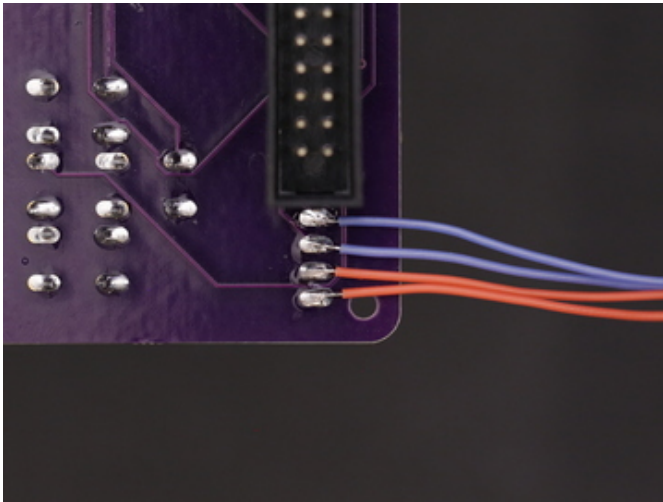

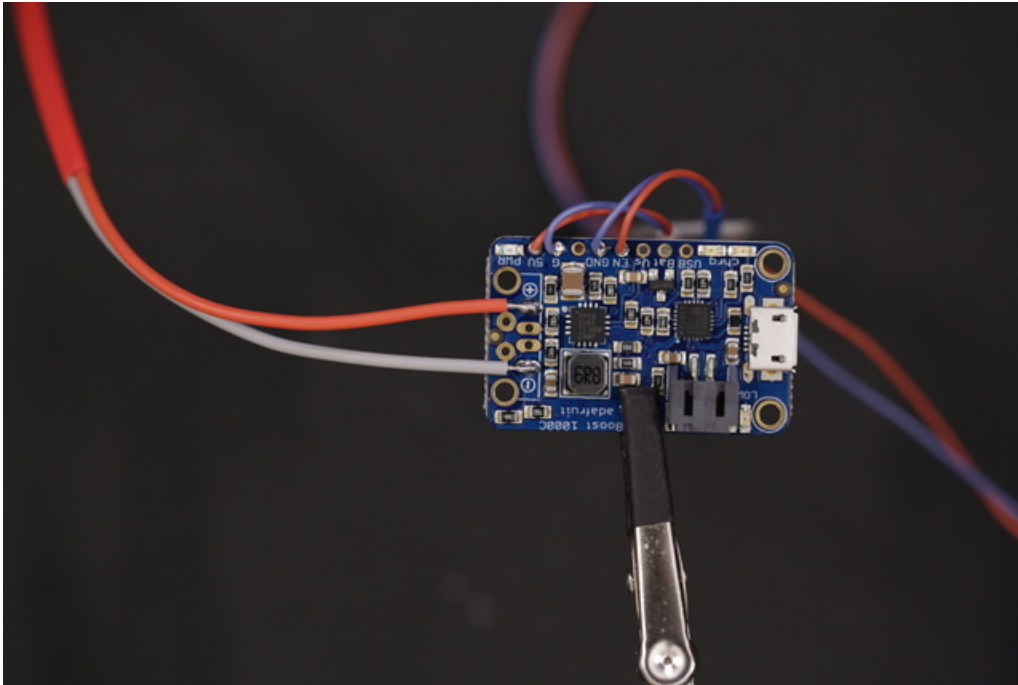

Connect Gamepad PCB to PowerBoost 1000C

Now we can solder in the two wires connected to the power pins of the gamepad PCB to the power output pin on the PowerBoost. The 5V wire from the gamepad connects to the positive pin on the PowerBoost, and the Ground wire from the gamepad connects to the negative pin on the PowerBoost.

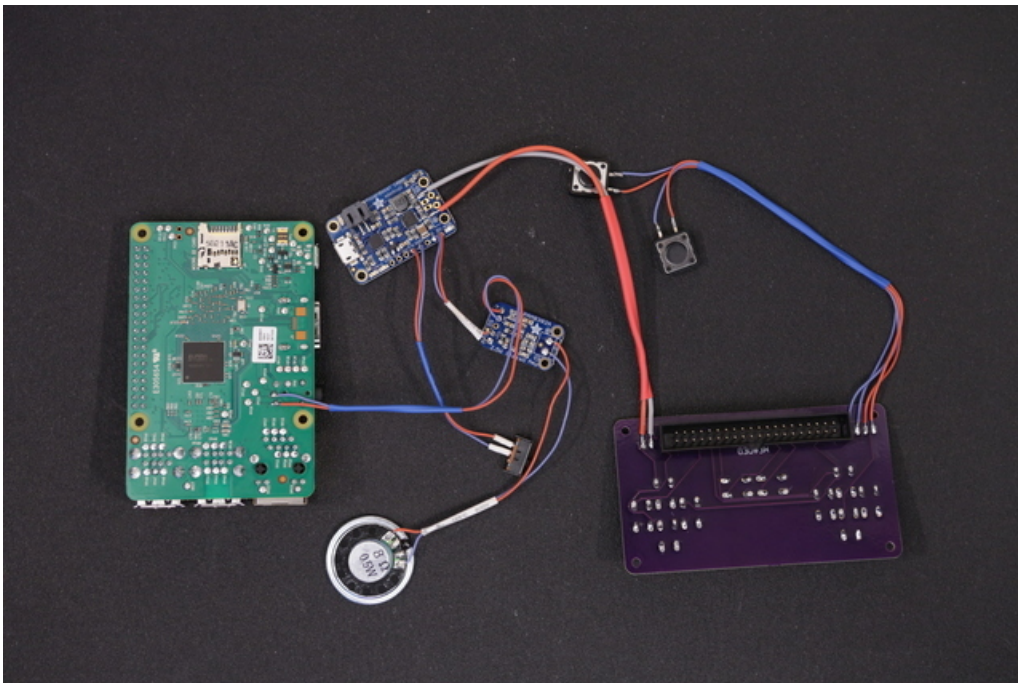

Final Wired Components

OK, now all of our wires are connected, yay! Our components are connected and we're ready to mount them to the case. In the next page, we'll finish up our build!

Test Components

It's good practice to test all of our components before we start mounting things to the enclosure. Just as a sanity check, this ensures our components and wiring is all good and working. Go ahead and insert your microSD card into the Raspberry Pi - make sure the software is already installed and loaded.

Once that's sorted, plug in the JST connector from our battery into the PowerBoost 1000C. Next, plug the Pi ribbon cable into the PiTFT GPIO breakout and connect the other end to the PiGRRRL Gamepad. Then, lay the PiTFT over the Raspberry Pi and press it down to connect together the GPIOs until they're fully seated.

Now you can flip the slide switch to power on the circuit. The PiTFT should display the boot up scripts and automatically launch RetroPi Emulationstation. Test out the DPad and buttons to see if everything works as expected. You should hear audio once a ROM is loaded. If you don't have any loaded, reference the software page for uploading ROMs (You should be able to launch Quake from the Ports section).

If the audio isn't working, or the buttons aren't triggering, you'll want to double check your wiring. If you are not sure how to use a multi-meter to check for any shorts and continuity, you may want to post up any specific issues in the Adafruit Forums, where our dedicated engineering support team can help you trouble shoot.

If everything works during your test, you should be safe to power down the Raspberry Pi and move onto the next page.



Mount Components




Install 2.8" PiTFT


The first component we need mount to the case is the display screen. Before we do that, we'll need to insert the PiTFT rubber buttons into the case. Place them over the cutouts from the inside of the top case and press them into place.

Now that the PiTFT button actuators are in place, lay the PiTFT screen over the case. Line up the mounting holes with the standoffs. Then, insert #4-40 3/8 sized machine screws into each mounting hole and fasten them into place. Be careful not to apply excess force, and fasten slowly.

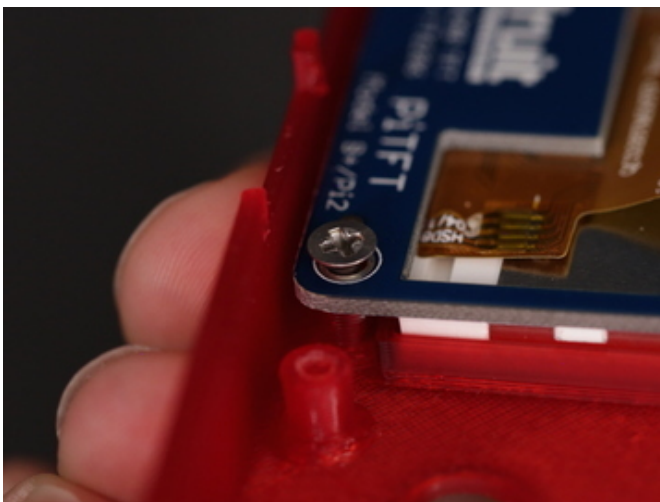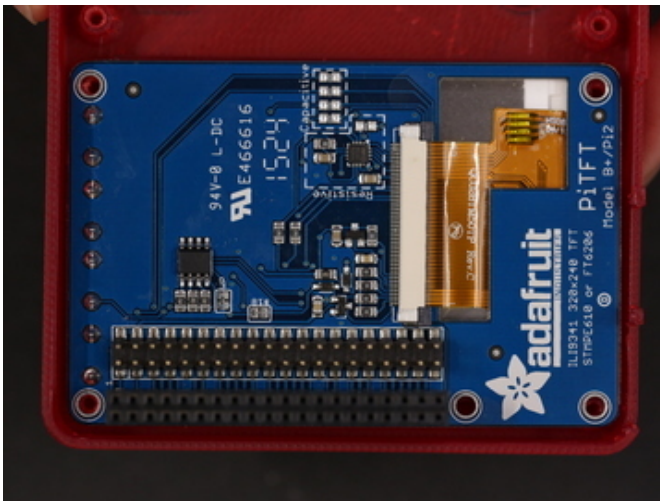

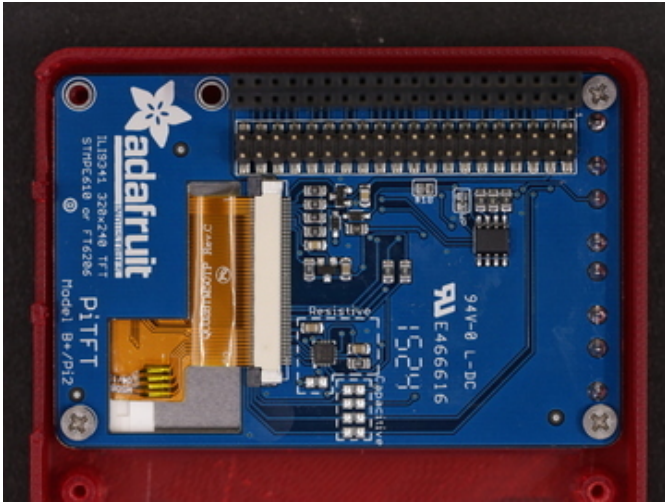


DO NOT insert screws all the way through standoffs! Reference the photo to see required depth.


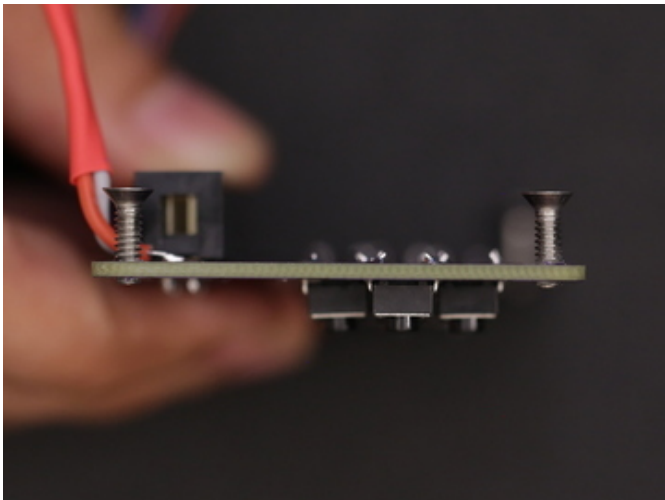


Install Gamepad PCB

Next up, let's fasten #4-40 3/8 sized machine screws into the mounting holes on the corners of the gamepad PCB. Insert them from the top of the PCB so that they're just barely protruding from the back side. This makes it easier to mount it to the standoffs in the case.

Now, insert the rubber **D-Pad**, **Action Buttons** and **Pause/Start** actuators into the cutouts of the top case part. Place the gamepad PCB over the standoffs and line them up with screws. Slowly (and carefully) fasten the screws into the standoffs. However, **DO NOT** fasten them all the way through! Only fasten them down until they're deep enough to be lower than the height of the case. Please reference the photo - if screws are inserted too far, they could protrude through the surface of the case.


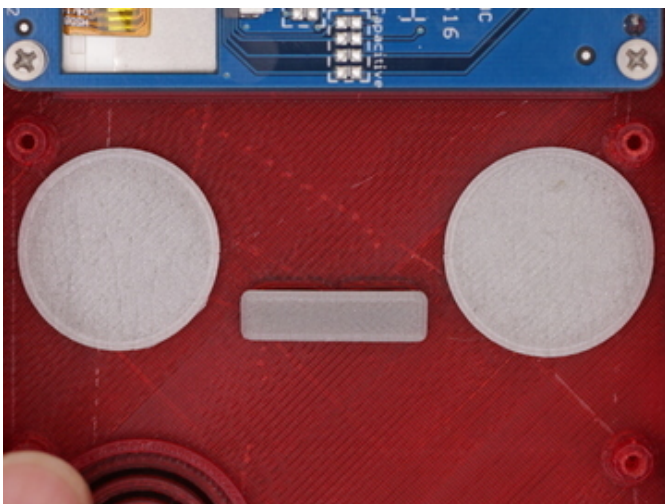


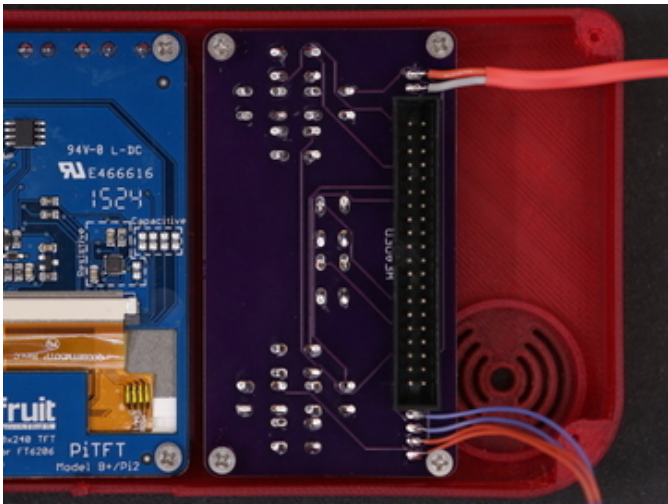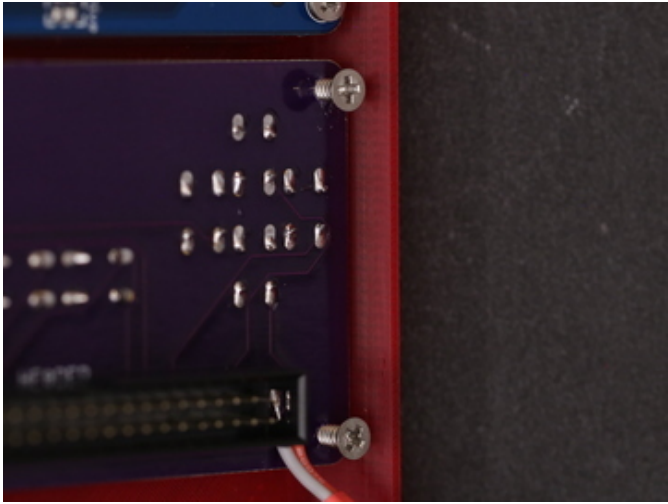




Connect Pi Cable

Next, we can install the Pi Cable to connect the Gamepad PCB to the PiTFT display. The orientation of the Pi cable is important, so reference the photo and follow the markings.

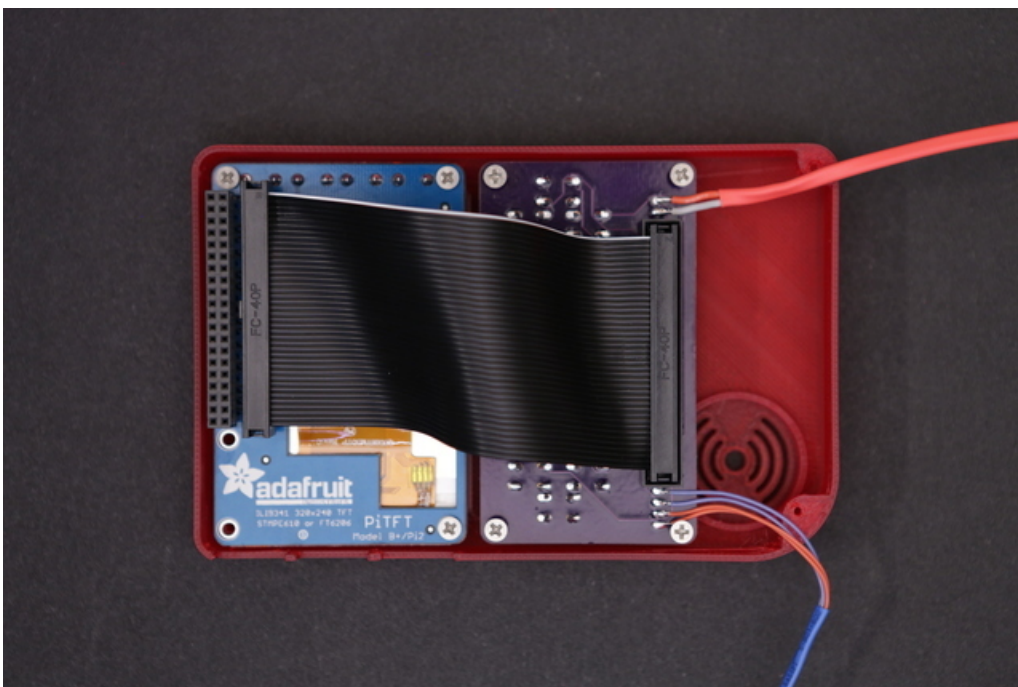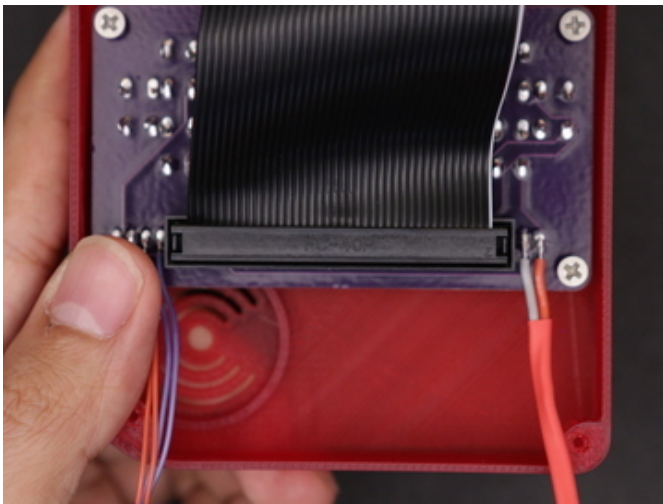


Connected PiTFT and Gamepad

Now our PiTFT display and Gamepad PCB are mounted to the case. Press the buttons on the PiTFT and Gamepad to test them and see they feel good. If the buttons get stuck, the gamepad isn't flush with the standoffs.

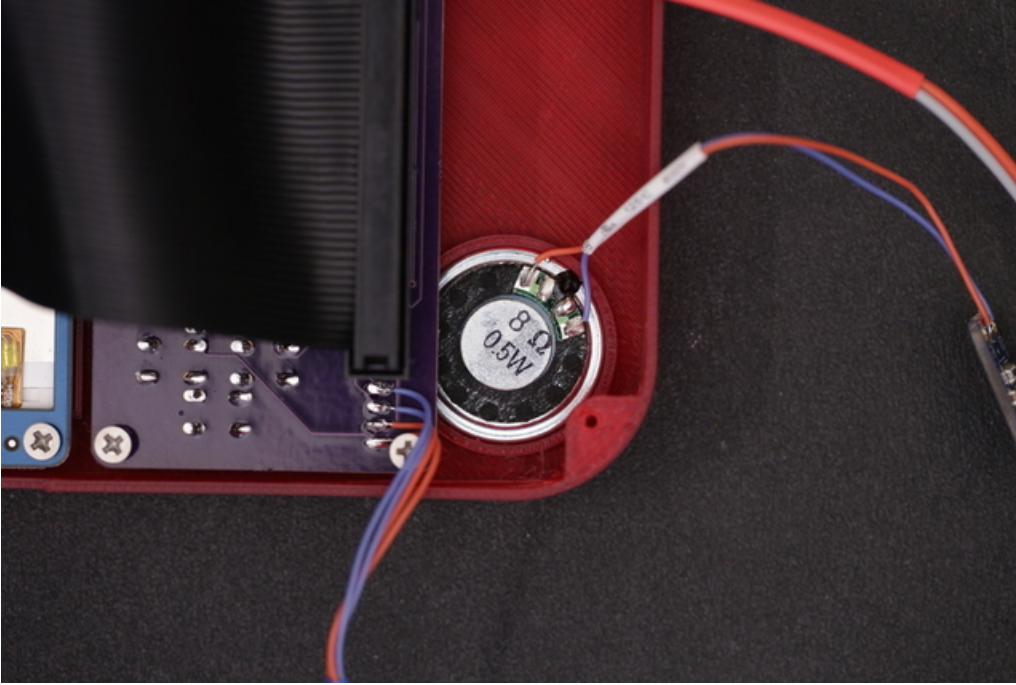


Install Speaker


Let's go ahead and pop the speaker into the case. Lay the speaker over the cavity with the grill and press it down to snap it into place. The wire should be oriented in a position so it's not in the way of the corner standoff.

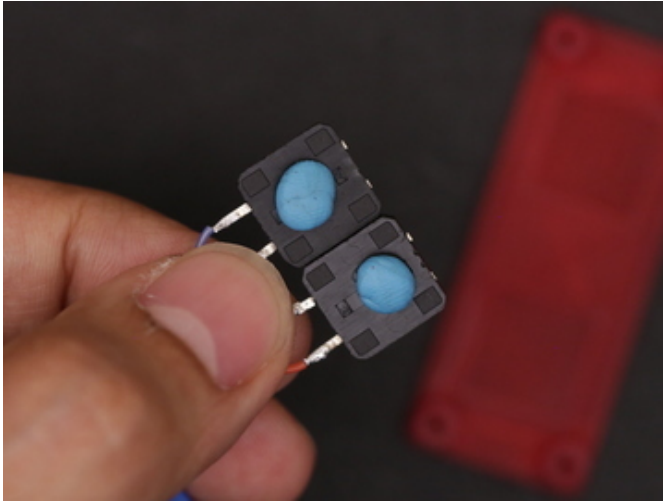

Shoulder Button Mount


Next up we need to mount our two shoulder buttons to the shoulder mounting piece. To do that, we can use adhesives such as E600 or hotglue - But I've found using mounting tack works just fine (plus, it makes it adjustable if we don't position it correctly the first time around). Add the tack to the back of the 12mm button and position them over the two recessed square spots on the mounting part. Press them down to stick them into place.

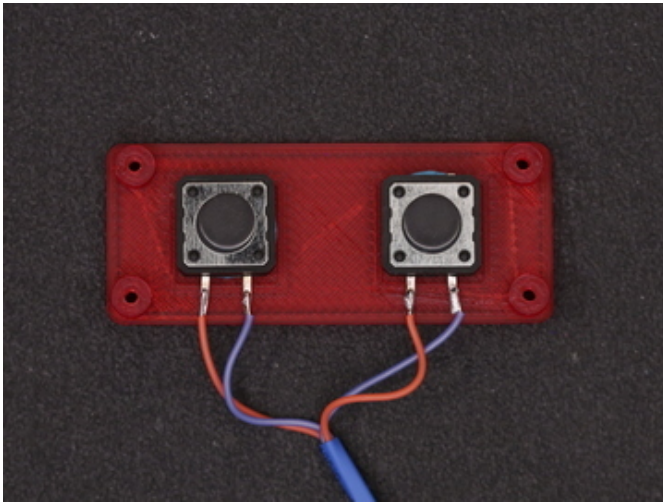


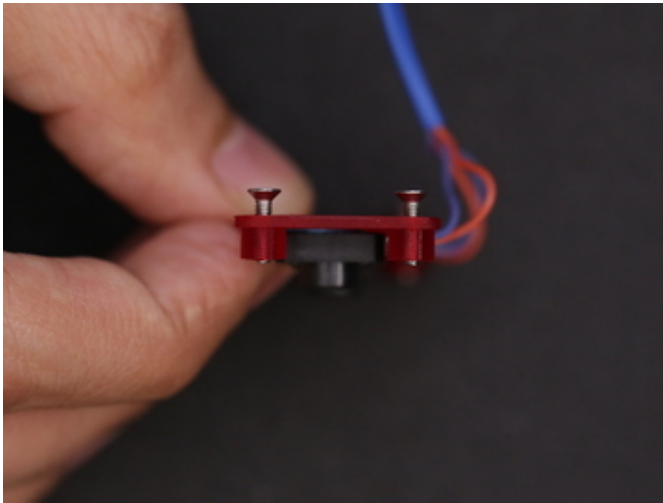

Shoulder Button (cont.)


Fasten four #2-56 3/8 into the standoffs of the shoulder mount. Screw them in until they barely protrude the standoff - this is going to make it easier to mount it to the case. Next, insert the rubber shoulder button actuator into the cutout of the bottom case part.

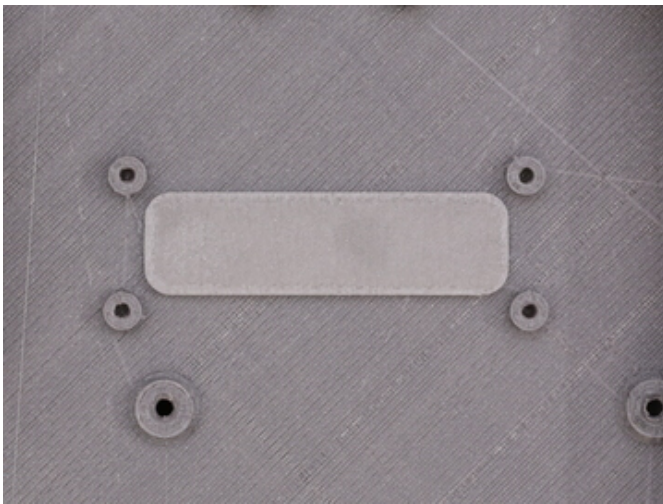


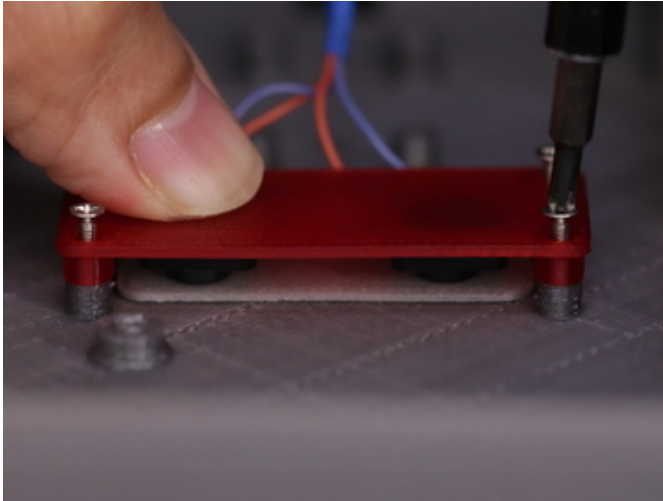

Install Shoulder Button Mount


Place the shoulder mount over the standoffs on the bottom case. Make sure the screws line up with the standoffs - they're position / orientation specific. Once they're lined up, carefully fasten the screws down. Here, you can fasten them all the way.

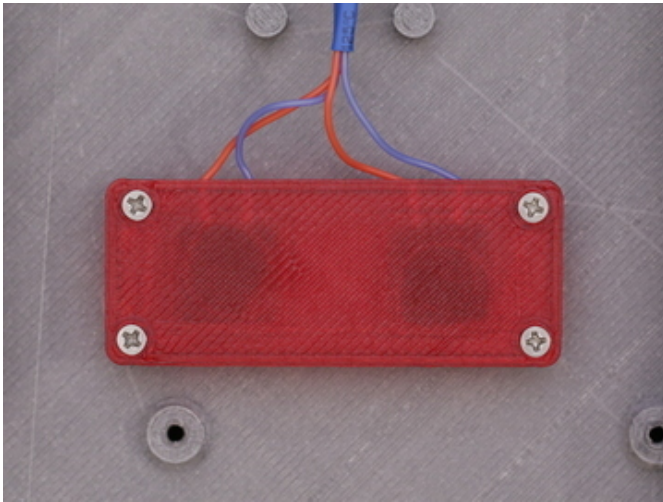

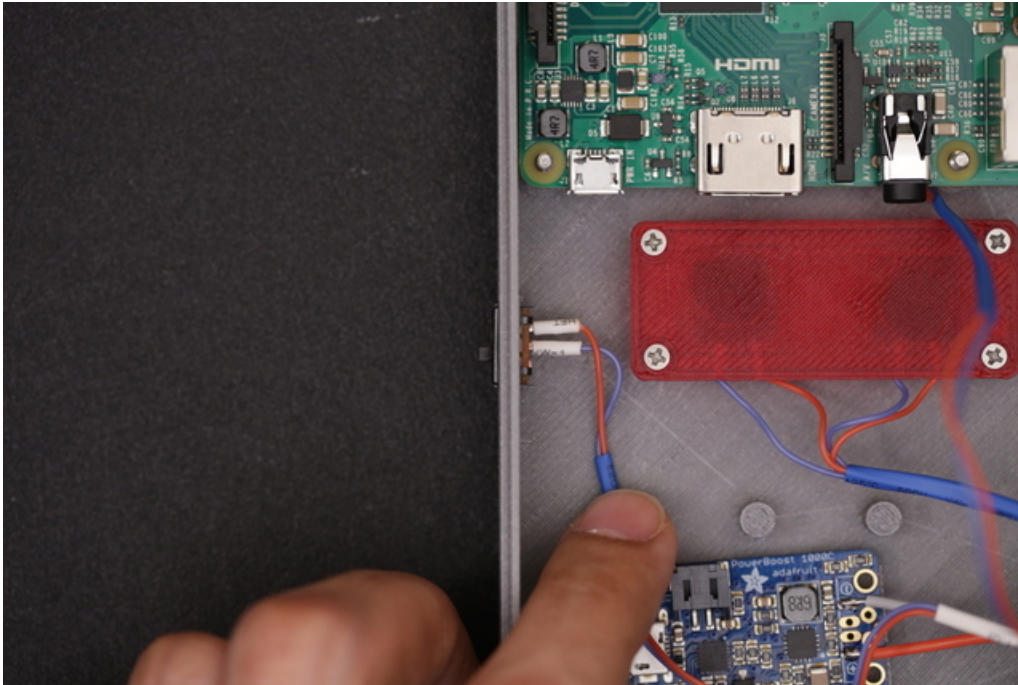




Install Switch


Now is a good time to insert the slide switch into the bottom case. Take note of the OFF position of the slide and install it to your liking (I prefer down is OFF, up is ON).

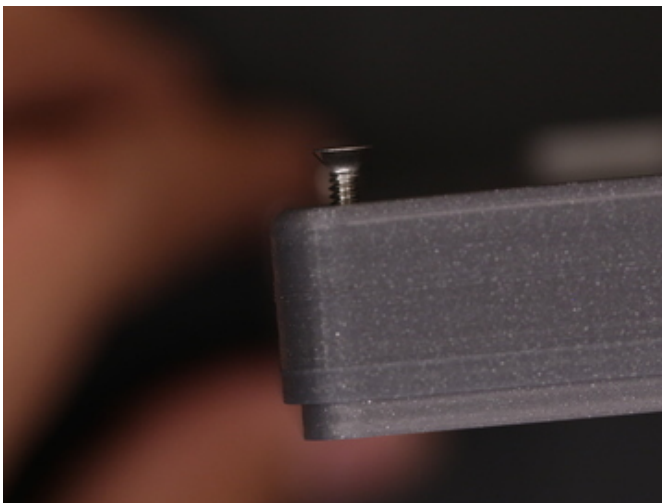

Install Raspberry Pi 2


Next up, let's mount the Pi to the bottom case. First, let's fasten #4-40 3/8 sized machine screws to the two mount holes on the back of the bottom case part. Like the previous mounting standoffs, fasten the screws so they're just barely protruding through the top of the standoffs. Then, lay the Pi over the standoffs and line up the screws with the mounting holes. Once in place, fasten the screws all the way until they're flush with the surface of the case.

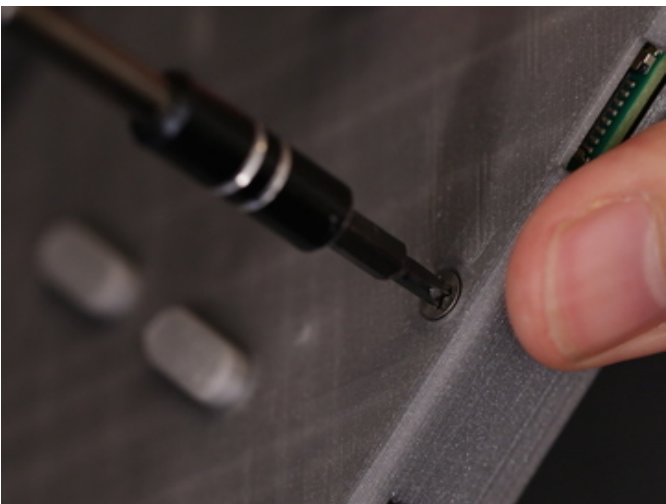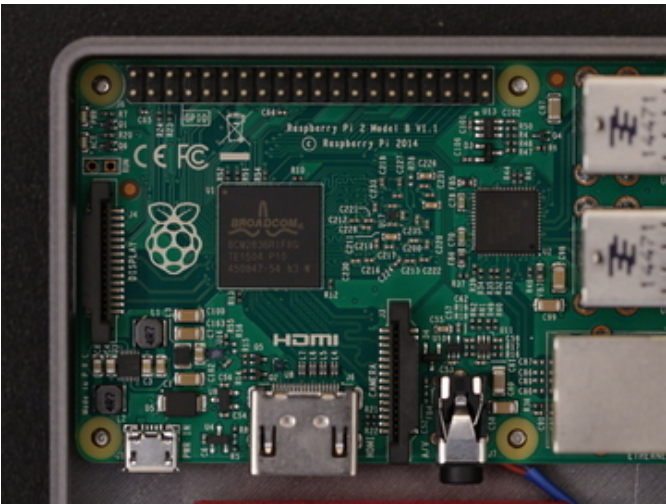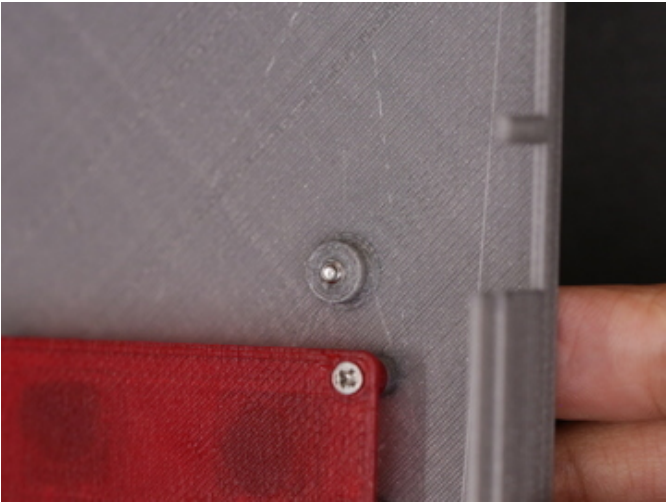


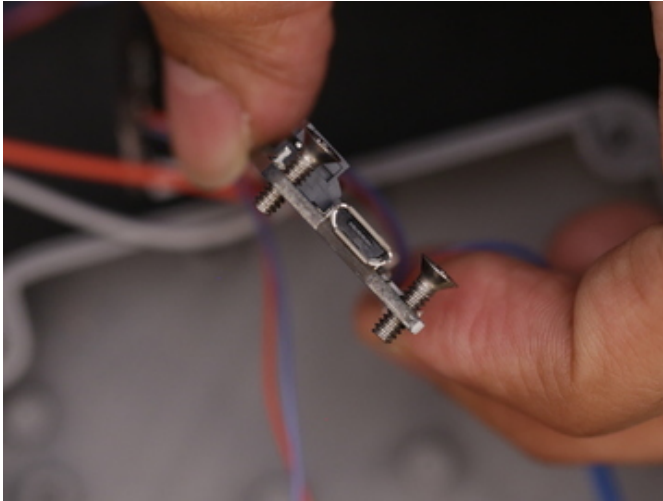

Mount PowerBoost 1000C



We'll need two #4-40 3/8 machine screws to install the PowerBoost to the case. Fasten the screws to the two mounting holes of the PowerBoost - This will create threads. Once they're made, lay the PowerBoost over the standoffs (close to the center bottom). Hold the PCB in place while fastening the screws to the standoffs. Don't fasten these screws all the way through, just deep enough they go past the height of the case - similar to the other components.

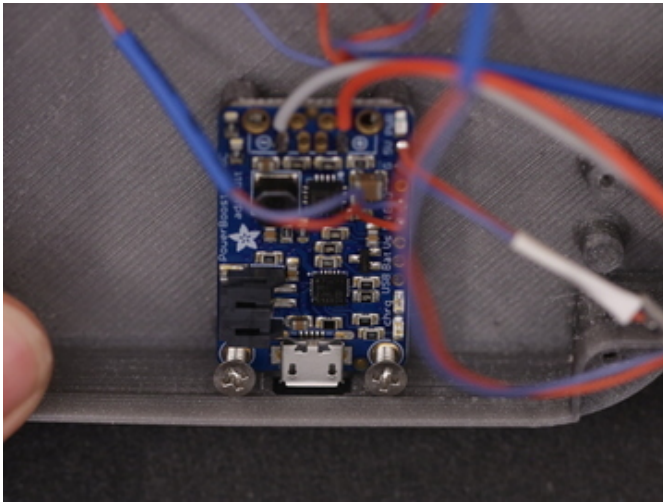

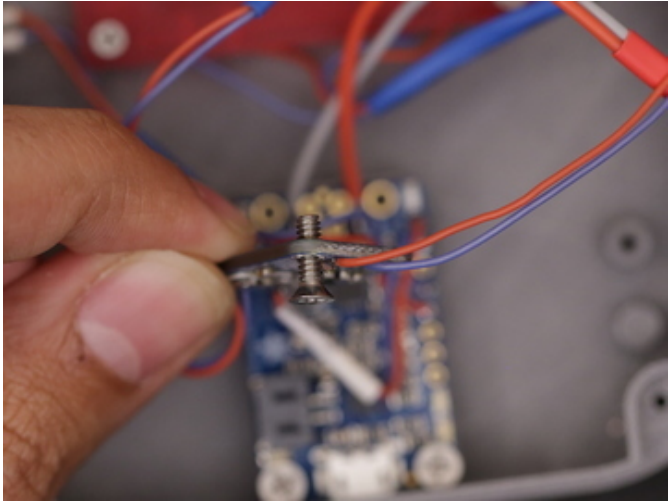

Mount Amp


Insert and fasten a single #4-40 3/8 machine screw into the mounting hole of the amp PCB (should be the hole closest to the Adafruit logo) - This will help create the screw threads. Then, place the PCB over the standoffs and hole it down to fasten the screw into the standoff.

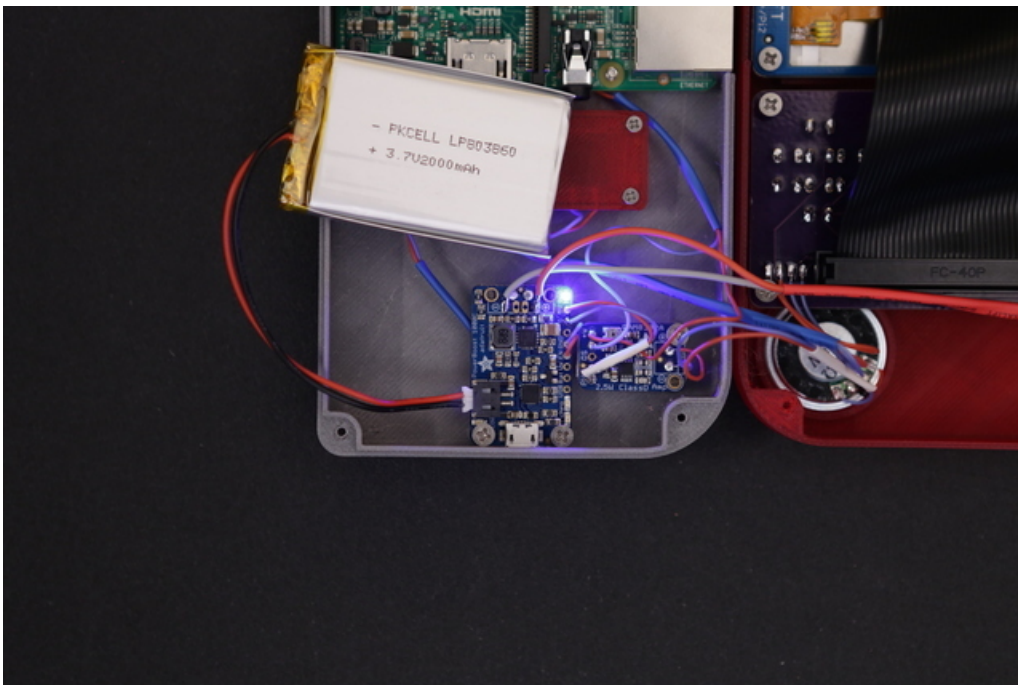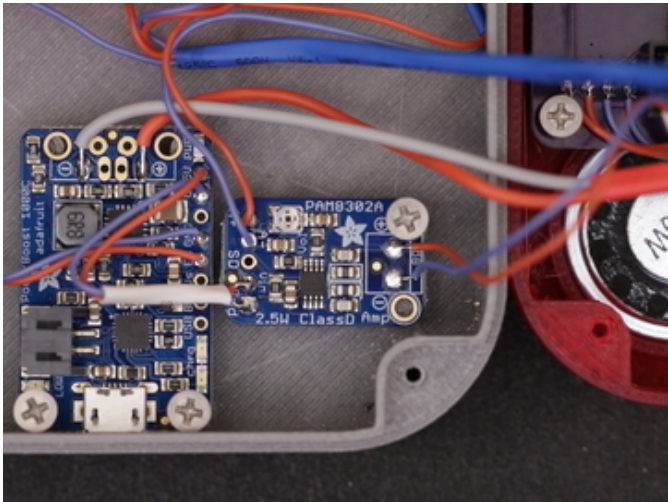

Test PowerBoost Circuit

Grab the lipo battery and plug in the JST connector to the JST port on the PowerBoost 1000C. Flip the slide switch on, and see if the circuit works! The blue LED indicates the battery is charged and the circuit is powered on.


If the LED doesn't light up, you either have a defective PowerBoost, or a short. You'll have to double check your wiring for short using a a multi-meter. If you have any issues or questions, please post it on support forums at <http://forums.adafruit.com/> (<https://adafru.it/forums>)

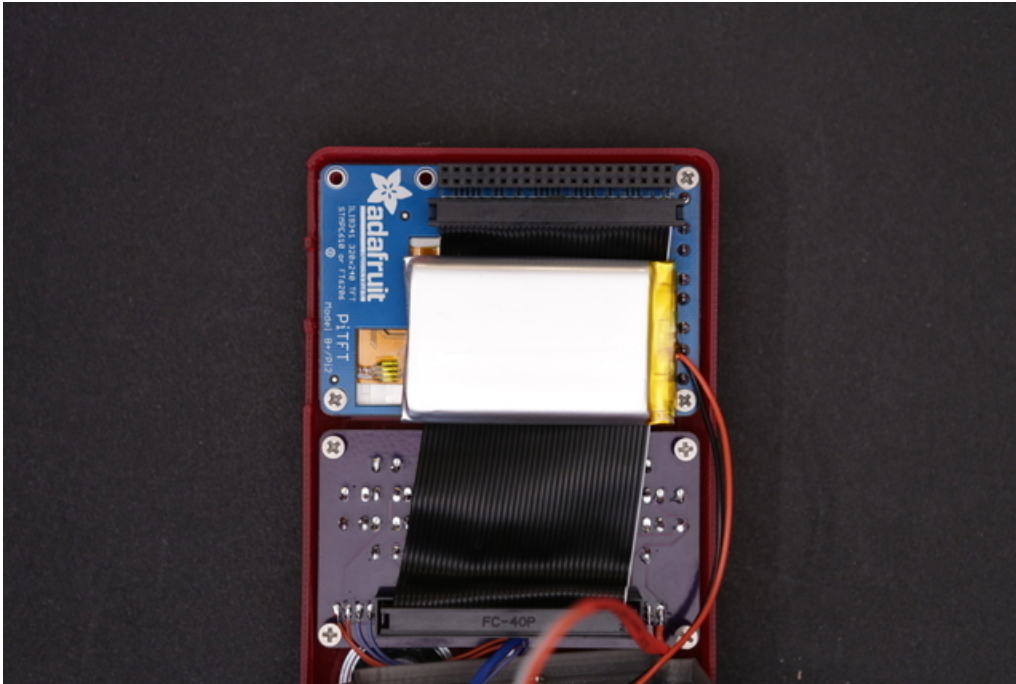



Install Lipo Battery

Now we can install the 2000mAh lipo battery. A good spot for it is right behind the PiTFT display. To keep it in place, we can use a piece of gaffers tape. Try to keep it up closely against PiCable. Position it like in the photo, closer to the right side to avoid intersecting with some of the components from the Pi.

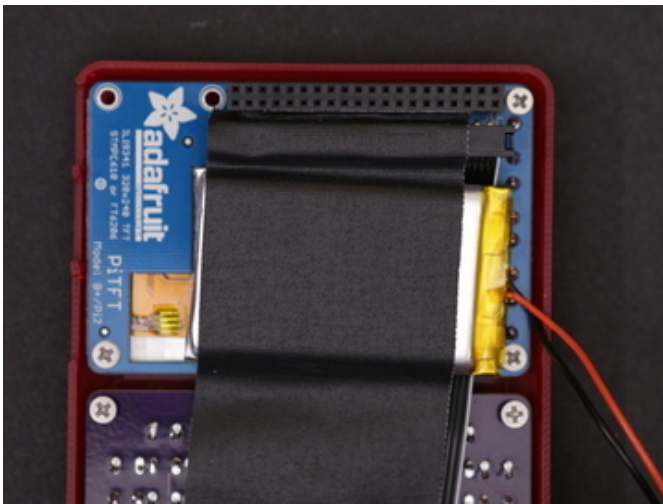

Almost Done!



In the next page, we'll close up the case and finish the build!

Close It Up!



Join Parts

Now its time to close it all up. Before that, make sure all of the wires are inside the case. Wires should be neaty tucked and away of kinking from any of the components. Bring the top and bottom parts together and press the bottom part together. They should snap together. Then, inspect the edges and see if everything is in place - no wires hanging out. If it looks good, start pressing the top area close together - Slowly. If you can't squeeze the top together, the battery could be in the way - be sure to check that and ensure its not in the way of any of the components.

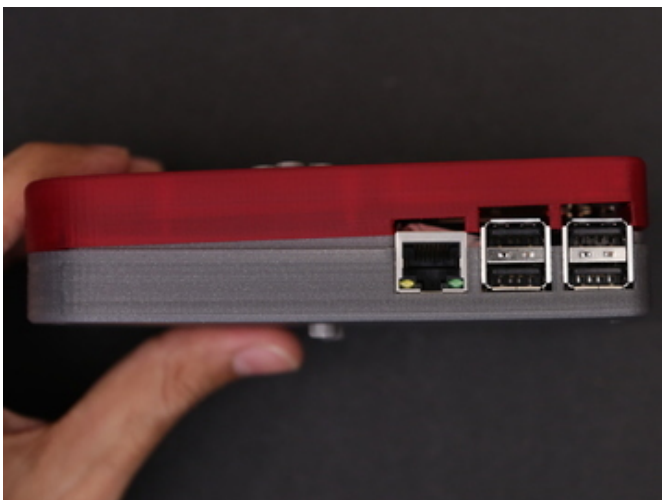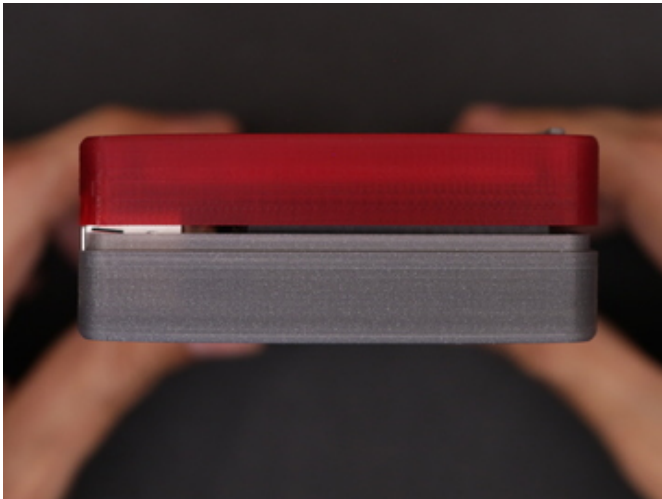



Screw Bottom Portion

There's two spots on the bottom that feature counter bore standoffs - insert a #2-56 3/8 machine screw and fasten them all the way. This will keep the bottom from coming part.



Insert microSD Card

Lastly, insert the microSD card if you haven't already. You should have already burnt the PiGRRL image to the SD card. If not, go ahead and do that now!



Completed Build!

Hazzah! The PiGRRL 2 game console is finally finished and ready to play! Turn it on and RetroPie / Emulationstation should automatically boot. The buttons are premapped to the expected controls. Reference the Software page for uploading ROMs and remapping controls.


Share Your Creation With Us!

If you built PiGRRL 2, we'd love to see it and share it with the community! Post a make on the thingiverse project page, share it on Instagram or twitter with hashtag #PiGRRL2.

Trouble Shooting


Buttons don't work, things are very weird

Make sure you didn't plug the Pi cable in backwards, [you can use a multimeter](#) to check that these voltages are correct when the Pi is powered:

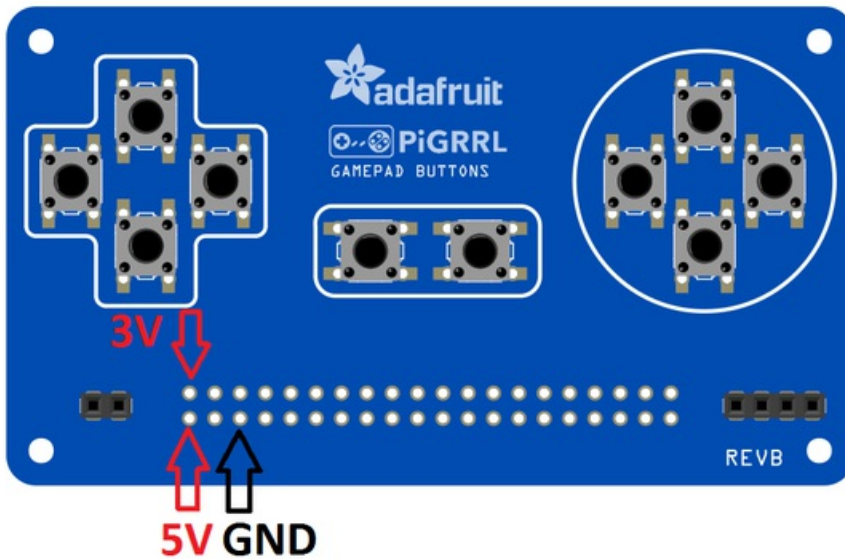


Audio Issues

Are you hearing a strange sound when powering up the Pi? The battery might be in a bad spot where it's causing interference noise with the audio jack. If you remove the mounting screws from the Pi on the back of the bottom case, you can separate the two parts while it's still powered.

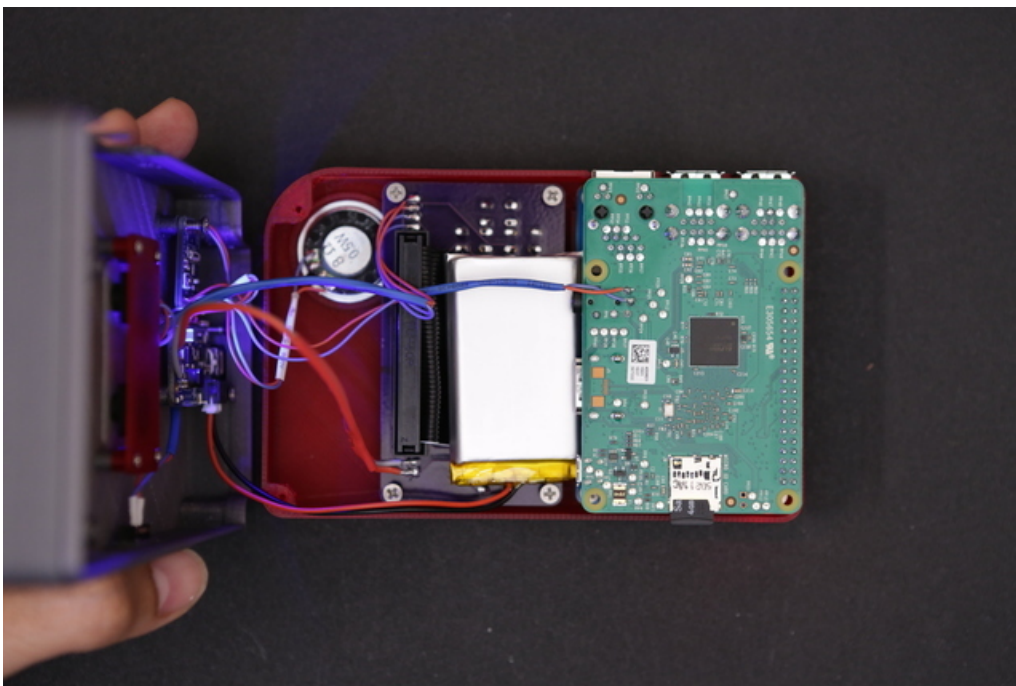

Once they're separated, reposition the battery and listen carefully to the noise. Position the battery in a spot where the noise is less prominent and mount it in place with tape or mounting tack.

Another option you can try is to adjust the pot on the sound amp. Lowering the gain may fix the sound interference when repositioning the battery doesn't work.

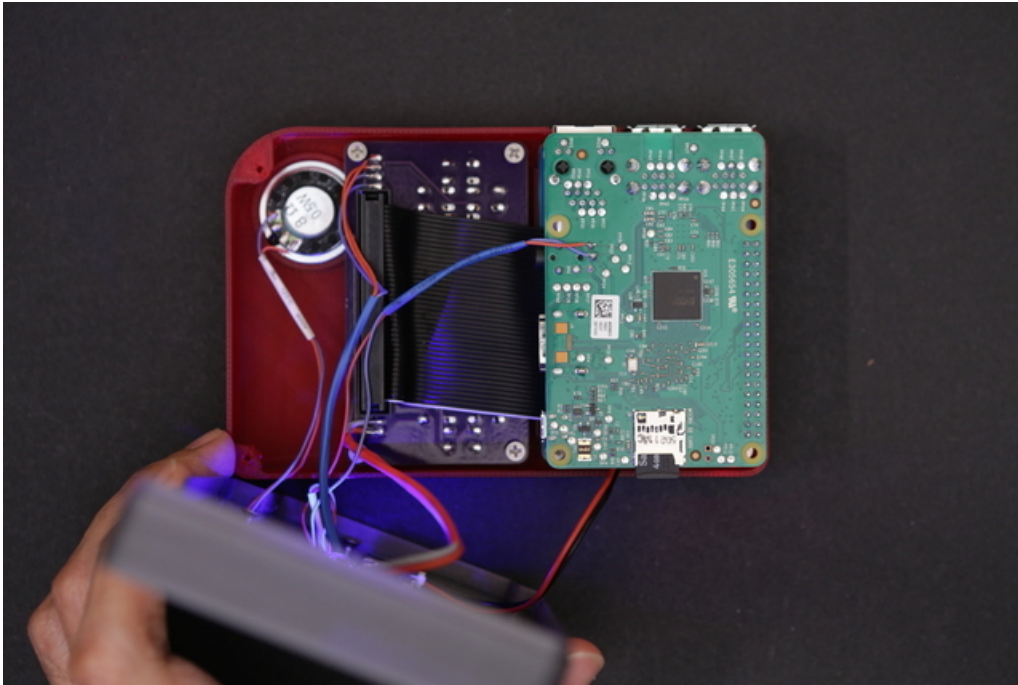

The best location for the battery I've found is directly tucked inbetween the Raspberry Pi and the PiTFT display.

No Audio

RetroPie has sound options built into the software. It may be muted or set to really low. To adjust it, press the "Start" button to bring up the Menu. Then, use the D-Pad to highlight "Sound Settings". Use the "A" button to select and D-Pad to increase volume. Press the "B" button to exit.

Pressing Button Turns Off Screen

If the PiTFT display turns black when you press one of the gamepad buttons, the trace that controls the backlighting might need to be cut deeper. The label #18 on the back of the PiTFT is active by default - triggering it turns the display off. Make sure this trace is cut to deactivate this feature.

Button on pin #18 doesn't work

You didn't cut the trace on the #18 pad, make sure to do that

PiTFT Shows Only White Screen

If the PiTFT display only display a white screen, chances are the img wasn't properly burnt to the SDcard. Be sure to follow the steps [Easy SD Card Setup \(https://adafruit.it/aMW\)](https://adafruit.it/aMW) guide to correctly burn the image.

Custom Mute Function

If you're interested in making one of the PiTFT buttons mute the audio, Martin O'Hanlon made a function.

<https://adafru.it/kUb>

<https://adafru.it/kUb>

Better Sound quality

A suggestion from the forums (<https://adafru.it/ikE>)!

1)Wrap the battery in copper tape and then electrical tape. Then you solder a wire from the ground of the audio circuit to the copper. It helps to solder to a random piece and then stick it to the battery so you're not soldering on the battery itself as it's dangerous.

2)Buy tiny ferrite beads and put them around the speaker wires. Ferrite beads provide EMI shielding and putting them around the speaker wires worked like a charm.

Issues, Problems, Need Help?

If you encounter any technical problems with the Raspberry Pi software, components or otherwise, please post up your issue, including photos of your wiring on the Adafruit Forums. Our support team will be able to assist you there.

<https://adafru.it/kZb>

<https://adafru.it/kZb>

Extras

Safely Shutdown via Tactile Switch

Its a good idea to safely turn off your Pi with a good `sudo shutdown -h now` but that often means pulling out a keyboard or connecting to the console. With our kernel we added a cool module that will let you turn any GPIO into a power button. Since there's a couple of tactile switches right there on the front, lets turn one into a power button. Press once to properly turn off the pi, press again to start it up. Isn't that nice?

<https://adafru.it/ird>

<https://adafru.it/ird>

Troubleshooting RetroPie and retrogame

This page documents the most common pitfalls encountered when making retro gaming projects, offering some solutions and where to turn for further help.

There are some things we can fix and some we can't...we're not involved in RetroPie's development, for example...but we'll try to point you in the right direction.

Most of the following troubleshooting steps will require a **USB keyboard attached**. Some require a **network connection**.

retrogame Related Troubleshooting

retrogame is our software that converts GPIO button actions into keyboard events. **These are the problems we're best equipped to fix.**

Some common things to check for any *retrogame* installation:

- Confirm button/joystick wires go to the correct pins and to ground. A multimeter with a continuity beep function is helpful for testing.
- The retrogame configuration file (`/boot/retrogame.cfg`) uses *Broadcom pin numbers*...these are *not* sequential along the GPIO header pins. [This site has a nice reference chart \(https://adafru.it/uFH\)](https://adafru.it/uFH) (use the "BCM" numbers).
- Earlier versions of *retrogame* didn't use a configuration file...you had to edit and compile the source code. That's just horrible. If you're running an early version like that, this would be a good time to upgrade. See the [Installing Retrogame \(https://adafru.it/sct\)](https://adafru.it/sct) page.

Some of my buttons/controls aren't working!

- Check connections and configuration file pin numbers as explained above. (If some controls are responding, that's an encouraging start...it at least means the code is running.)
- The key codes generated by retrogame might not be assigned to EmulationStation's keyboard inputs; one or the other will need to be changed. Either edit `/boot/retrogame.cfg`, or, from the EmulationStation main screen, press Start to access the main menu, then select "Configure Input" and proceed through each of the controls.

NONE of my buttons/controls are working!

- Confirm that retrogame is actually running...either exit to the command line (F4) or log in using ssh, then use `ps -ef | grep retrogame` to check. If you used our installer script or one of our ready-made SD card images, it should be started automatically on boot (added to `/etc/rc.local`).
- Confirm that the file `"/etc/udev/rules.d/10-retrogame.rules"` exists. Our installer script creates this file, but if you installed retrogame manually or from source, it may have been overlooked.

My controls only work if there's also a USB keyboard plugged in!

Confirm that the file `"/etc/udev/rules.d/10-retrogame.rules"` exists. Our installer script creates this file, but if you installed retrogame manually or from source, it may have been overlooked.

Retrogame doesn't work with my optical buttons!

Unfortunately, yes. retrogame only works with "passive" switches between a GPIO pin and ground (logic low=pressed). It won't work with switches that have the opposite logic level (high=pressed).

I ran Adafruit's retrogame installer script and rebooted, and now the keyboard and network are unresponsive!

This can happen if you're running an early Raspberry Pi (Model A or B) with the 26-pin GPIO header and select the

“Six buttons + joystick” option in the retrogame installer. That particular configuration is set up for our Arcade Pack and newer (40 pin) Raspberry Pi boards. Some of the pin numbers referenced *don't exist* on the older 26-pin header and lead to trouble.

If this happens to you, not to worry. Power off the Pi and insert the SD card in a reader on a PC or Mac. Look for a file called retrogame.cfg...edit this file and change the pin numbers to match your specific controller wiring.

RetroPie Related Troubleshooting

RetroPie provides the actual emulation software and a nice user interface. As this is third-party code, the “depth” of problems we can troubleshoot is more limited, but here are some of the common issues we’ve seen and how to resolve them...

My controls work in the EmulationStation UI, but not in one or more specific emulators!

This can happen with certain emulators (usually older or more esoteric ones) that don’t use the *libretro* library. Among other things, libretro allows the global controller configuration to be used everywhere. There are a couple of workarounds that *might* help, but no guarantees...

- You can rummage around in `/opt/retroPie/configs` and look for a configuration file specific to the problem emulator, then edit its keyboard layout to match your controls. The format of this file, if one even exists, is likely specific to that one emulator, so you’ll need to do some research (Google search, etc.), it’s not something we can help out with.
- You can try hunting for an alternate emulator based on libretro, if there’s one available (see “Installing RetroPie Packages” below).

The ROM files I have worked in a different emulator before, but aren’t working in RetroPie!

This can happen if the ROM file format changes between versions of an emulator, or if two emulators for the same system use different formats.

- Do some research (Google search, etc.) to see if this is the case. It’s possible there may be utilities to convert among different ROM formats.
- Try installing an alternate emulator, if there’s one available (see “Installing RetroPie Packages” below).

A few emulators may require a “BIOS file” in order to function, but it’s not included with the software for legal reasons. This is something you’ll have to research and track down.

Installing RetroPie Packages

To add support for a system not present in RetroPie by default, or to add an alternate emulator program for an existing system, select “RetroPie Setup” from the RetroPie menu. **This brings up a text-menu-based interface and will require a USB keyboard to navigate.**

Select “Manage packages” and then one of the core, main, optional or experimental selections...you’ll probably want to navigate through each of them to see what’s available, keeping in mind that each successive category might be a little rougher around the edges.



Your best bet are packages whose names begin with





“lr-”. This means they’re built using **libretro** and the control inputs should already work with what you have! Other packages may require their own manual controller setup, which can be a real nuisance.

When asked, select “**Install from binary.**” The *source* option takes *much* longer and won’t provide any benefit for the average user...only attempt that if you *know* you need absolutely bleeding-edge code.

It’s totally valid to install multiple emulator packages that handle the same type of system. Each might have different performance or compatibility benefits, so it’s worth testing your options. See “Accessing Alternate Emulators” below.

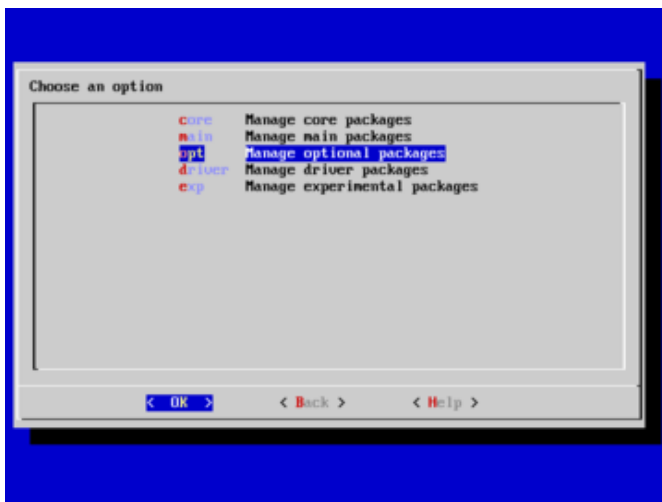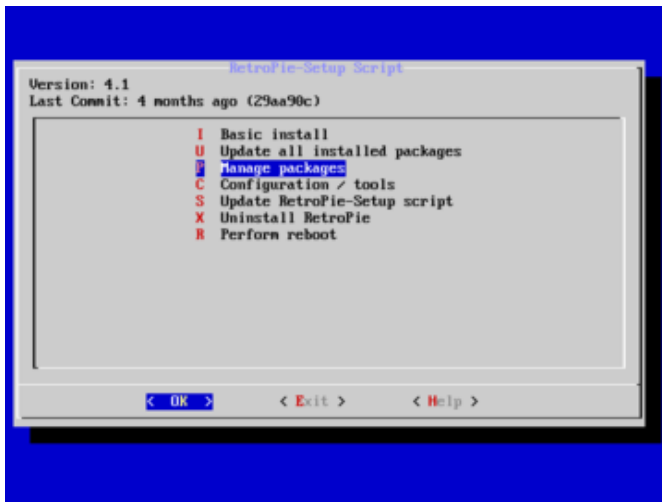

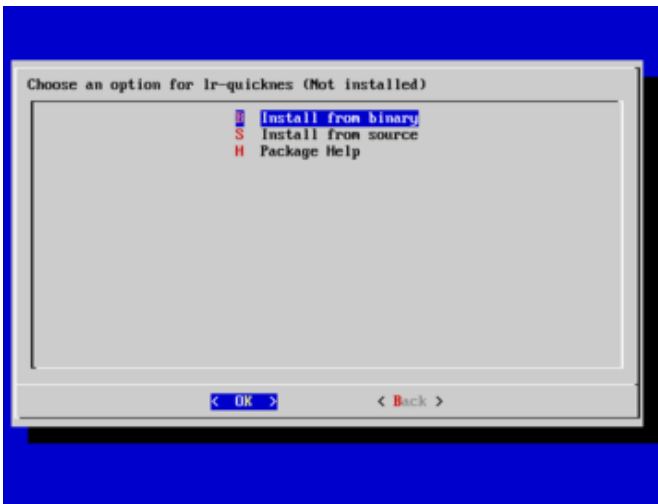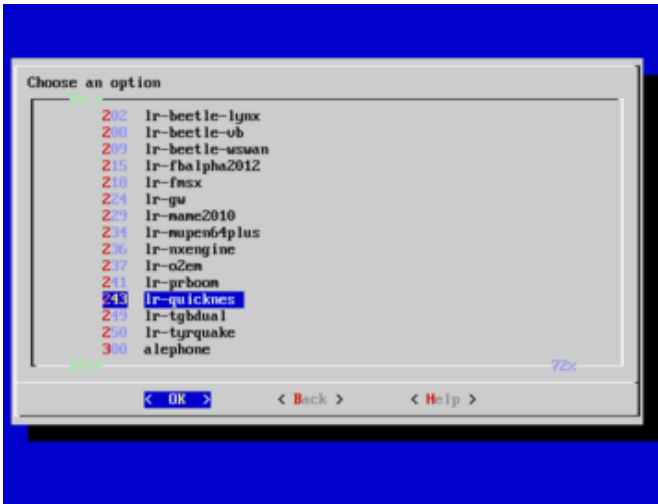


Accessing Alternate Emulators



When you launch a game, you'll briefly see this nondescript launching message. **You have a couple of seconds to hit a button or key...**

The first option in this configuration menu lets you select a different emulator package for a given system type...or even on an individual ROM-by-ROM basis, if different games benefit from different emulation software.

Test it out with. If you don't like the results, next time you launch that game you can access the configuration menu again and restore the original selection.

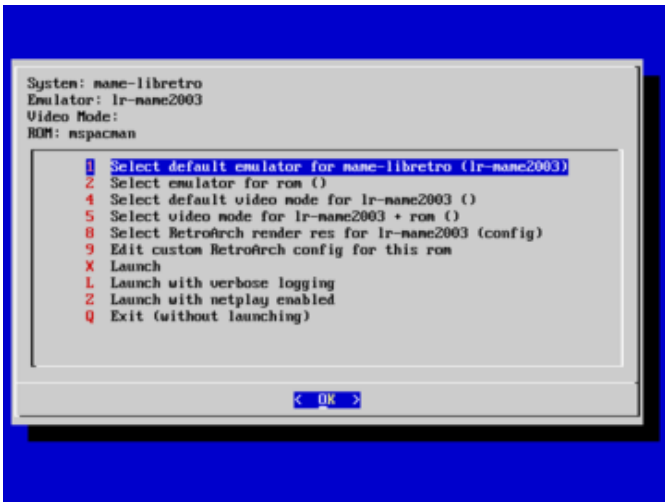

More RetroPie Help

For issues not covered above, the best sources for RetroPie-specific help are the official documentation and forum on the RetroPie web site:

[RetroPie Documentation \(https://adafru.it/uFI\)](https://adafru.it/uFI)

[RetroPie Forum \(https://adafru.it/uFJ\)](https://adafru.it/uFJ)