

Extractor Tool

Application Tooling Specification Sheet



Order No. 200222-0100

FEATURES

 This extractor tool is for the removal of crimped terminals from housing series 160014, 160027, 160028 and 160029

SCOPE

Products: stAK50h™ Connector System.

Housing Series No.	Housing Order No.				Terminal Series No.	Terminal Order No.			
160014	160014-0001	160014-0002	160014-0003	160014-0004	200096	200096-0101	200096-0161	200096-0201	200096-0261
160027	160027-0001	160027-0002	160027-0003	160027-0004					
	160027-0005	160027-0006	160027-0007	160027-0008					
160028	160028-0001	160028-0002	160028-0003	160028-0004					
	160028-0005	160028-0006	160028-0007	160028-0008					
160029	160029-0001	160029-0002	160029-0003	160029-0004					


DESCRIPTION:

This extractor tool is one piece construction. 30.0 mm (1.2 in.) long by 6.0mm (.24 in.) wide.


OPERATION:

When removing a damaged crimped terminal from the stAK50h[™] housing, follow the steps below:

1. Position the extractor tool blade into the small rectangular slot (in line with the terminal to be removed) in the front face of the housing. See Figure 1.

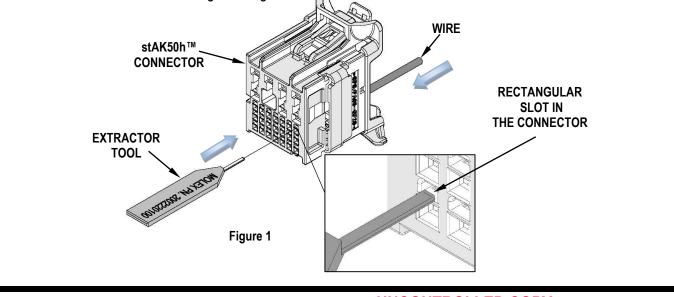

- 2. Push the crimped wire forward in the arrow direction before using the extractor tool.
- 3. Continue to push the extractor tool into the square slot until it clicks or comes to a stop.
- 4. This should separate the latch from the terminal. Do not force the extractor tool any further; otherwise, it may damage the housing.
- 5. Holding the extractor tool against the housing, gently pull the crimped wire out of the connector. See Figure 2.

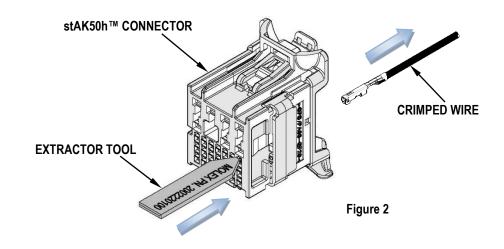

CAUTION: This extractor tool should be used to extract the terminal only. Using it for unintended purposes may cause injury or damage to parts. Be careful not to deform the end of the terminal.

CAUTION: Molex specifications are valid only when used with Molex terminals, applicators and tooling.

Application Tooling Support

Phone: +1-402-458-TOOL (8665) E-Mail: applicationtooling@molex.com Website: www.molex.com/applicationtooling