**New Product** 

# OMROL

# Switch Mode Power Supply S8JX (15/35/50/100/150/300/600-W Models)

### Low-profile Power Supply to Help **Reduce Panel Depth**

### Easy Mounting:

Mounting Bracket provided as a standard feature. (except for DIN Rail-mounting models or 300-W/600-W models without a Mounting Bracket) Mounts to DIN Rail. Screw-mount at the top.

· Safety standards:

UL 508/60950-1 cUL CSA C22.2 No. 107.1 cUR CSA C22.2 No. 60950-1 EN 50178 (= VDE 0160) EN 60950-1 (= VDE 0805 Teil 1)

EMC: Conforms to EN 61204-3 Class A.

300-W models and 600-W models are available in autumn 2009.

Note: Refer to Safety Precautions on page 15.

### **Model Number Structure**

### Model Number Legend

Note: Not all combinations are possible. Refer to List of Models in Ordering Information on page 2.

#### S8JX-G 2 34

1 1. Power Ratings 015: 15 W 035: 35 W 050: 50 W 100: 100 W 150: 150 W 300: 300 W 600: 600 W 2. Output Voltage 05: 5 V 12: 12 V

- 15: 15 V
- 24: 24 V

- 3. Configuration (15/35/50/100/150 W model) None: Open-frame C: Covered
- 4. Configuration/mounting None: Front-mounting D: DIN Rail-mounting

## **Ordering Information**

### **List of Models**

Note: For details on normal stock models, contact your nearest OMRON representative.

Con	figuration	Input voltage	Power ratings	Output voltage (VDC)	Output current	Model
				5 VDC	3 A	S8JX-G01505
			15 W	12 V	1.3 A	S8JX-G01512
				15 V	1 A	S8JX-G01515
				24 V	0.65 A	S8JX-G01524
				5 V	7 A	S8JX-G03505
			35 W	12 V	3 A	S8JX-G03512
			55 W	15 V	2.4 A	S8JX-G03515
	Front-mounting *1			24 V	1.5 A	S8JX-G03524
				5 V	10 A	S8JX-G05005
			50 W	12 V	4.2 A	S8JX-G05012
				24 V	2.1 A	S8JX-G05024
			100 W	5 V	20 A	S8JX-G10005
				12 V	8.5 A	S8JX-G10012
				24 V	4.5 A	S8JX-G10024
pen-frame Power			150 W	24 V	6.5 A	S8JX-G15024
upplies				5 V	3 A	S8JX-G01505D
			15 W	12 V	1.3 A	S8JX-G01512D
			10 11	15 V	1 A	S8JX-G01515D
				24 V	0.65 A	S8JX-G01524D
				5 V	7 A	S8JX-G03505D
			35 W	12 V	3 A	S8JX-G03512D
			55 W	15 V	2.4 A	S8JX-G03515D
	DIN Rail-mounting			24 V	1.5 A	S8JX-G03524D
				5 V	10 A	S8JX-G05005D
			50 W	12 V	4.2 A	S8JX-G05012D
				24 V	2.1 A	S8JX-G05024D
				5 V	20 A	S8JX-G10005D
			100 W	12 V	8.5 A	S8JX-G10012D
		100 to 240 VAC		24 V	4.5 A	S8JX-G10024D
		(free)	150 W	24 V	6.5 A	S8JX-G15024D
		. ,		5 V	3 A	S8JX-G01505C
		(100 to 370 VDC *3)	15 \	12 V	1.3 A	S8JX-G01512C
			15 W	15 V	1 A	S8JX-G01515C
				24 V	0.65 A	S8JX-G01524C
			35 W	5 V	7 A	S8JX-G03505C
				12 V	3 A	S8JX-G03512C
				15 V	2.4 A	S8JX-G03515C
	Front-mounting *1			24 V	1.5 A	S8JX-G03524C
			50 W 100 W	5 V	10 A	S8JX-G05005C
				12 V	4.2 A	S8JX-G05012C
				24 V	2.1 A	S8JX-G05024C
				5 V	20 A	S8JX-G10005C
				12 V	8.5 A	S8JX-G10012C
				24 V	4.5 A	S8JX-G10024C
			150 W	24 V	6.5 A	S8JX-G15024C
				5 V	3 A	S8JX-G01505CD
			45.14	12 V	1.3 A	S8JX-G01512CD
overed Power			15 W	15 V	1 A	S8JX-G01515CD
upplies				24 V	0.65 A	S8JX-G01524CD
				5 V	7 A	S8JX-G03505CD
				12 V	3 A	S8JX-G03512CD
			35 W	15 V	2.4 A	S8JX-G03515CD
	DIN Rail-mounting			24 V	1.5 A	S8JX-G03524CD
				5 V	10 A	S8JX-G05005CD
			50 W	12 V	4.2 A	S8JX-G05012CD
				24 V	2.1 A	S8JX-G05024CD
				5 V	20 A	S8JX-G10005CD
			100 W	12 V	8.5 A	S8JX-G10012CD
			100 W	24 V	4.5 A	S8JX-G10012CD
			150 W	24 V 24 V	6.5 A	S8JX-G15024CD
			300 W	27 V	14 A	S8JX-G30024C
	Front-mounting *1		600 W		27 A	S8JX-G60024C
	DIN Rail-mounting	100/200 VAC	300 W	24 V		S8JX-G80024C
	ם מוויט המוו-חוטטחנוחס	owitebable	300 W	∠4 V	14 A	30JA-030024CD
	No Mounting Bracket	switchable	300 W	F	14 A	S8JX-G30024N

\*1. The front-mounting bracket is included as standard with the product.
\*2. The front-mounting bracket is not included with the product.
\*3. Safety standards, however, are not applicable.

### **Ratings, Characteristics, and Functions**

		Input specification	100 to 24	0 V input	
ltem	Power ratings *1		15 W	35 W	
Efficiency (	typical)		68% min.	73% min.	
			100 to 240 VAC (85 to 264 VAC)		
	Voltage *2		100 to 370 VDC		
			Note: This range is not applicable for the safety standards.		
-	Frequency *2		50/60 Hz (47 to 450 Hz)		
	Current *3	100 V input	0.4 A	1 A	
	Power factor	200 V input	0.25 A	0.6 A	
nput			-		
	Harmonic current emissions		- 0.5 mA max.		
	Leakage current *3	100 V input 200 V input			
		•	1 mA max. 20 A max.		
	Inrush current (for a cold start at 25°C) *3	100 V input 200 V input	40 A max.		
	Noise filter		Yes		
	Voltage adjustment rar	aa *5	-10% to 15% (with V. ADJ)		
	Ripple *3	ige *5	2% (p-p) max.		
	Input variation influence	<u>e</u>	0.4% max.		
Output *4	Load variation influence		0.8% max. (0 to 100% load, rated input volt	ade)	
Juiput	Temperature variation	-	0.05%/°C max. (at rated input and output)		
	Startup time				
	Hold time *3		500 ms max. (up to 90% of output voltage at rated input and output) 20 ms min.		
	Overload protection *6		20 ms min. 105% to 160% of rated load current, voltage drop, intermittent, automatic reset		
	Overvoltage protection *7		Yes		
Additional	Overheat protection		No		
unctions	Parallel operation		No		
	Series operation		Yes (For up to two Power Supplies; externa	I diodes required )	
	Protective circuit operation indicator		No		
	Ambient operating tem		Refer to the derating curve in <i>Engineering I</i> condensation)	Data on page 8 (with no icing or	
	Storage temperature		<ul> <li>–25 to 65°C (with no icing or condensation)</li> </ul>		
	Ambient operating hun	nidity	25% to 85% (Storage humidity: 25% to 90%)		
	Dielectric strength		3.0 kVAC for 1 min. (between all inputs and outputs; detection current: 20 mA) 2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 20 mA) 1.0 kVAC for 1 min. (between all outputs and PE terminals; detection current: 20 mA)		
	Insulation resistance		100 M $\Omega$ min. (between all outputs and all inputs/PE terminals) at 500 VDC		
	Vibration resistance		10 to 55 Hz, 0.375-mm single amplitude for 2h each in X, Y, and Z directions		
	Shock resistance		150m/s <sup>2</sup> , 3 times each in $\pm X$ , $\pm Y$ , $\pm Z$ direction		
	Output indicator		Yes (Color: Green)		
		Conducted Emissions *3	Conforms to EN 55011 Group 1 Class A and based on FCC Class A		
	EMI	Radiated Emissions	Conforms to EN 55011 Group 1 Class A		
Other		Electrostatic Discharge	Confirms to EN61000-4-2		
		Radiated Electromagnetic Field	Confirms to EN61000-4-3		
		Electrical Fast Transient/Burst	Confirms to EN61000-4-4		
	EMS	Surge	Confirms to EN61000-4-5		
		Conducted Disturbance	Confirms to EN61000-4-6		
		Voltage Dips/Short Interruptions			
	Approved standards		UL 508 (Listing), UL 60950-1		
			cUL: CSA C22.2 No.107.1 cUR: CSA C22.2 No. 60950-1		
			EN/VDE: EN50178 (= VDE 0160), EN 60950-1 (= VDE 0805 Teil 1) (Terminal block: Based on VDE 0106/P100)		
	SEMI		SEMI F47-0200 (200-VAC input)		
	Weight *8		250 g max.		
A 14/1	load is connected that has a built in DC DC converter		Ale a consulta a discontra attenti a consume tra attenti		

\*1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the Power Supply may not start. Refer to Overload Protection on page 9.

\*2. Do not use an Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning. **\*3.** Rated input voltage: 100 or 200 VAC at 100% load.

**\*4.** Output characteristics: Specified at power supply output terminals.

\*5. If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than +15% of the voltage adjustment range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that load is not damaged.

\*6. For details, refer to Overload Protection on page 9.

\*7. To reset the protection, turn OFF the input power for seven minutes or longer and then turn it back ON.

**\*8.** The weight indicated is for Front-mounting, Open-frame Power Supplies.

		Input specification		100 to 240 V input	F		
ltem		Power ratings *1	50 W	100 W	150 W		
Efficiency (ty	pical)		76% min.		86% min.		
			100 to 240 VAC (85 to 264 VAC)				
Ň	/oltage *2		100 to 370 VDC				
_			Note: This range is not applicable for the safety standards.				
1	Frequency *2		50/60 Hz (47 to 450 Hz)				
c	Current *3	100 V input	1.4 A	2.5 A	3.5 A		
-		200 V input	0.8 A	1.5 A	2.1 A		
	Power factor						
F	Harmonic current emissions		05.4				
L	Leakage current *3	100 V input	0.5 mA max.				
_		200 V input	1 mA max.				
	nrush current (for a cold start at 25°C) *3	100 V input	20 A max.				
	•	200 V input	40 A max.				
	Noise filter		Yes				
-	/oltage adjustment rar	ige *5	-10% to 15% (with V. ADJ)				
	Ripple *3		2% (p-p) max.				
-	nput variation influence		0.4% max.				
	Load variation influence	-	0.8% max. (0 to 100% load,	1 0,			
	Temperature variation	Influence	0.05%/°C max. (at rated input and output)				
-	Startup time		500 ms max. (up to 90% of output voltage at rated input and output)				
	Hold time *3		20 ms min.				
	Overload protection *6		105% to 160% of rated load current, voltage drop, intermittent, automatic reset				
-	Overvoltage protection	*7	Yes				
laantioniai	verheat protection		No				
	Parallel operation		No				
-	Series operation		Yes (For up to two Power Supplies; external diodes required.)				
	Protective circuit opera		No				
	Ambient operating tem	perature	Refer to the derating curve in Engineering Data on page 8 (with no icing or condensation				
	Storage temperature		-25 to 65°C (with no icing o	•			
4	Ambient operating hun	ndity	25% to 85% (Storage humic				
C	Dielectric strength		2.0 kVAC for 1 min. (betwee	en all inputs and outputs; deter en all inputs and PE terminals; en all outputs and PE terminals	detection current: 20 mA)		
l	nsulation resistance		100 M $\Omega$ min. (between all outputs and all inputs/PE terminals) at 500 VDC				
1	/ibration resistance		10 to 55 Hz, 0.375-mm sing	le amplitude for 2h each in X,	Y, and Z directions		
5	Shock resistance		150m/s <sup>2</sup> , 3 times each in ±X, ±Y, ±Z directions				
C	Output indicator		Yes (Color: Green)				
_		Conducted Emissions *3	Conforms to EN 55011 Group 1 Class A and based on FCC Class A				
E	EMI	Radiated Emissions	Conforms to EN 55011 Grou				
Other		Electrostatic Discharge	Confirms to EN61000-4-2				
		Radiated Electromagnetic Field	Confirms to EN61000-4-3				
		Electrical Fast Transient/Burst	Confirms to EN61000-4-4				
E	EMS	Surge	Confirms to EN61000-4-5				
		Conducted Disturbance	Confirms to EN61000-4-6				
		Voltage Dips/Short Interruptions					
-	Approved standards		UL 508 (Listing), UL 60950-1				
ļ			cUL: CSA C22.2 No.107.1 cUR: CSA C22.2 No. 60950-1				
			EN/VDE: EN50178 (= VDE 0160), EN 60950-1 (= VDE 0805 Teil 1) (Terminal block: Based on VDE 0106/P100)				
5	SEMI		SEMI F47-0200 (200-VAC input)				
V	Neight *8		300 g max.	550 g max.	600 g max.		

\*1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the Power Supply may not start. Refer to Overload Protection on page 9.

\*2. Do not use an Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.\*3. Rated input voltage: 100 or 200 VAC at 100% load.

\*4. Output characteristics: Specified at power supply output terminals.

\*5. If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than +15% of the voltage adjustment range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that load is not damaged.
\*6. For details, refer to Overload Protection on page 9.


\*7. To reset the protection, turn OFF the input power for seven minutes or longer and then turn it back ON.

**\*8.** The weight indicated is for Front-mounting, Open-frame Power Supplies.


### Connections

### **Block Diagrams**


S8JX-G015 (15 W)

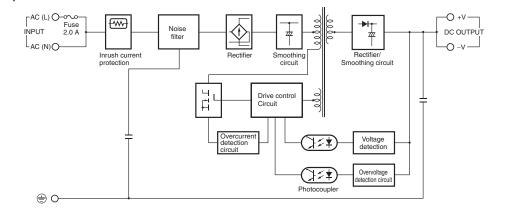


### S8JX-G035 (35 W)

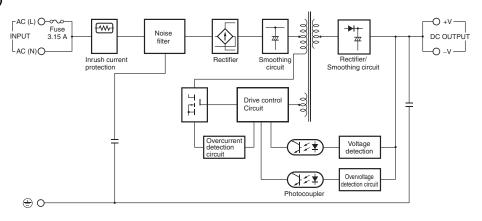

S8JX-G050 (50 W)

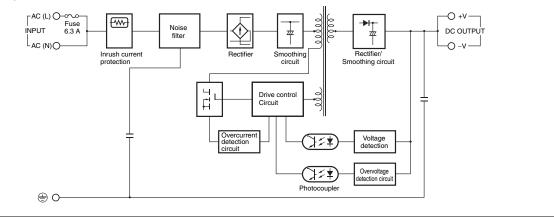


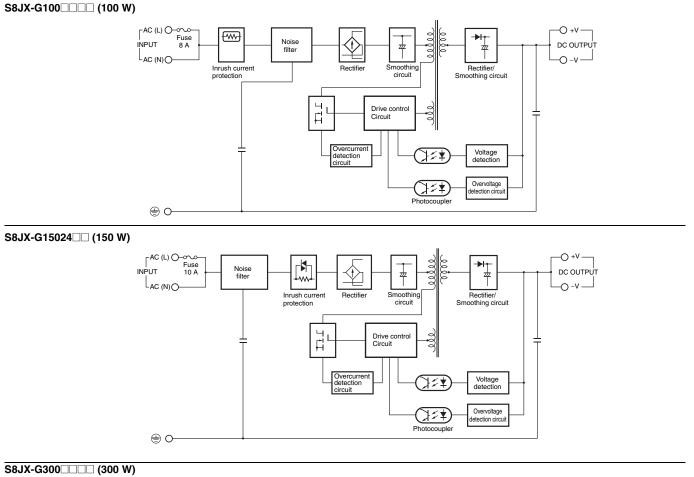

S8JX-G300 (300 W) S8JX-G600 (600 W) Available soon

6

### Nomenclature 15/35/50/100/150-W Power Supplies

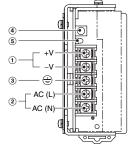

No.	Name	Function
1	DC output terminals (-V), (+V)	Connect the load lines to these terminals.
2	AC input terminals (L), (N)	Connect the input lines to these terminals. *1
3	Protective Earth terminal (PE) (=)	Connect the ground line to these terminals. *2
4	Output voltage adjuster (V. ADJ)	Use to adjust the voltage.
5	Output indicator (DC ON: Green)	Lights green while a direct current (DC) output is ON.

\*1. The fuse is located on the (L) side. It is NOT user-replaceable.
\*2. This is the protective earth terminal specified in the safety standards. Always ground this terminal.

Note: The S8JX-G05024CD is shown above.

### **Reference Values**


Reliability (MTBF)	Value		
	250,000 hrs		
Definition	MTBF stands for Mean Time Between Failures, which is calculated according to the probability of accidental device failures, and indicates reliability of devices. Therefore, it does not necessarily represent a life of the product.		
Life expectancy	10 yrs. min.		
Definition	The life expectancy indicates average operating hours under the ambient temperature of 40°C and a load rate of 50%. Normally this is determined by the life expectancy of the built-in aluminum electrolytic capacitor.		


### **Engineering Data**

### **Derating Curves (Standard Mounting)**

### 15/35/50/100/150-W Power Supplies

### **Open-frame Power Supplies**

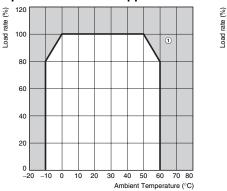

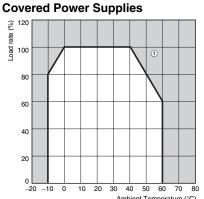

Note: 1. Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading ① in the above graph).


2. If there is a derating problem, use forced air-cooling.

### Mounting (15/35/50/100/150-W Power Supplies)

- The following three mounting methods are possible.
- A. Front-mounting: See information on mounting bracket.
- B. Bottom-mounting

**Standard Mounting** 

- C. Side-mounting
- Note: Additional mounting methods are also available using DIN Rail-mounting models.

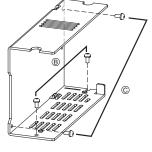

Ambient Temperature (°C)

Vertical Side-mounting Front-mounting **DIN Rail-mounting** Bottom-mounting Horizontal Side-mounting 881 


- Note: 1. Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
  - 2. When mounting the Power Supply, mounting it to a metal plate (\*) is recommended.
  - 3. Install the Power Supply so that the air flow circulates around the Power Supply, as the Power Supply is designed to radiate heat by means of natural air flow.

### **Overload Protection**

The Power Supply is provided with an overload protection function that protects the power supply from possible damage by overcurrent. When the output current rises above 105% min. of the rated current, the protection function is triggered, decreasing the output voltage. When the output current falls within the rated range, the overload protection function is automatically cleared.

#### (Reference value)

#### 15 W to 150 W

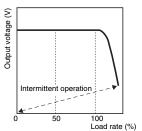


- Note: 1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the power supply may not start.
  - Internal parts may occasionally deteriorate or be damaged if a short-circuited or overcurrent state continues during operation.
  - 3. Internal parts may possibly deteriorate or be damaged if the Power Supply is used for applications with frequent inrush current or overloading at the load end. Do not use the Power Supply for such applications.

#### **Overvoltage Protection**


Consider the possibility of an overvoltage and design the system so that the load will not be subjected to an excessive voltage even if the feedback circuit in the power supply fails. When an excessive voltage that is approximately 130% of the rated voltage or more is output, the output voltage is shut OFF, preventing damage to the load due to overvoltage. Reset the input power by turning it OFF for at least seven minutes and then turning it back ON again.

#### (Reference value)

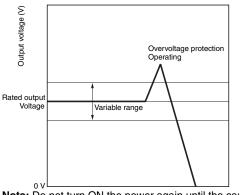

Note: Do not turn ON the power again until the cause of the overvoltage has been removed.


### Inrush Current, Startup Time, Output Hold Time

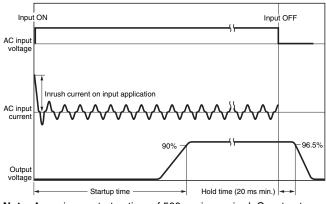

**Note:** A maximum startup time of 500 ms is required. Construct a system configuration that considers the startup time of other devices.

### **Dimensions**

### **Front-mounting Models**

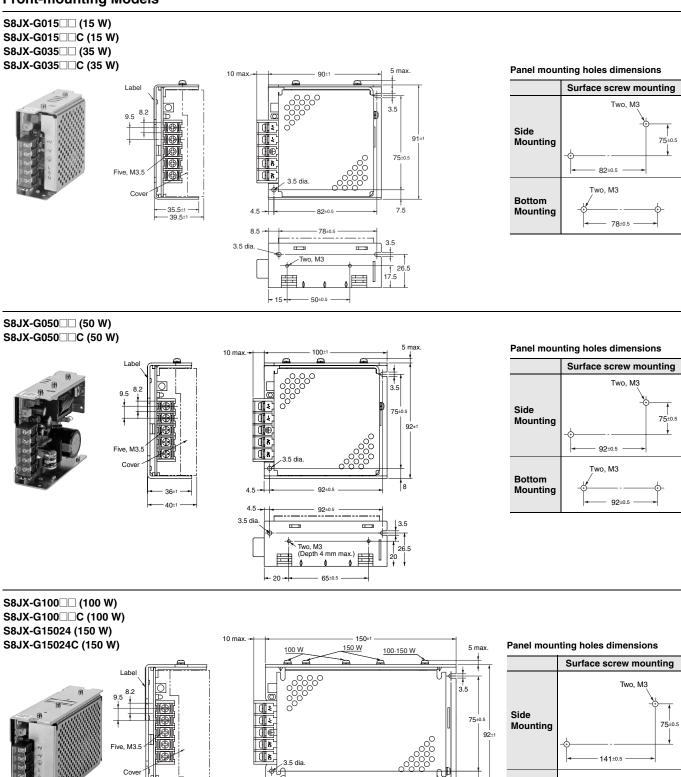

141±0.5

141±0.5

-

0

122±0.5

5

5

+16+

3.5 dia

Two, M3 (Depth 4 mm max.)

48±'

50±1

### Two, M3 Bottom Mounting

141±0.5

8


3.5

28

10

### Mounting Bracket Provided with Front-mounting Power Supplies


### 15 to 150 W (Provided) **Front-mounting Bracket**

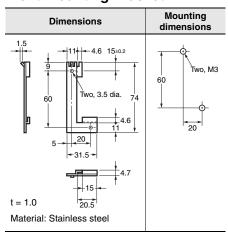

### **Front-mounting Method**

Temporarily attach the enclosed mounting bracket as shown in the illustration on the right, hook the holes (parts a) in the Power Supply on hooks on the mounting bracket (parts b), and secure the Power Supply with two mounting screws.

Note: Mounting screws are not provided.

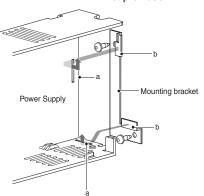

### Mounting Brackets (Order Separately) **Brackets for Replacement from S82J Series**


The following Mounting Brackets A to E use the same mounting hole pitch as the OMRON S82J. These Mounting Brackets can be used when the S82J is replaced.

Models compatible with S82J Series	Mounting direction	Name	Model
50-W models		Mounting Bracket A (bottom mounting for 50-W models)	S82Y-JX05B
100-W 24-V models	Bottom-mounting	Mounting Bracket B (bottom mounting for 100-W 24-V models)	S82Y-JX10B
100-W 5-V and 12-V models		Mounting Bracket C (bottom mounting for 100-W 5-V and 12-V models and 150-W models)	S82Y-JX15B
and 150-V models	Front-mounting	Mounting Bracket D (front mounting for 100-W 5-V and 12-V models and 150-W models)	S82Y-JX15F
25-W models	Bottom-mounting	Mounting Bracket E (bottom mounting for 35-W models)	S82Y-JX03B
Note: Mounting brackets (A, B, C, D, and E) are compatible with the mounting holes of the S82J.			

Using the Mounting Bracket

0


### **Mounting Bracket A** S82Y-JX05B

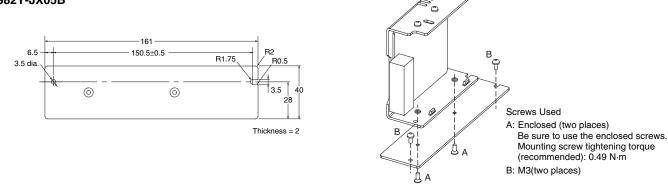


### **Mounting Bracket B** S82Y-JX10B

Using the Mounting Bracket C ත 170 6.5 160±0.5 R2 R0.5 B2 25 4.5 dia ۲ 4.5 50 Screws Used Thickness = 2 A: Enclosed (two places) B A Be sure to use the enclosed screws. Mounting screw tightening torque (recommended): 0.49 N·m ÛA B: M4(two places)


### Mounting Bracket C S82Y-JX15B

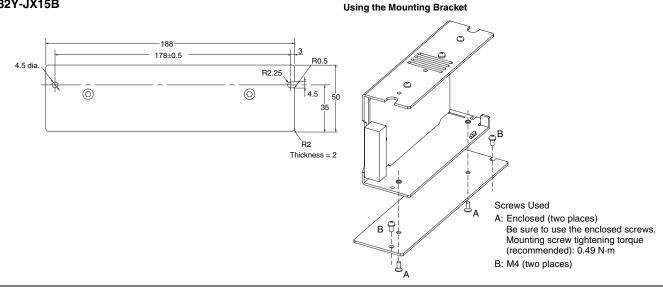


### Mounting Bracket D S82Y-JX15F

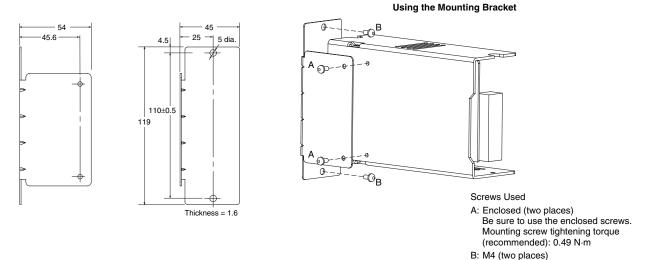

### Mounting Bracket E S82Y-JX03B

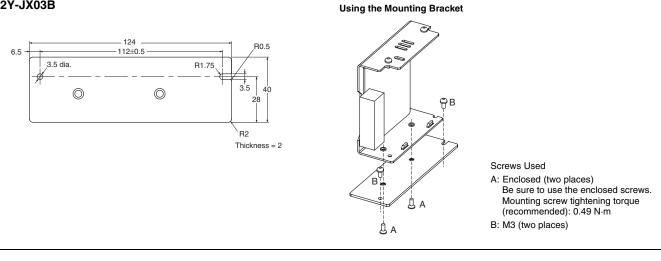

### **DIN Rail-mounting Models**

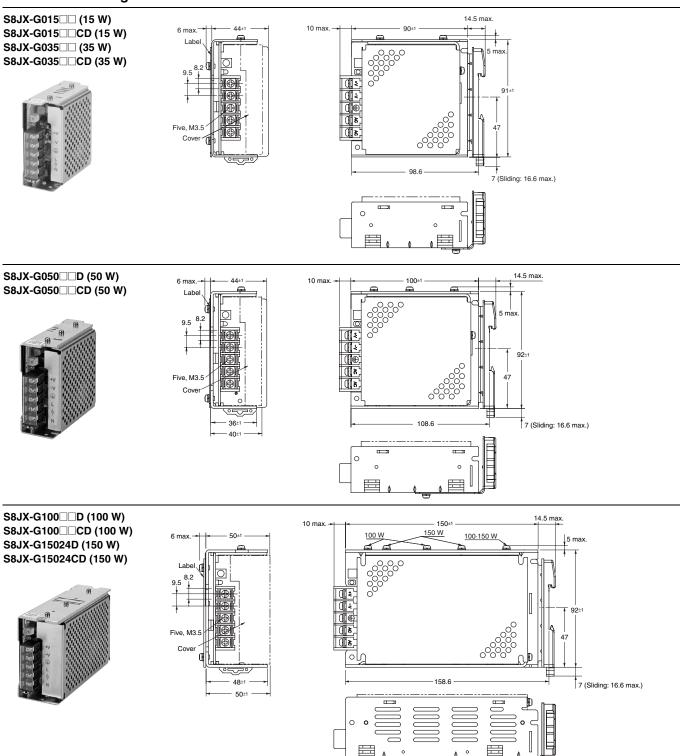


P

### S8JX

### **DIN Rail (Order Separately)**

### Mounting Rail

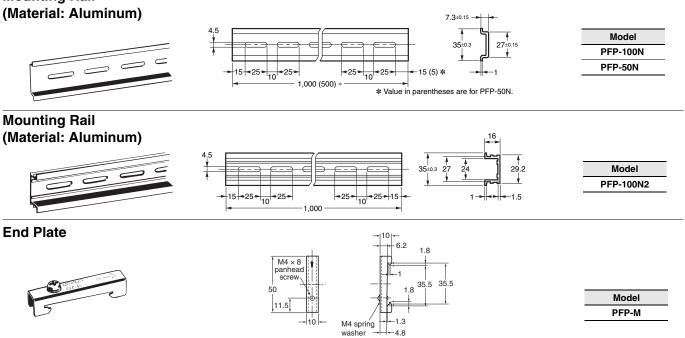

Note: 1. If there is a possibility that the Unit will be subject to vibration or shock, use a steel DIN Rail. Otherwise, metallic filings may result from aluminum abrasion.

2. If the Unit may be subjected to sliding to either side, attach an End Plate (model PFP-M) on each side of the Unit.

### **Safety Precautions**

### Refer to Safety Precautions for All Power Supplies.

### 

Minor electric shock, fire, or Product failure may occasionally occur. Do not disassemble, modify, or repair the Product to touch the interior of the Product.



Minor burns may occasionally occur. Do not touch the Product while power is being supplied or immediately after power is turned OFF.



Fire may occasionally occur. Tighten terminal screws to the specified torque of 1.13 N·m.



Minor injury due to electric shock may occasionally occur. Do not touch the terminals while power is being supplied. Always close the terminal cover after wiring.

Minor electric shock, fire, or Product failure may occasionally occur. Do not allow any pieces of metal or conductors or any clippings or cuttings resulting from installation work to enter the Product.




### Precautions for Safe Use


#### Mounting

- Take adequate measures to ensure proper heat dissipation to increase the long-term reliability of the Product.
- Be sure to allow convection in the atmosphere around devices when mounting. Do not use in locations where the ambient temperature exceeds the range of the derating curve.
- When cutting out holes for mounting, make sure that cuttings do not enter the interior of the Products.
- Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
- The internal parts may occasionally deteriorate and be broken due to adverse heat radiation. Do not loosen the screw on the side face of the main body.
- When mounting two or more Power Supplies side-by-side, allow at least 20 mm spacing between them.
- Use the metal plate as the mounting panel.

Standard Mounting (Front-mounting and DIN Rail-mounting)



Standard Mounting (Horizontal Mounting)

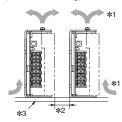

Standard Mounting

(Bottom-mounting)

### Wiring

- Connect the ground completely. A protective earthing terminal stipulated in safety standards is used. Electric shock or malfunction may occur if the ground is not connected completely.
- Minor fire may possibly occur. Ensure that input and output terminals are wired correctly.
- Do not apply more than 75 N force to the terminal block when tightening it.
- Be sure to remove the sheet covering the Product for machining before power-ON so that it does not interfere with heat dissipation.
- Use the following material for the wires to be connected to the S8JX to prevent smoking or ignition caused by abnormal loads.

#### **Recommended Wire Type**

15 W, 35 W	AWG12 to AWG20 (a cross section of 0.517 to 3.309 mm <sup>2</sup> ) UL-certified temperature of a t least 75°C
	AWG12 to AWG16 (a cross section of 1.309 to 3.309 mm <sup>2</sup> ) UL-certified temperature of a t least $60^{\circ}$ C or $60/75^{\circ}$ C

### Installation Environment

- Do not use the Power Supply in locations subject to shocks or vibrations. In particular, install the Power Supply as far away as possible from contactors or other devices that are a vibration source.
- Install the Power Supply well away from any sources of strong, high-frequency noise and surge.

### **Ambient Operating and Storage Environments**

- Store the Power Supply at a temperature of -25 to 65°C and a humidity of 25% to 90%.
- The Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply outside the derating range (i.e., the area shown by shading ① in the derating curve diagram on page 8.)
- Use the Power Supply at a humidity of 25% to 85%.
- Do not use the Power Supply in locations subject to direct sunlight.
- Do not use locations where liquids, foreign matter, or corrosive gases may enter the interior of the Product.

### **Overload Protection**

- Internal parts may possibly deteriorate or be damaged if a shortcircuited or overload state continues during operation.
- Internal parts may possibly deteriorate or be damaged if the Power Supply is used for applications with frequent inrush current or overloading at the load end. Do not use the Power Supply for such applications.

### **Charging a Battery**

When connecting a battery at the load, connect an overcurrent limiting circuit and overvoltage protection circuit.


### Output Voltage Adjuster (V.ADJ)

- The output voltage adjuster (V.ADJ) may possibly be damaged if it is turned with unnecessary force. Do not turn the adjuster with excessive force.
- After completing output voltage adjustment, be sure that the output capacity or output current does not exceed the rated output capacity or rated output current.

### **DIN Rail-mounting**

To mount the Power Supply to a DIN Rail, pull down the rail stopper until you hear it clicks open, hook portion (A) of the Power Supply onto the DIN Rail, press the Power Supply in direction (B), and then push up the rail stopper to lock the Power Supply in place.

To dismount the Power Supply, pull down portion (C) with a flat-blade screwdriver and pull out the Power Supply.

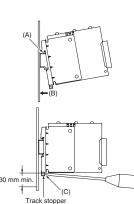

0

#### In Case There Is No Output Voltage

The possible cause for no output voltage may be that the overcurrent or overvoltage protection has operated. The internal protection may operate if a large amount of surge voltage such as a lightening surge occurs while turning ON the Power Supply.

In case there is no output voltage, please check the following points before contacting us:


- Checking overcurrent protected status:
- Check whether the load is in overcurrent status or is shortcircuited. Remove wires to load when checking.
- Checking overvoltage or internal protection: Turn the power supply OFF once, and leave it OFF for at least 7 minutes. Then turn it ON again to see if this clears the condition.

### **Series Operation**

Two power supplies can be connected in series. The  $(\pm)$  voltage output can be accomplished with two Power Supplies.

#### Series Operation





Note: 1. If the load is short-circuited, a reverse voltage will be generated inside the Power Supply. If this occurs the Power Supply may possibly deteriorate or be damaged. Always connect a diode as shown in the figure. Select a diode having the following ratings.

Туре	Schottky Barrier diode
Dielectric strength (VRRM)	Twice the rated output voltage or above
Forward current (IF)	Twice the rated output current or above


2. Although Products having different specifications can be connected in series, the current flowing through the load must not exceed the smaller rated output current.

### **Parallel Operation**

The Product is not designed for parallel operation.

#### Parallel Operation

OMRON



ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527

МЕМО

МЕМО

### **Read and Understand this Catalog**

Please read and understand this catalog before purchasing the product. Please consult your OMRON representative if you have any questions or comments.

### Warranty and Limitations of Liability

### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS, OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

### **Application Considerations**

### SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used.

Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

### **PROGRAMMABLE PRODUCTS**

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

### Disclaimers

### **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

### DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

### PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

#### **OMRON** Corporation

Industrial Automation Company Control Devices Division H.Q. Industrial Component Division 2-2-1 Nishikusatsu, Kusatsu-shi, Shiga, 525-0035 Japan Tel: (81) 77-565-5160/Fax: (81) 77-565-5569

**Regional Headquarters** OMRON EUROPE B.V. Wegalaan 67-69-2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388 OMRON Industrial Automation Global: www.ia.omron.com

#### **OMRON ELECTRONICS LLC** One Commerce Drive Schaumburg, IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

#### Authorized Distributor:

© OMRON Corporation 2009 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice. CSM\_1\_1\_0509 Cat. No. T041-E1-01 Printed in Japan 0409